



# MULTI-MEDIA PLAYER STAND

U S E R M A N U A L



Important, retain for future reference: read carefully.

## PLEASE READ THIS OWNER'S GUIDE

Please take the time to follow the instructions in this owner's guide carefully. It will help you to properly use your new product and enjoy its features. Please save this owner's guide for future reference.

## WARNING AND PRECAUTIONS

1. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on or near the product. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and / or a fire hazard.
2. The power supply must be used indoors only. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
3. Make no modifications to the product or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
4. Install this unit so that the Adaptor can be unplugged from the wall socket immediately in the event of trouble.
5. Place the Media Center in a location with adequate ventilation to prevent heat build-up in the player.
6. Do not place the Media Center in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
7. Do not place the Media Center outdoors, in vehicles, on ships, or on other vessels.
8. Do not install the Media Center in an inclined position. It is designed to be operated in a horizontal position only.
9. Disconnect the adaptor and all other cables from the Media Center when you move the Media Center.
10. Do not drop or apply shock.
11. To clean the exterior surface of your product, you can wipe it using a soft, dry cloth.
  - 1). Do not use solvents, chemicals, or sprays.
  - 2). Do not allow liquids to spill or objects to drop into any openings.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – for all components before using this product.
2. Keep these instructions – for future reference.
3. Heed all warnings – on the product and in the owner's guide.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments /accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## INFORMATION ABOUT PRODUCTS THAT GENERATE ELECTRICAL NOISE

The Media Center complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. The system must not be collocated or operating in conjunction with any other antennas or transmitters. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## U.S.A. ONLY

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## CANADA

 
- This digital apparatus complies with the Canadian ICES-003 Class B specification.
- The radio communication device incorporated into this apparatus meets all requirements of the Industry Canada standard RSS-210.

# TABLE OF CONTENTS


COMPONENT LIST .....	1
GUIDE TO PARTS AND CONTROLS .....	2 - 3
Top Panel .....	2
Rear Panel .....	2
Front Panel .....	3
CONNECTING WITH POWER .....	4
With AC power adapter .....	4
By USB Cable .....	4
FUNCTION .....	4 - 6
Bluetooth Mode .....	4
Audio Input Mode .....	4
PC mode .....	5
SD mode .....	5
USB / FLASH Mode .....	5
HUB Mode .....	7
TROUBLE SHOOTING .....	7
TECHNICAL INFORMATION .....	7
2 YEAR LIMITED WARRANTY .....	7

## COMPONENT LIST

Media Center, Adaptor, USB Cable 3.5mm \* 1200mm, Audio Cable 3.5mm \* 60mm, User Manual


Accessories	Pictures	Qty
Media Center		1
Adaptor		1
USB Cable 3.5mm * 1200mm		1
Audio Cable 3.5mm * 60mm		1
User Manual		1

## TOP PANEL

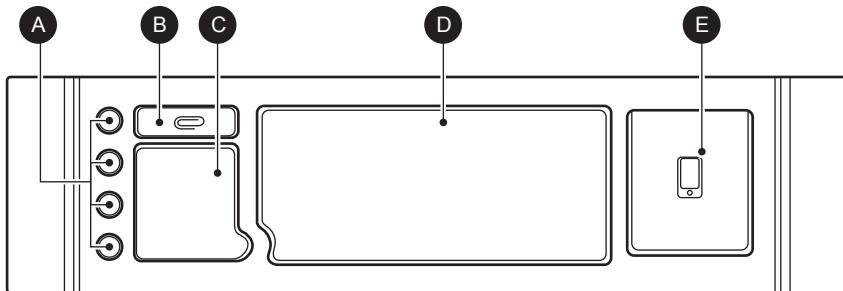


<b>A</b> <b>PEN HOLDER</b> 17mm x 17mm	Can hold 4 pens of diameter up to 16.5mm
<b>B</b> <b>PAPERCLIP - CASE</b> 80mm x 20mm	Can hold up to 50 paper clips
<b>C</b> <b>STORAGE BOX</b> 80mm x 80mm	Can hold up to 200 sheets of 3" post -in note
<b>D</b> <b>PENCIL CASE</b> 246mm x 104 mm	For organizing any large or small objects such an pen, cable, SD cards ... ect
<b>E</b> <b>MOBILE PHONE STAND</b> 85mm x 94mm	Put your mobile phone on the stand for charging and connecting to the Media Center

## REAR PANEL

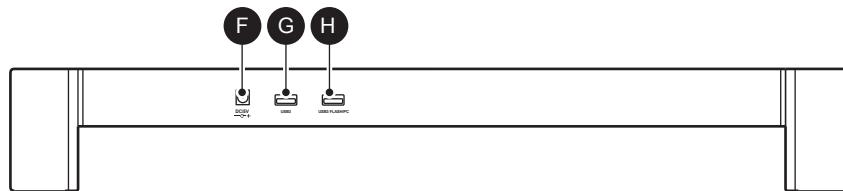

<b>F</b> <b>DC /5V</b>	AC adapter input (DC/5.0V – 2.0A )	<b>G</b> <b>USB 3</b>	Support USB 2.0/1.0 data connecting and charging output: 5.0V/1000mA
<b>H</b> <b>USB/FALSH</b>	Interface for USB flash disk or PC data link		

## FRONT PANEL

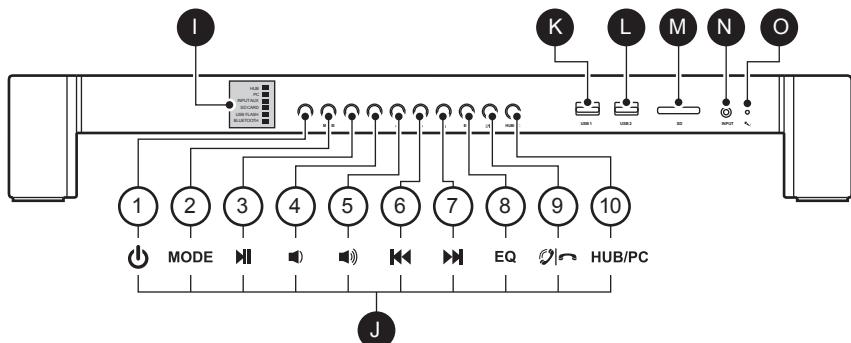

<b>I INDICATOR</b>	For 6 modes	<b>I INDICATOR</b> For 6 modes	HUB PC INPUT AUX SD CARD USB FLASH BLUETOOTH
<b>J BUTTONS</b>	Include 10 keys		
<b>K USB1 PORT</b>	Support USB 2.0/1.0 data connecting and charging output: 5.0V/1000mA		
<b>L USB2 PORT</b>			
<b>M SD SLOT</b>	SD card reader		
<b>N IN PUT PORT</b>	Ø 3.5mm audio input		
<b>O MIC</b>	Built - in micro phone for hand - free speaker		

<b>J</b> BUTTONS include 10 keys	<b>1</b> POWER	<b>6</b> PREVIOUS TRACK
	<b>2</b> MODE	<b>7</b> NEXT TRACK
	<b>3</b> PAUSE / PLAY	<b>8</b> EQUALIZER
	<b>4</b> REDUCE VOLUME	<b>9</b> PICK UP / HANG UP THE PHONE
	<b>5</b> INCREASE VOLUME	<b>10</b> SWITCH BETWEEN HUB AND PC MODE

# OPERATION


Thank you for purchasing the Media Center. Enjoy music wirelessly from your smartphone, tablet, laptop, or other Bluetooth® enabled device anywhere you choose.

*Before using your Media Center, you should connect it with power.*

## A- Connecting with Power


### 1. With AC power adapter: (fig-1)

Connect the power adapter cord to the DC/5V Power Jack. Then, plug the power adapter into the power outlet. Press the power button  and hold for 1 sec to turn on the unit.

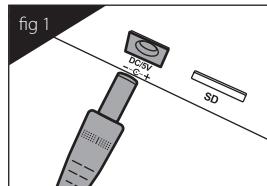

### 2. By USB Cable: (fig-2)

Plug in the USB cable provided into one of the **"USB port 1/2/3"** or the **"USB FLASH/PC"** port, and then plug in the other end of USB cable into your computer's USB port (make sure the computer is ON).

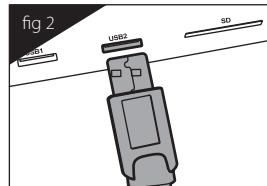


## B- Function

There are 6 operating modes

### 1. Bluetooth Mode



- Step 1. Press the **"MODE"** Button consecutively until the indicator light for **"BLUETOOTH"** is on (fig 3).
- Step 2. Search the device **"SWAVE"** using your mobile phone or PC at the Bluetooth connection screen.
- Step 3. Key in the code **'0000'** if needed. Once the connection is successful, a "Beep" sound will be heard to indicate a successful connection.

- You can now play music from your mobile phone or PC through the Media Center via Bluetooth connection.  
You can also select the music track and adjust the volume by pressing the     on the Media Center.  
You can also pause & play by pressing  . Media Center can only connect to Bluetooth device one at a time.  
To disconnect from the connected device, simply press  button for 3 seconds. After disconnection, you can pair with a new device following Steps 1-3.

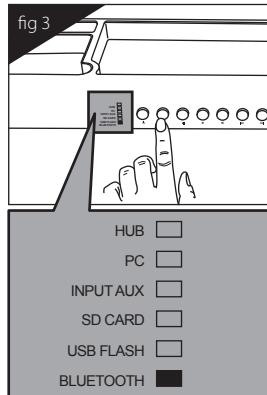

### 2. Audio Input Mode

- With power on, connect the external audio equipment (Mobile phone / MP3 / MP4 etc) into the **"INPUT"** port (fig 4). It will switch to **"INPUT"** mode automatically. If not, press the **"MODE"** button consecutively until the indicator light for **"INPUT"** is on (fig 5).

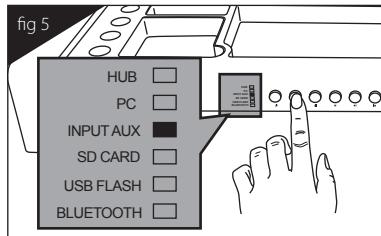
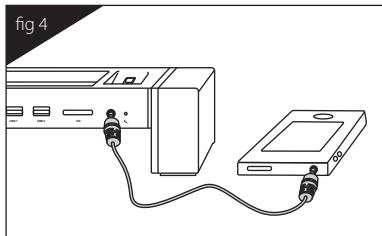


# OPERATION

- You can now play music from your external audio equipment (Mobile phone / MP3 / MP4... etc.) through the Media Center. You can also adjust the volume by pressing the   on the Media Center. You can also mute the Media Center by pressing .

## 3. PC Mode

- Plug in the USB cable provided into “**USB FLASH / PC**” port (fig 6), and then plug in the other end of USB cable into your computer’s USB port (make sure computer is ON) (fig 7). Press the “**MODE**” Button consecutively until the indicator light for PC is on.

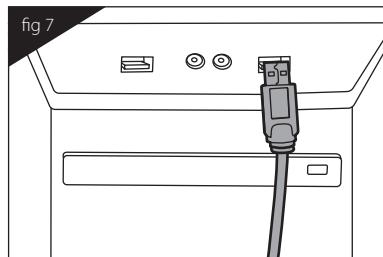
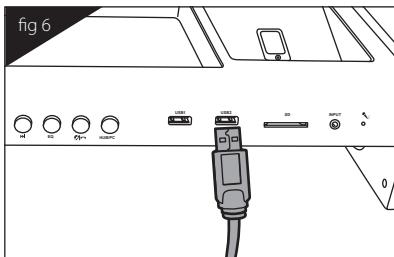


- You can now play music from your PC through the Media Center. You can also adjust the volume by pressing the  .

*NOTE: Some Media player software on your PC may support the track selection   and pause & play  function, but not all are compatible.*

## 4. SD Mode


- With power on, insert SD card into the “**SD**” card port (fig 8). It will switch to “**SD**” card mode automatically. If not, press the “**MODE**” button consecutively until the indicator light for “**SD CARD**” is on (fig 9).

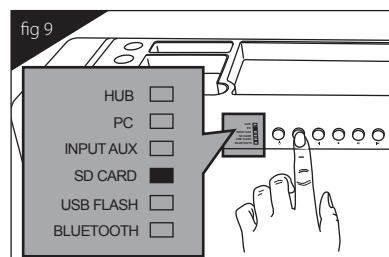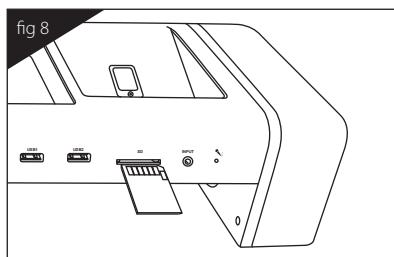

- You can now play music from your SD card through the Media Center. You can also select the music track and adjust the volume by pressing the     on the Media Center. You can also pause & play by pressing .

## 5. USB / FLASH Mode

- With power on, insert USB disk or USB card reader into the “**USB FLASH / PC**” port (fig 10). It will switch to “**USB FLASH**” mode automatically. If not, press the “**MODE**” Button consecutively until the indicator light for “**USB FLASH**” is on.

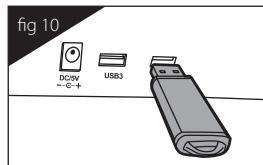


- You can now play music from your USB disk or USB card reader through the Media Center. You can also select the music track and adjust the volume by pressing the     on the Media Center. You can also pause & play by pressing .

# OPERATION

## 6. HUB Mode

- Plug in the USB cable provided into the “**USB FLASH / PC**”(fig 11) , and then plug in the other end of USB cable into your computer’s USB port (make sure computer is ON)(fig 12). Press the button of “**HUB / PC**” consecutively until the indicator light for “**HUB**” is on (fig 13).

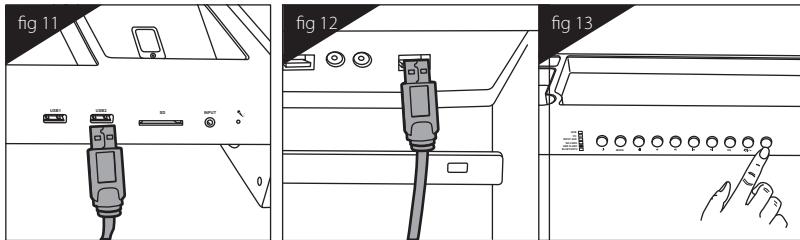

- Now, the ports of “**USB 1/2/3**” will be served as the extention interface in “**HUB**” mode. You can connect it with mouse / key board / U disk etc.

# TROUBLE SHOOTING

## 1.The Media Center indicates a connection, but is not playing music.

Media Center can only connect to Bluetooth device one at a time. Please check if you have connected the Media Center with the other device. If yes, please press **M** button for 3 seconds to disconnect. After disconnection, you can pair with a new device following the steps in Bluetooth mode.

## 2.The PC with the function of Bluetooth cannot connect with the Media Center.

- 1). Please check the Bluetooth in your PC and make sure you chose the USB Bluetooth.
- 2). Please make sure you chose the “Bluetooth Audio Device”as the default device the audio properties setting.
- 3). Activate your Bluetooth device and search “SWAVE”to connect.

## 3. Sound is breaking up when music is played at bluetooth mode.

The rang will be reduced if there are walls or metal barriers between the Media center and Bluetooth-enabled services. As usual, the transmission distance is 10m. Once the distance is beyond 10m, the bluetooth signal will become astable and will cause the sound to break-up .

## 4. No audio from Media Center.

- 1). Make sure your Media Center is not muted, and the volume is up.
- 2). Make sure your Bluetooth device or PC or other input device is playing audio, and the volume is up.
- 3). Under PC mode, please check the audio output settings and make sure you chose the USB speaker.
- 4). Under Bluetooth mode, Your Bluetooth device may be out of range – try moving it closer to the Media Center.
- 5). Turn the Media Center off and back on.

## 5. The Media Center will not turn on (AC Power).

Make sure your system is connected to a working AC (mains) outlet.

## TROUBLE SHOOTING

### 6. Cannot pair the Media Center with my Bluetooth device.

- 1). Make sure your Media center is discoverable. Press and hold the Bluetooth button(three seconds) until the Bluetooth indicator in blue.
- 2). Make sure the Bluetooth capability of your Bluetooth device is turned on.
- 3). Your Bluetooth device may be out of range – try moving it closer to the Media Center.
- 4). Make sure your Bluetooth device supports the transfer of audio.
- 5). Make sure the Bluetooth capability of your Bluetooth device is turned on.
- 6). Move your Bluetooth device and/or Media Center away from other devices that generate electromagnetic interference. Examples are cordless phones, microwave ovens, wireless network routers, or other Bluetooth devices.
- 7). If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality.
- 8). Turn the Media Center off and back on.
- 9). Refer to the owner's guide, help system, or technical support for your mobile device to learn how it pairs with other Bluetooth devices.

## TECHNICAL INFORMATION

1. Power supply rating: Input: 100 - 240VAC, 50/60Hz, 600mA; Output: 5V/2.0A
2. Dimensions: 3.27" H x 2.31" W x 5.75" D / (83mm x 587mm x 146mm)
3. Weight: 1168±20g (Do not include the parts).
4. Temperature range for use: -10°~ 55°C

## 2 YEAR LIMITED WARRANTY

SAFE HOME warrants the enclosed product to be free from defects in material and workmanship under normal use for a period of 2 years from the date of original retail purchase. During this warranty period the product will be replaced (with the same or similar model) at our option without charge. Should the product prove defective, send it along with your return address, and proof of purchase with postage prepaid to:



---

**SAFE-HOME**

45 Miranda CT  
Thornhill, ONT  
L4J 7W5