


VEIU pro S31

Smart Video Doorbell

Smart and Safe

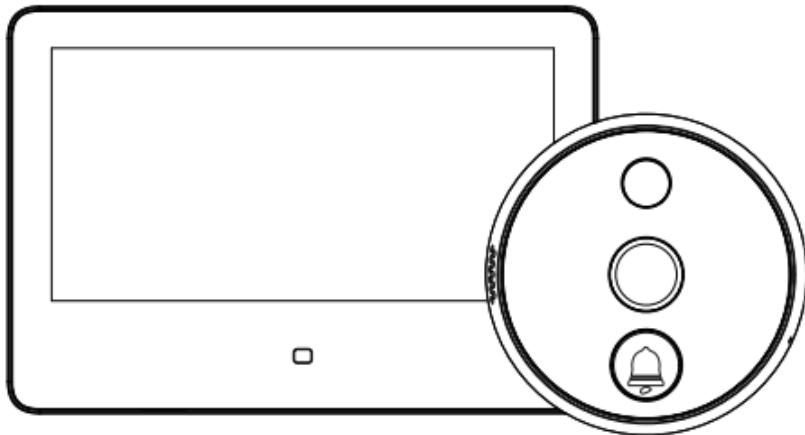


User Manual

 **EQUES**

The logo for EQUES features a stylized orange 'E' shape composed of three curved segments. To the right of the logo, the word 'EQUES' is written in a bold, orange, sans-serif font.

01 | Package Contents

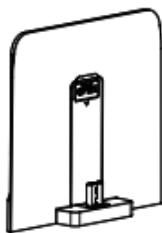


Bracket

1 piece




Outdoor Camera

1 piece

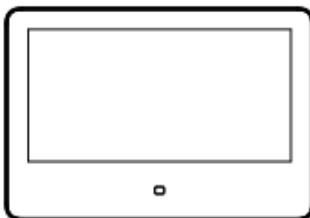

Indoor LCD Screen

 1 piece



USB Cable

1 piece




Bolts

6 pieces



Outdoor Camera	1 piece	Charger	1 piece	Bolts	6 pieces
Indoor LCD Screen	1 piece	Bracket	1 piece	USB Cable	1 piece

02 | Component Diagram


Outdoor Camera

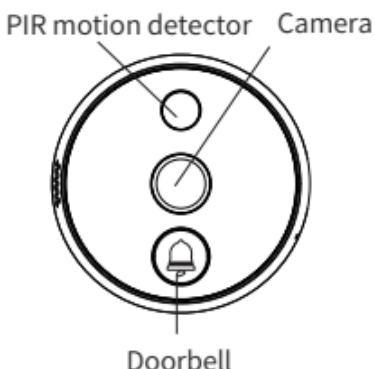

Indoor LCD Screen

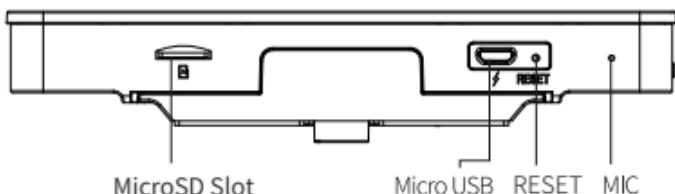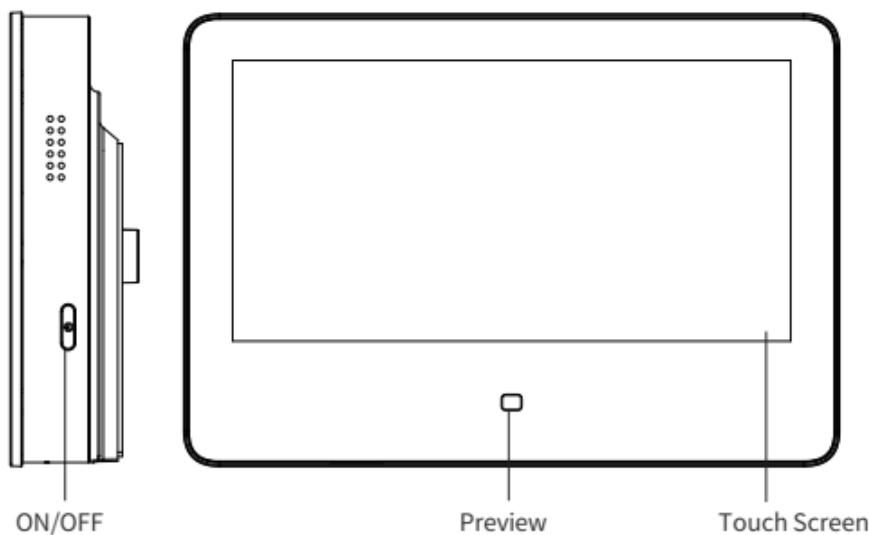

03 | Installation Diagram

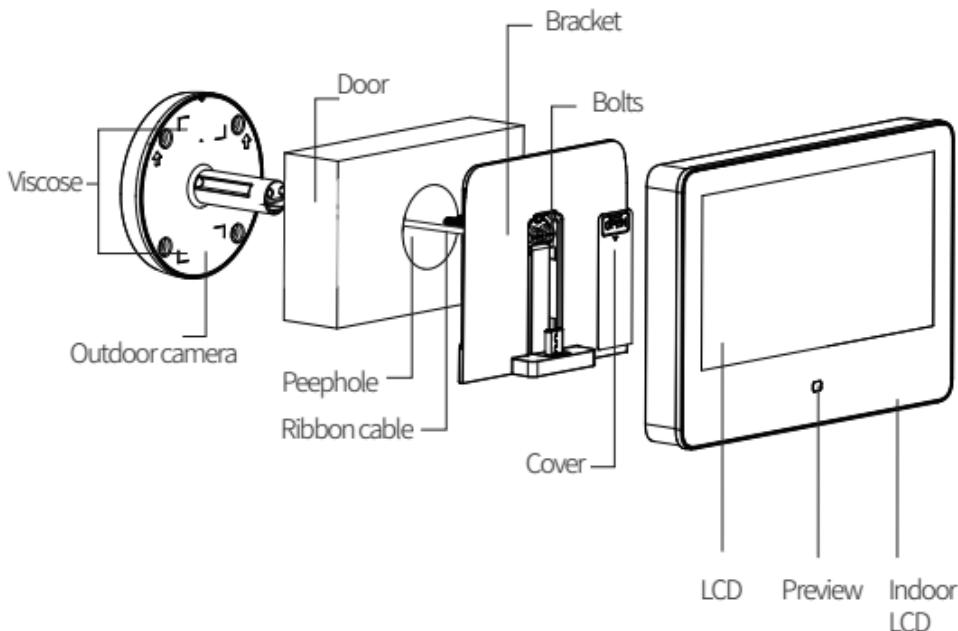

Install Device with 1 screwdriver within 5 minutes

Tips:

1. When fastening the outdoor camera, attach bolts into its poles first.
2. When fastening the LCD screen, align it to the notch of the bracket.


04 | Installation



1. Select a screw suitable for the door thickness and screw it into the cable protection valve.



2. Screw the bolts into the outdoor camera holes, and tear off the viscose protective paper.

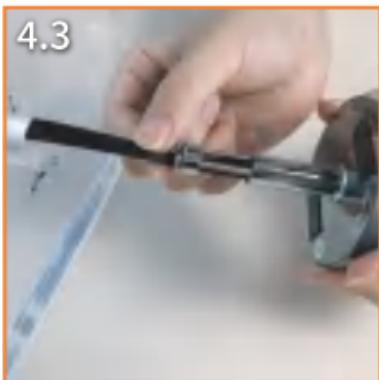

3. Pass the ribbon cable through the door hole.


Tip: It will be easier to wrap the ribbon cable in a paper tube first then pass through.



4. Fasten the outdoor camera by pressing it firmly onto the door.



5. Take out the indoor LCD screen and remove the bracket on the back. Push out the cable guard cover in the middle of the bracket with your fingers.

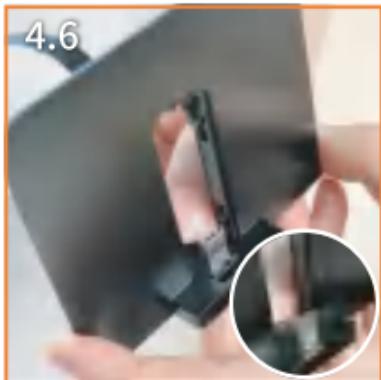

6. Push the Type-C connector of the ribbon cable into the groove at the bottom of the bracket.



7. As shown, pass the cable through the cable and the protection valve. **Tips: Don't twist the cable.**



8. Push the cable protection valve into the connection between the bracket and the door.



9.Screw the bolts into the outdoor camera and fix the bracket.



10.Straighten the cable and fasten the cover. Note: Fold the ribbon cable according to the trend of the cable, and don't twist it.



11.Plug the host into the type C connector at the bottom of the bracket from top to bottom.



12.After the host is installed, press and hold the ON/OFF key on the right side of the host to turn it on.

05 | Register and Add Your Device

5.1 | Download App

Scan QR code to download the app, or search “Eques” on App store/Google play.



IOS




Android


5.2 | Start App

After installing the app, click  to start it.

5.3 |Register, Login and Add Devices

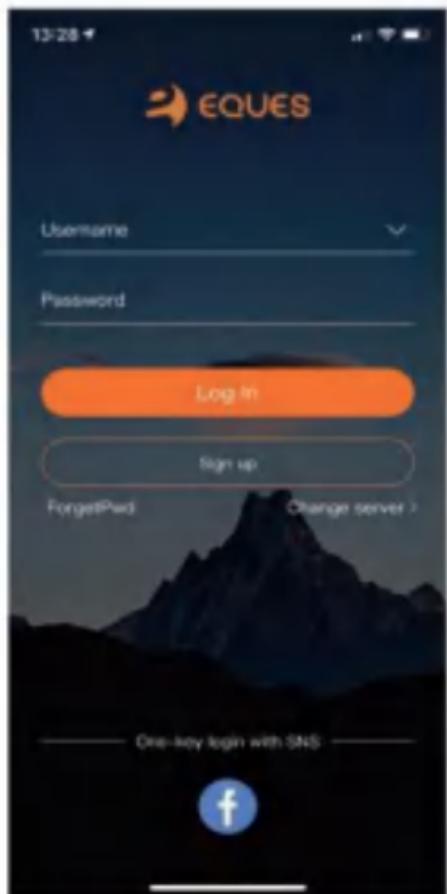

Fill the information as pictured then click "**register**". After completed, use this account to login. Make sure you remember your login info.

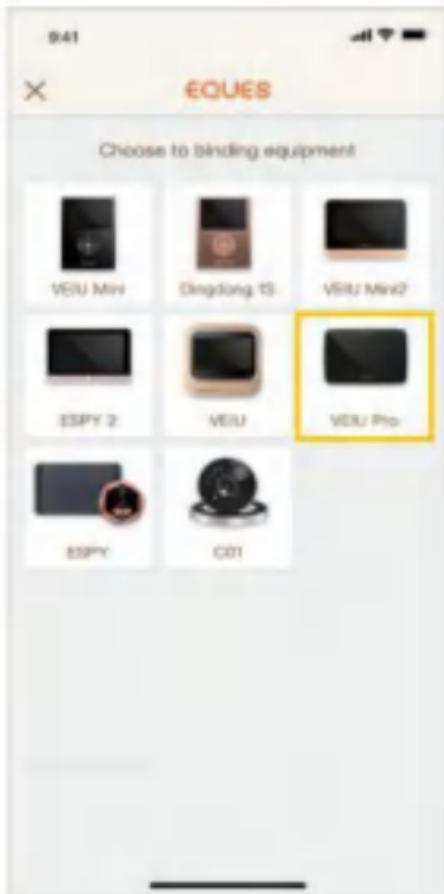

In the "Device Manager" panel, click "+" to add a new device. Choose the device above as pictured.

5.4 |Input WiFi Information, Scan QR Code

13:36

Back Confirm the network

Please confirm which WiFi network 'VEIU_Pro' is going to connect.

WiFi Name:

WiFi Password: Please enter WiFi password.

Save

Input WiFi name and password as per UI prompt then click **"Start Binding"**. (Notes: the UI will prompt to enter the menu of searching QR code.)

13:36

Back Device scanning

1.Select System Settings - Scan QR Code in the LCD Screen.

2.Place the QR code facing the outer camera.

View the operation diagram



Did not hear the beep , click 'Next'

Next


Did not hear beep sound?

Click "Prepare Scan" on the previous step then generate a QR code, use the outdoor camera to scan this code. **If you don't know how to scan, you can click "Have a problem scanning QR Code?" on the previous step.**

5.5 |Bind Device and Preview




- 1.Turn on power key and go to setting
- 2.Click “Setting” choose “Scan QR code”

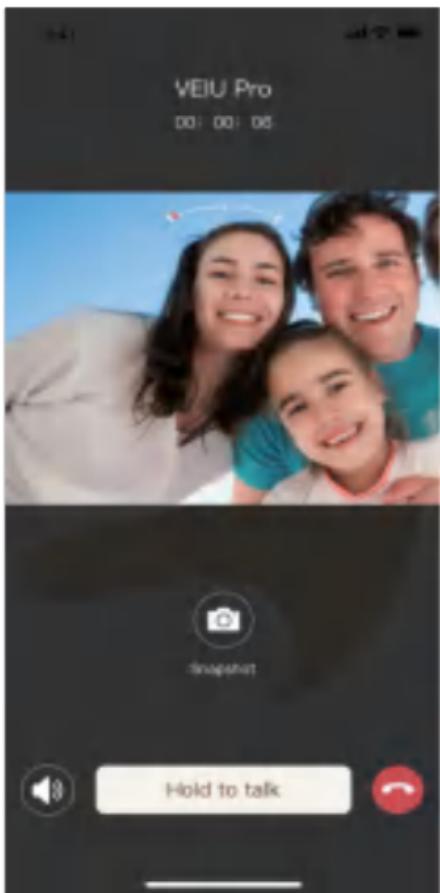

You can hold your smartphone in landscape orientation for a full view.

06 | 06Applicable Door Thickness

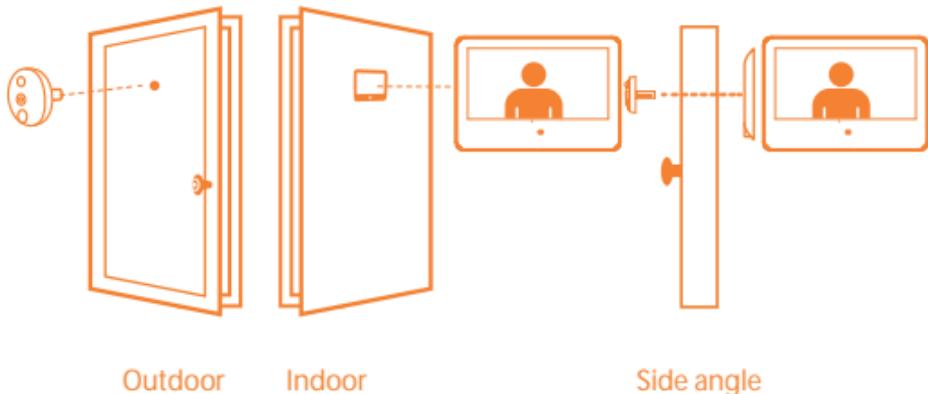

Applicable door thickness: 1.4in - 4.3in (35mm ~ 110 mm)

Applicable peephole: 0.6in - 2.2in (15mm ~ 50mm)

When choosing bolts to install the outdoor camera, you must know your door's thickness.

Notes:

For the door thickness between 1.4in - 2.2in (35mm ~ 55mm), choose 30mm short bolts;

For the door thickness between 2.2in - 3.1in (55mm ~ 80mm), choose 55mm long bolts;

For the door thickness above 3.1in (80mm), choose 80mm long bolts.

07 | Safety Guideline



- Try to avoid placing the device in high-temperature, high humidity, dusty or other harsh environments as this may reduce its lifespan.
- Don't forcibly squeeze the camera lens and the black ball on the top of the outdoor subcomponent; otherwise it can cause hardware damage.
- Treat the ribbon cable with care during installation, don't forcibly drag, scrape or cut the ribbon cable. (The device will be out of warranty if it is damaged by inappropriate installation.)

CONTACT PAGE

CUSTOMER SERVICE EMAIL:

cs@equeshome.com

ADDRESS:

3000 El Camino Real, Building 4,
Suite 200, Palo Alto, CA 94306, USA

WEBSITE:

www.equeshome.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.