


USER MANUAL
Model:DMX-ST7A
FCC ID:2AA59DREAMAX01
Appearance

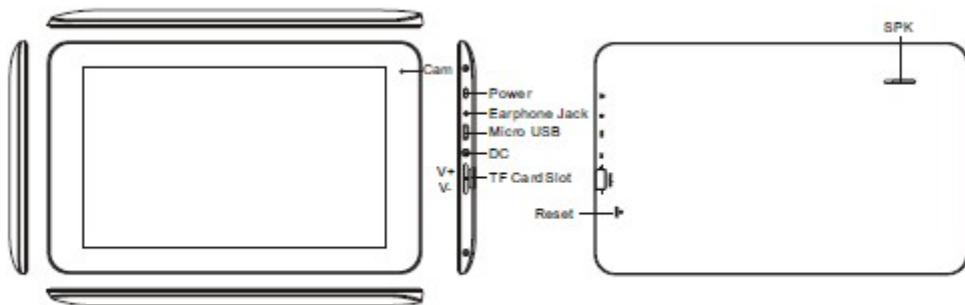

Android Tablet PC

7 inch tablet PC,

Capacitive screen

OS: Android 4.2.2

Resolution 1024 X 600pixel

Storage 8GB Nand flash + 1G DDR

Digital camera 0,3 mega pixels

WIFI 802,11b/g/n

Accessories included

Power : DC 5V 2A

Adaptor technical data : input AC 100-240V 50-60Hz 0.3A output DC 5V 2A

SAFETY PRECAUTIONS

Read these safety instructions before using your device and store them for possible future reference. Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury

BATTERY, CHARGER, AND OTHER ACCESSORIES

If the charger cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.

The charger is not intended for use by persons (including children) with reduced physical, sensory or mental capacity.

Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.

Children should be monitored to ensure that they do not play with the charger.
The charger should always be readily accessible.
The device should not be exposed to dripping or splashing water.
No objects filled with liquids such as vases shall be placed on the device.
Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
Naked flame sources, such as candles, should not be placed on top of the device.
The device is intended for use only in a temperate climate.
CAUTION: Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
The battery should not be exposed to excessive heat such as sunshine, fire or similar.
Different types of batteries, new and used batteries should not be mixed.
The battery must be installed according to the polarity.
If the battery is worn, it must be removed from the product.
The battery must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.
At full volume, prolonged listening to the portable audio device may damage the user's hearing and cause hearing troubles (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis). So we recommend not to listen the portable audio device at high audio volume and no more than one hour per day at medium audio volume

SWITCH OFF IN RESTRICTED AREAS

Switch the phone off where the use of mobile telephones is not allowed or where there is a risk of causing interference or danger, for example on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

ROAD SAFETY COMES FIRST

Check the current laws and regulations regarding the use of mobile phones in the areas where you drive.
Do not handle the telephone when driving.
Concentrate fully on the driving
Use a hands-free kit whenever possible
Leave the road and park up before making or receiving a call, if the driving conditions allow.
Radio signals could affect some of the car's electronic systems such as the audio stereo and alarm systems.
If the car is equipped with an airbag, do not hinder its deployment with fixed or wireless equipment. This could result in serious injury due to inadequate performance.

INTERFERENCE

All wireless devices are susceptible to interference which may affect their performance.

AUTHORISED PERSONNEL

Only qualified people are authorized to install or repair this product

ACCESSORIES

Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products.

KEEP THE EQUIPMENT DRY

This equipment is not water proof. Keep it dry

CHILDREN

Keep your phone in a safe place, out of the reach of young children. The telephone contains small parts that may present a choking hazard

Main Functions

With WIFI for mobile internet browsing

OS: Android 4.2

Support G-sensor

Support 3D games and function customization

Supports multiple audio formats

Play up to 1080P video

Built-in microphone, super long time recording

Free set of energy-saving settings, display brightness, the interface background

Support E-book reading, dependent bookmarks, automatically browsing, horizontal and vertical screen switching function

USB2.0 high speed transmission interface

Support TF card and OTG function, scalable storage space

Basic Operations

1. Turn on

A long press on the power bottom turns on the device

2. Turn off

In the normal state, long press the power button to shutdown, select "OK" when popup whether to shut down the inquiry box.

3. Power Reset

Crash maybe occurred in the process of using due to Smart operating system .Tap the RESET button to force shutdown and then

reboot if occurred.

4. Screen Saver

Press the power button, turn off the screen into the screen saver state, if you want to activate screen, press the power button

again to enter the screen lock state, then slide the lock button to unlock.

5. Back to the desktop

Tap the screen bottom lower left of the Home icon "■" can return to the desktop under any interface

6. Back to the previous interface

Tap the Back icon "■" lower left of the screen bottom can return to the previous desktop under any interface

Tap the "■" controls upper-right of the screen access to the application bar, tap the "Settings" icon into the set menu list interface

8. Charging

Plug the DC connector of adapter into the DC-in of device. Plug the adapter into AC power socket while charging, the device

may heat up. This is normal and should not affect your device's lifespan or performance when the battery is fully charged

(the charging icon is no longer moving), unplug the adapter, driver from the device and then from the power socket.

[Warning]

*. Make sure the machine on a single charge once a month, then shut down before storing it without long use after fully charged.

*. Pls do not use the device while it is charging.

Tips: using authorized accessories can enjoy adequate security to guarantee the maintenance services.

Before using the device for the first time, you should charge the battery. The power adapter (charger) is a key component of the device and plays a vital role in protecting it work properly and your safety. Unauthorized chargers can cause batteries to explode or damage your device. Any damage caused by misuse is not covered by warranty.

Regular Settings

1. Select "settings" after access into application bar to set list interface.

2. WIRELESS&NETWORKS

Wi-Fi function on or off

Wi-Fi settings set up and manage a network connection.

3. Sound

Volumes: adjust the volume level for call ringtones, music and videos, alarm ringtones, device system, and notifications.

Default Notification: Select the application which you want default notice.

Touch sounds: Set the device to sound when you unlock the touch screen.

Screen lock sounds: Set the device to sound when you lock the touch screen.

4. Display

Brightness: Set the brightness of the display.

Wallpaper: Select wallpaper for the home screen

Auto-rotate screen: viewing in portrait or landscape, adjusting automatically to fit the new orientation

Sleep: set sleeping time

Font size: set the size of the font

Accelerometer coordinate system: set the accelerometer coordinate system

Screen adaptation: used to adjust part of games' screen size.

5. Storage

Displays the memory card and USB storage settings of available storage space

6. Battery

Displays the battery level or charging status

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

7. Apps

View "DOWNLOADED", "ON SD CARD", "RUNNING" and "ALL" applications list, etc.

8. Accounts & sync

Change the settings for the auto sync feature or manage accounts for synchronization.

9. Location Services

Set to use the "Google's location service" and "Location & Google search" to gather and use date based on your location

10. Security

Screen lock: set screen lock and owner info

Encrypt tablet

Passwords: make passwords visible

Device administrators: view or deactivate device administrators

Unknown sources: allow installation of non-Market apps

Trusted credentials: display trusted CA certificates

Install from SD card: Install certificates from SD card

Clear credentials: remove all certificates

11. Language & input

Language Select a display language for all menus and applications.

Personal dictionary Add a word by touching the Add (+) button

KEYBOARD&INPUT METHODS: set keyboard and input methods

SPEECH: Set the voice search and text-to-Speech (TTS) output

MOUSE/TRACKPAD: set pointer speed

12. Back up and reset

Back up my data and reset factory data

13. Date & time

Set date and time

14. Accessibility

TalkBack: Set turn on /off TalkBack

Magnification gestures

Large text: display large text

Auto-rotate screen

Touch & hold delay: set the time of touch and hold delay

15. Developers options

USB Debugging: debug mode when USB is connected

Stay awake: screen will never sleep while charging

Allow mock locations

Desktop backup password: Set the full desktop backup password.

Strict mode enabled : flash screen when apps operating do long operations on main thread

Pointer location: screen overlay showing current touch data

Show touches: show visual feedback for touches

Show CPU usage: screen overlay showing current CPU usage

Force GPU rendering: Use 2D hardware acceleration in applications

Window animation scale: animation scale 1x

Transition animation scale: animation scale 1x

Don't keep activities: Destroy every activity as soon as the user leaves it

Background process limit: standard limit

Show all ANRs: show App Not Responding dialog for background apps

16. About tablet

Status

Status of the battery, network, and other information

Legal information

Model number: DMX-ST7A


Android version:4.2.2

Connect computer

The device could connect to PC via USB wire for data copy and delete.

1. Connected the device to PC port via USB wire, then there will be showed "USB connected" on PC screen

2.Tap"USB connected" option, select "open USB storage setting", then you can see movable hardware icon which can be operated like using USB.

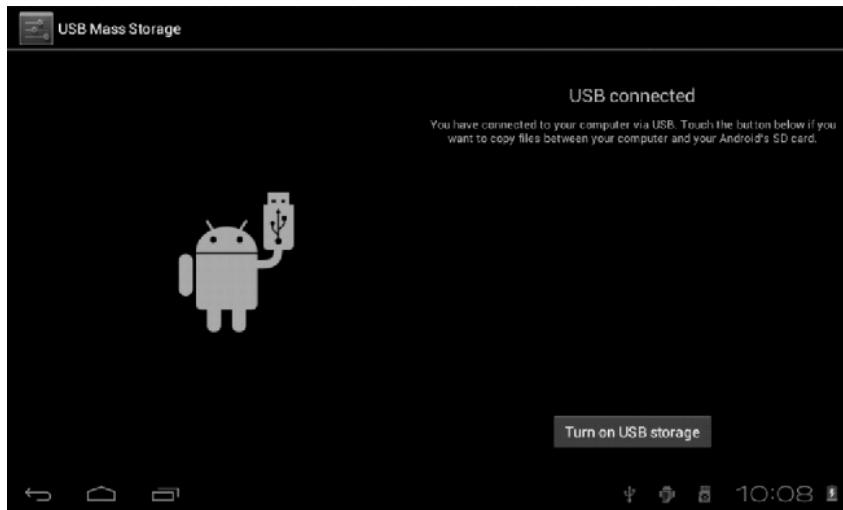

To avoid possible hearing damage, do not listen at high audio volume for long periods of time.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.