



iTrainer<sup>TM</sup> Mini

Thank you for choosing  
**iTrainerMini™**

QUICK  
START  
GUIDE



### What's in the Box

The iTrainerMini™ package includes the following items.



iTrainerMini™ Device



Quick Start Guide



iTrainerMini™ USB Data / Charge Cable

### Compliance

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

### Your iTrainerMini™ Device



- ① Power Switch
- ② Status Indicator
- ③ MicroUSB Connector
- ④ Indicators
- ⑤ MicroSD Card

### Charging the iTrainerMini™

We recommend charging your device before first-time use. Connect the device to a USB power source with the supplied cable. The status indicator will glow red until charging completes.

### iTrainerMini™ Power On/Off

 Press the power button until the status indicator is green. Press and hold the button until the indicator blinks red to switch off. If the iTrainerMini™ is switched on while plugged into a USB power source, it enters **maintenance mode**. Press and hold the power button for 5 seconds to power off.

#### Attaching iTrainerMini™ to a Club

Slide the iTrainerMini™ off the clamp and then open the velcro strap. Hold the club so that the face is vertical and then snap the clamp onto the side of the shaft just under the grip. **Never twist the clamp on the shaft or you will damage the polymer grips.**



When removing the device, open the strap and then pull the clamp away from the shaft starting from the grip end.



### Working with an Apple Device

Turn on your iTrainerMini™ device and then on your Apple device, open the Bluetooth settings.

The iTrainerMini™ should appear in the list once discovered. Tap on the device to establish a connection. If you are using multiple iTrainerMini™ devices, match the last 3 digits of the serial number on the bottom of the device to an entry in the list. Once the status shows "Connected", the iTrainerGolf App should launch automatically.



### Capture Swing 1 – iPhone / iPad

The main menu screen should appear after a few seconds and the Bluetooth status should indicate connected.



Select **Expert Mode** and then swipe the screen left to select a club and then tap on the club image.



### Capture Swing 2 – iPhone / iPad

Set up behind the ball with the face aiming at the target line and then raise the club to a horizontal position and hold steady.



Address the ball and hold the club steady until the two indicators stop flashing, then make your swing.



### Capture Swing 3 – iPhone / iPad

When the device registers you are at address and ready to swing, you will see a prompt on the screen and hear an audio beep.

Once the swing completes, it will be uploaded and the dashboard will appear. Swipe left to see more. Tap on the 3D button to see the 3D image. To capture another swing, go to the dashboard and tap **Swing Again**.


To capture continuously, tap **MENU** and select **AUTO**.



### Working with an Android Device

The first time you use the iTrainerMini™ with your Android device, you need to "pair" the device.

Turn on your iTrainerMini™ device and then on your Android device, open the Bluetooth settings. Tap on **Scan for Devices** to find the iTrainerMini™. Tap on the **iTrainer** entry in the list. The iTrainerMini™ will automatically pair with the Android device and you should not need to repeat this step unless you delete the pairing or replace devices.

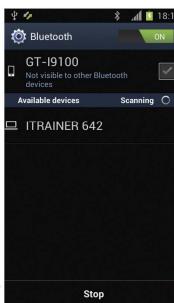

Now start the **iTrainerGolf App**.



### Capture Swing 2 – Android

Tap on the iTRAINER name field and select the device from the list of paired devices.



Back at the setup screen, tap on the Club name field and select a club from the list.



### Capture Swing 3 – Android

Back at the setup screen, tap on the **No Session** button to capture an ad-hoc swing.



Once the connection is established, address the ball with the face square to the target line, then raise the club horizontally and hold steady.



#### Capture Swing 4 – Android

Perform your pre-shot routine, then address the ball and hold the club steady until the two indicators stop flashing; then make your swing.



The swing will be uploaded once complete and the dashboard will be shown. Swipe left to see more.



#### Additional Information

Additional information can be found on our website:  
[www.itrainergolf.com](http://www.itrainergolf.com)

User manuals are included in the device as PDF files under the SETUP folder or can be downloaded from the Updates section of the website.

Please keep your iTrainergolf™ firmware up to date, periodically check our website for updates to the iTrainergolf™ firmware and application software.

\* "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic device has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

\* iPad, iPhone, iPod, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



[www.insight-sports.com](http://www.insight-sports.com)

---

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.