

INSTRUCTION SHEET - WIRELESS SHOWER SPEAKER

- Music and hands-free phone options.
- Bluetooth camera remote control function.
- Easy to carry.
- Water resistant function (IPX4).
- Built-in rechargeable battery, supports up to 6 hours music playing time at 50% of the max volume range.

Specifications:

- Speaker Output: 3W
- Remote control scope: 32 feet (10 meters)
- Built-in rechargeable lithium battery 3.7V / 800mAh
- Bluetooth version: 3.0
- Bluetooth protocol: Support A2DP and AVRCP profile.
- Recharging voltage: DC 5V
- Battery type: 553048 Polymer Lithium Ion Battery, recycle only.

This set includes:

- 1 - Wireless Shower Speaker
- 1 - USB Charging Wire

To Use:

※ Speaker

- Press the On/Off button to turn on the Wireless Shower Speaker. Blue indicator light will show the unit is on.
- Open your device's bluetooth and your device will source the speaker.
- Find the speaker "Bt-Speaker" and pair it. (If your device requires you to enter a pin code to pair, then the pin code is "0000".)
- Once your device connects to the speaker, then the indicator remains on.
- Turn on your device to play music through the speaker.
- You are able to pick up or hang up a phone call by speaker when it is connected to your mobile phone.
- Always turn off the speaker after using it.

※ Use Camera Control


- Connect the speaker to your mobile phone.
- Press and hold the "bk" button and you will hear the speaker switch to camera mode.
- Turn on your camera function app in your mobile phone and then you are able to take picture by pressing the "bk" button.
- Press and hold the "bk" button again and you will hear the speaker switch back to speaker mode.

To Charge:

Use the supplied charging wire; plug the PC USB end of the cord into PC or such other devices with USB output power; plug the other end of wire into the DC jack of the Wireless Shower Speaker. The indicator will be turned on in red color and be turned off after the power is full charged. Charging time is around 4.5 hours under normal conditions.

Note

- Please read this manual carefully before using the product and keep this manual for future reference.
- Do not store or transport the product with metal objects.
- Do not disassemble or modify the product.
- Do not drop the Wireless Shower Speaker into water.
- Do not use the Wireless Shower Speaker if electrolytic liquid leakage, strange odor, overheating, color change or any other peculiar occurrence is detected.
- Clean with dry cloth only. Avoid cleaning the Wireless Shower Speaker with rough or chemical objects.
- Store the Wireless Shower Speaker in a cool, dry place to avoid short-circuit and damaging the product.
- Only use accessories included in the gift box.
- Dispose the Wireless Shower Speaker properly. Do not dispose it in trash receptacles. Do not attempt to incinerate it.
- PP#5268143 / Manufacturer: Shenzhen Moccer Industrial Co., Ltd. / Lot#06-06-2016
- Do not expose to fire, sunshine or other heat sources, as such exposure may result in burning and or generation of toxic gas.

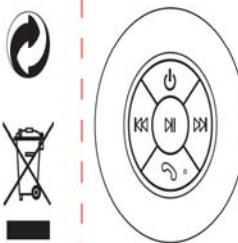

○ : On/Off button

KK : Press once to play the last song; press and hold to turn the volume down

KK : Press once to play the next song; press and hold to turn the volume up

KK : answer or disconnect phone calls

KK : Play/pause music, or switch the device function

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.