FRONT

BACK



BY RESPECTING

Please read these notes carefully before using the ANDROID
SMARTWATCH to ensure the safe and correct use.

BUILDING

INTO THE FUTURE


The pictures used in this manual are functional schematic diagrams and may differ from your SMARTWATCH displays.

This SMARTWATCH may affect medical equipment such as pacemakers, hearing aids or other electronic devices. To avoid potential interference, it is recommended that you always maintain a distance of at least 6 inches between your ANDROID *SMARTWATCH and any electronic medical equipment. Do not use your ANDROID ® SMARTWATCH while driving. Stop the car before making or answering phone calls or use a separate hands-free device.

Keep ANDROID ® SMARTWATCH and charger out of reach of children. Do not allow unsupervised children to use ANDROID *SMARTWATCH Operating conditions: temperature 5 °C - 40 °C, humidity 35% - 85%. Do not wipe the ANDROID [®] SMARTWATCH with alcohol, thinner, solvents or benzene solution. Avoid buildup of dirt that may prevent your ANDROID SMARTWATCH from making contact with the charger. Clean regularly.

IN THE BOX

AD721 GTS WATCH

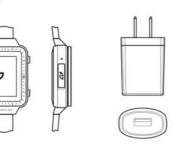



CHARGING INSTRUCTION Plug the USB WIRE into the USB CHARGING PORT.

Plug the other end of the USB WIRE into your computer's USB port or into the ADAPTER. (Plug the ADAPTER into a wall outlet.) ANDROID $^{\$}$ name will appear for a few seconds and then the battery icon will appear for a couple of minutes.


Charging takes about 3 hours to complete. You can check if your watch is still charging by pressing the RETURN BUTTON.

This watch has a touch screen. Use your finger to select items on the screen.

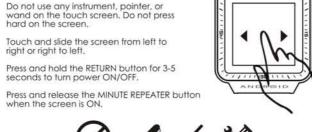

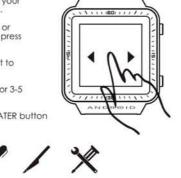

USB WIRE

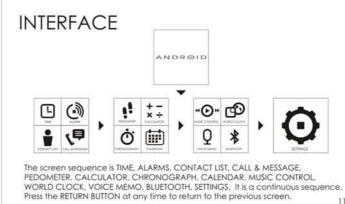

CHARGER PLUGIN

1) When the ANDROID SMARTWATCH is at low power, the screen will appear RED.

2) When the ANDROID SMARTWATCH is charging, the CHARGER PLUGIN (green)

3) When charging is complete, the FULLY CHARGED symbol (green) appears. Unplug the USB wire from the USB port of the ANDROID® SMARTWATCH.

Keep charging adapter or other flammable materials away from the body in order to avoid fire, explosion, or other hazard.

Do not attempt to disassemble, repair or rebuild the SMARTWATCH.

All ANDROID * watches are made with the finest premium-grade materials. We have listed below how to best care for your watches to ensure the materials and workmanship are well maintained.

The ANDROID ® SMARTWATCH is SPLASH resistant. That means it will

withstand moisture on the surface, as with rain or splashes. Immediately wipe away any moisture with a soft cloth. DO NOT immerse your splash

DO NOT wear your splash resistant watch in the shower. DO NOT wear

How to care for your ANDROID *SMARTWATCH:

your splash resistant watch in a steam room or sauna.

Moisture may damage your leather strap.

DO NOT swim while wearing your splash resistant watch.

AD721 Galactopus Touch Screen (GTS) Instructions

RESET HOLE USB CHARGING PORT MICROPHONE

FULLY CHARGED

3

Do not use a non-original battery.

WATCH INFORMATION

resistant watch in water.

CHARGING

(47)

LOW BATTERY

 
TIME SETTING



hard on the screen.


right or right to left.





Step 1: To set the time zone: go to SETTINGS. Touch and slide the screen up/down to the city.



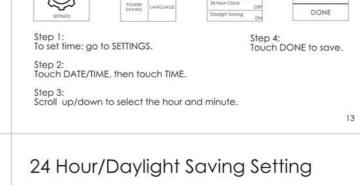

Step 1: To set 24 hour clock/ Daylight saving: go to SETTINGS. Step 2: Touch DATE/TIME. Step 3: Touch 24 HOUR CLOCK/ Daylight Saving, to turn ON or OFF.


View Time

MINUTE

BRIGHTNESS SETTING



Step 2: Slide the bar LEFT to RIGHT to adjust the brightness. Step 3: Touch DONE to save.

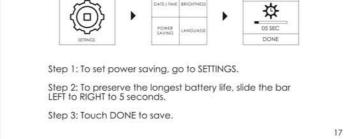

POWER SAVING SETTING

15

JAN 12th 2011 12:33

ANDROID \$000

19

LANGUAGE SETTING






03 | 27 min



Step 2: Touch to select DIGITAL, Minute Repeater or TOURBILLON.

 Step 1: To set alarm: go to ALARMS.







56


GO RESET

RECORD

1 06'14'08

2 06'14'08

3 06'14'08

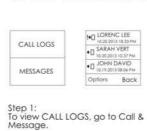

Step 2: Touch CALL LOGS.



08:30

STOP

 


00:00

56

START BACK





Slide the results view left to right to erase/reset the calculation.



Step 1: Touch arrow to change the function $\{+,-,x,\dot{+}\}$ Step 2: Touch = to calculate.












+ YEAR

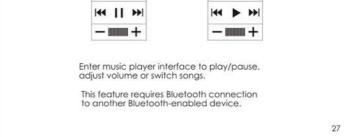

Step 4: Touch lines at top left to view recorded memos.

Step 6: Touch OPTIONS to Play, Append, or Delete memo.

WORLD CLOCK New York 12:33





Touch to select the desired city and view the time in that location. Step 4: Touch DTS to turn ON/OFF Daylight saving.

Step 2: Slide to see the world cities. BLUETOOTH VISIBILITY

app from our website at www.android-usa.com. or download from the Google Play store - "ANDROID SMARTWATCH" Step1: ANDROID SMARTWATCH: Go to BLUETOOTH Step2: ANDROID SMARTWATCH: Touch TO TURN on. Step 3: Phone: Turn on BLUETOOTH. Unpair your phone from any other Bluetooth device. Step 4: Phone: Search for device / available devices.

Use your Android Phone to download the ANDROID SMARTWATCH

LIMITED WARRANTY ANDROID $^{\otimes}$ SMARTWATCH has a one year limited warranty from the date of original purchase. You can register your warranty online at:

ANDROID PHONE ONLY

www.android-usa.com or email to info@android-usa.com. This warranty covers manufacturers' defects, including the movement mechanism. The warranty DOES NOT cover leather straps, crystal lenses, batteries, buttons, crowns, bracelets, cases or plating. The warranty DOES NOT cover normal wear and lear of the watch. The warranty is void if damage is due to negligence and not as a direct result of manufacturers' defects. We reserve the right to void this warranty should we find that the watch has been tampered with, forced open, or repaired by anyone other than our watch repair specialists. 32

SERVICE INSTRUCTION Enclose the watch in its original packaging and with your proof of purchase. Clearly print your name, return shipping address, apt # (No PO Box), phone number, email address and a brief description of what is wrong. Enclose a check or money order for \$15.00 for \$\$H for us to return your watch to you. Send your watch to: OKO International Company PO Box 4021 Deerfield Beach, FL 33442

Any ANDROID *product received excluding shipping/handling fee will not be returned until payment is received. We cannot assume responsibility for any loss or damage under these circumstances. Please allow approximately 30 days for your watch to be returned.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the

FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. 36 This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

interference that may cause undesired operation.

(2) this device must accept any interference received, including



Step 5: Touch to select a memo.



BLUETOOTH



29

 
31

33

35

37

Step 5: Phone: Touch to select your ANDROID SMARTWATCH



1.54"LCD display screen (240x240 pixel resolution)

Specification

Operation voltage: 3.7V - 4.2V

Battery Capacity: 400mAh (Prevail in-kind)

90 Hours Standby Time: Talk Time: 1 hour -2 hours (depending on network) Capability with Android & iPhone* Featured in 6 case colors with quick change strap *Call and messahe capable with Android phone & only call ANDROID *USA Contact Information

Email: info@android-usa.com ANDROID ® enquiry hotline: 954-426-2822 or 888-868-1828. Website: www.android-usa.com

REPAIR OR REPLACEMENT ESTIMATIONS: Watch Battery \$30-\$90

Leather Band Exotic Leather Band Metal Bracelet Case and Crystal

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

\$90-\$150

\$100-\$120

\$80-\$110

- Reorient or relocate the receiving antenna. ☐ Increase the separation between the equipment
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.