



EN

# Table of contents

Information .....	2
Getting started.....	3
Description of the device.....	4
Through the Wizard.....	5
Connecting to a WiFi network.....	6
The Android™ interface.....	8
Getting familiar with Android™ .....	12
Troubleshooting.....	14





# Information

---

Brandname:snakebyte Vyper

Model NO.:V01105

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



## USA responsible party information

company name:Sunflex USA LLC

 
Address:5632 Van Nuys Blvd.,#5 Van Nuys,CA 91401

TEL:+1 818 351 7878x1001

FAX:+1 818 351 7839

This device complies with Industry Canada Licence-exempt RSS-210. Operation is subject to the following two conditions:


- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.



EN

# Getting Started

## Charging

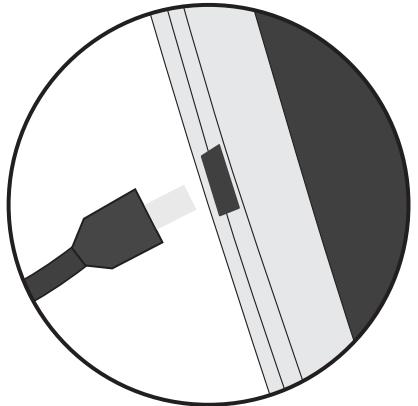

Charge your device by plugging your power cable into the micro-USB port. The snakebyte Vyper device will turn on and start charging. The charging indicator light is on when the battery is charging.

- You can use your snakebyte Vyper whilst it charges.
- Let your device charge completely the first time you use it.
- Use only the supplied charger.

When your device is completely discharged, you need to charge it for at least 10 minutes before the charging battery icon can be displayed.

### TIPS:

To receive more complete service, please register your product.  
From a computer, go to [www.snakebyteVyper.com/register](http://www.snakebyteVyper.com/register)

## Connectors




## Docking Station



## Dock the Tablet this way:





## Wireless Bluetooth Controller

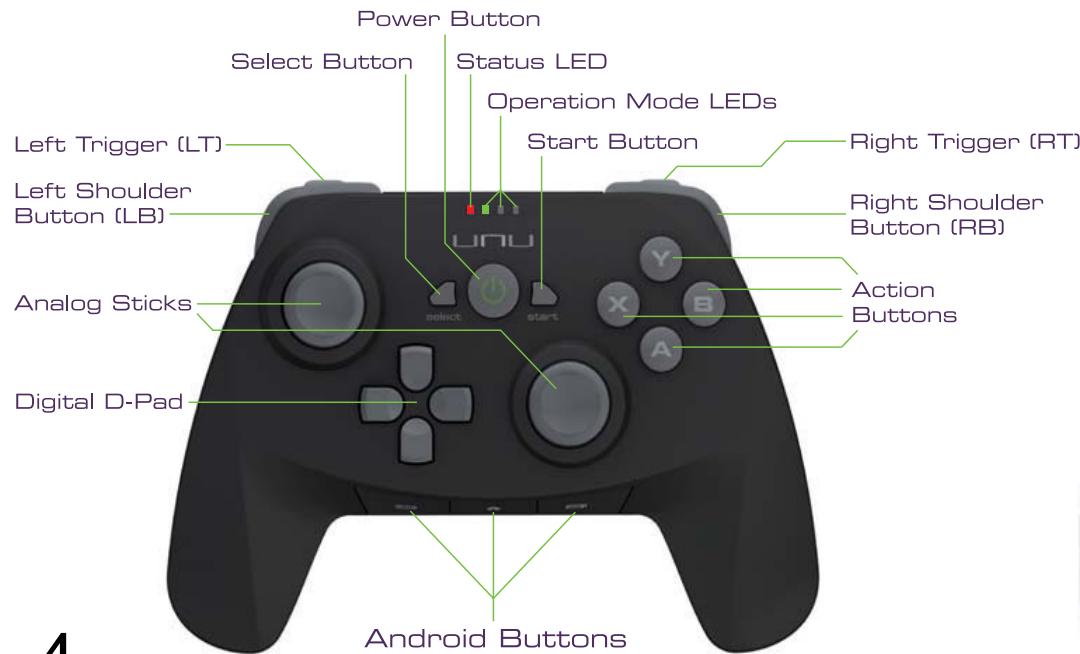

4

## Airmouse

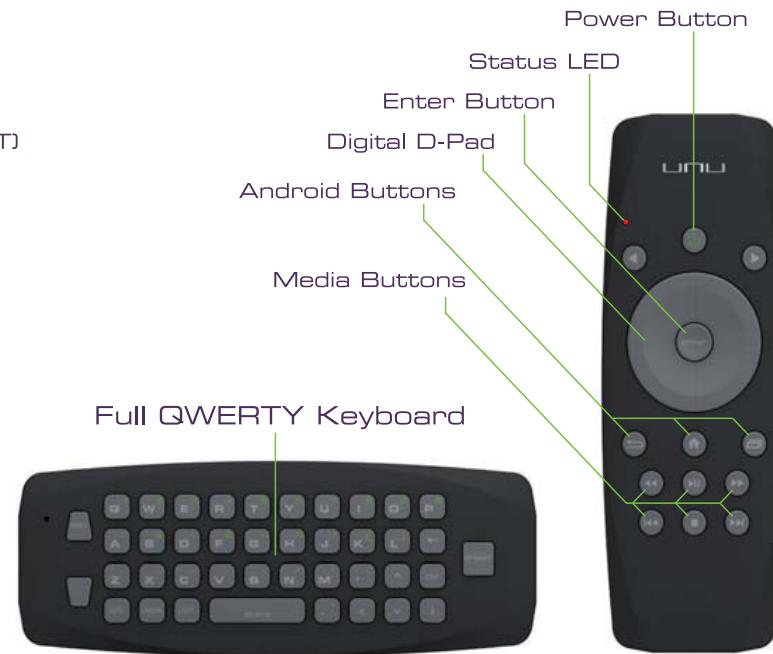

 

EN

## Through the Wizard

The first time you start up your snakebyte Vyper the installation wizard will help you set up your device:

- Touchscreen calibration
- Language
- Date & time
- WiFi connection
- Location service options
- 3rd party apps



### TIPS:

We recommend that you set up your device in the WiFi zone of the network that you will regularly be using.





# Connectivity to a WiFi Network

CAUTION: Make sure that you are in a WiFi zone.



- ① Touch and hold the time & battery icons to reveal the status bar. A blue line is displayed.




- ② Pull the blue line down to display the status dashboard.



- ③ Touch "WiFi off" in the status dashboard. The WiFi page will be displayed.



- ④ Slide the WiFi switch to "ON" positon.

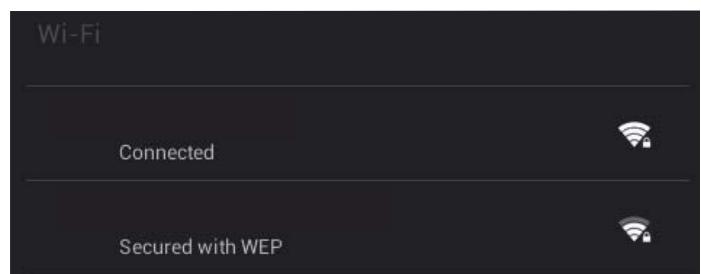


- ⑤ The **snakebyte Vyper** will scan for WiFi networks in range. Touch the name of network you want to connect to.





EN

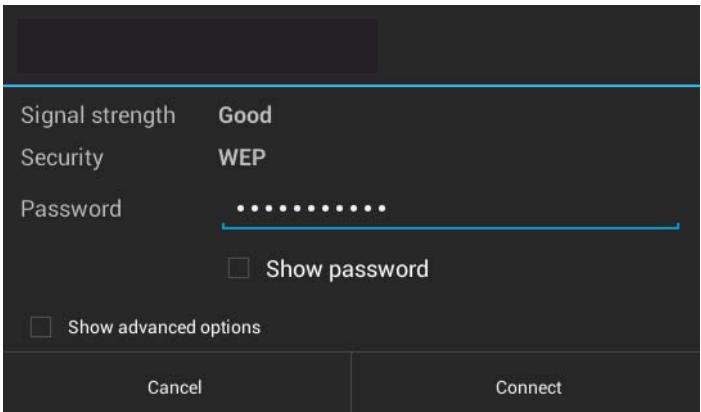


Private networks are shown with a lock icon and will require you to enter your password.



#### TIPS:

 
- When entering a WiFi password, we recommend that you select "Show password" so you can see the characters you are typing. To get the correct WiFi password (or settings) for the network, contact the WiFi network provider. If your WiFi is on and you are in range of a network that you previously connected to, yoursnakbytewill automatically attempt to connect to it.
- To keep your WiFi connection ON when the device is on sleep, select the Menu icon in the "WiFi" page. Then, select Advanced > Keep WiFi on during sleep > Always.





# The Android™ Interface



 

N

① Google™ Search

> Touch "Google" for text search or touch the microphone icon for voice search.

② Android™ apps shortcuts

> Touch to start an application.

③ Permanent Android™ apps shortcuts

> Touch to start an application

④ Back button

⑤ Home button

⑥ Recent apps buttons

⑦ All Apps button


> Touch this icon to show all the applications and widgets installed on your snakebyte Vyper. All your downloaded applications are here

⑧ The status bar

> Displays notifications and quick settings



# The Android™ Interface

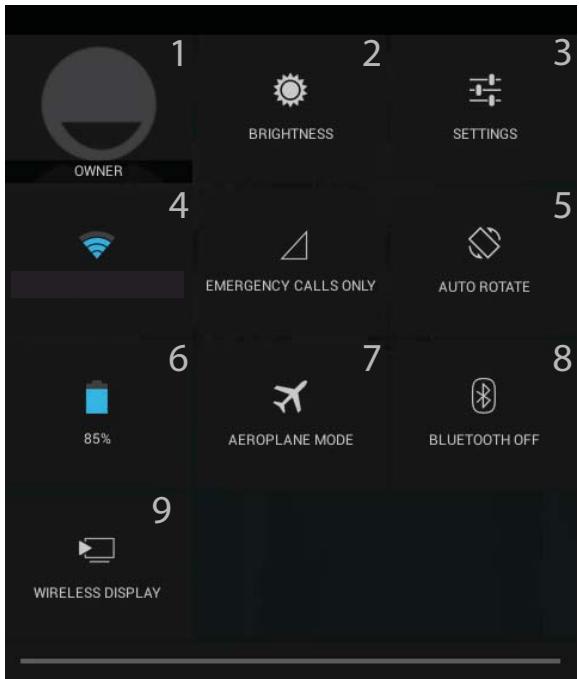

3:18 The Quick settings

- 1 Current user<sup>(1)</sup>
- 2 To adjust the screen brightness.
- 3 To access all your settings.
- 4 To turn on/off your WiFi connection.
- 5 To activate/deactivate automatic screen orientation as you turn your snakebyte Vyper
- 6 Percentage of battery remaining
- 7 To activate/deactivate all wireless connections, especially when flying.
- 8 To turn on/off your Bluetooth connection.
- 9 To enable wireless display<sup>(2)</sup>



<sup>(1)</sup>New multi-user support for tablets lets different users have their own separate, customizable spaces on a single device. Add users in Settings > Device.

<sup>(2)</sup>You can share movies, YouTube videos, and anything that's on your screen on an HDTV. You need to connect a wireless display adapter to any HDMI-enabled TV to mirror what's on your screen quickly and easily.






EN



The Recent Apps

Opens a list of thumbnail images of apps you've worked with recently:

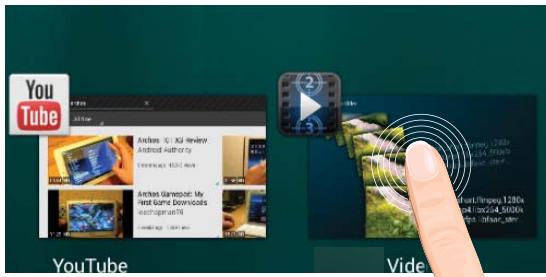


Touch: to open an app.

Hold down: to display options



 Swipe up or down: to close an app.



# Getting familiar with Android™




The extended home screen:

Navigate between different home screen panels by swiping left and right.



Moving a home screen item:

Touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.

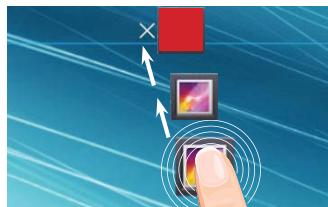

Removing a home screen item:

Touch and hold it, slide your finger towards the top of the screen and drop it over the Remove icon.



Uninstalling an item:

From the All apps screens, touch and hold it, slide your finger towards the top of the screen and drop it over the **Uninstall** bin.





EN



Creating application folders:

Drop one app icon over another on a home screen and the two icons will be combined.




Widgets:

Touch the All Apps icon on your home screen. Touch Widgets at the top of the screen. From the main Widgets screen, you can move around widgets just as you do for app icons.




Changing your wallpaper:

Hold your finger on a home screen at an empty location, then choose from the list.

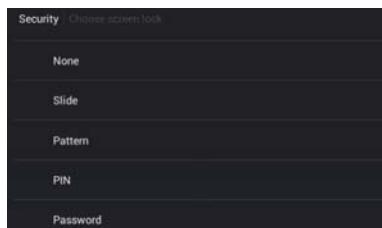

Locking the touchscreen:

 In Settings, scroll down and touch security. Touch Screen lock. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, PIN or other specified key.



# Troubleshooting

If your device is frozen:

Use the Hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

If your device doesn't turn on:

1. Charge your device.
2. Use the Hardware reset.

If you want to extend the life of your battery:

Decrease the screen brightness and turn off the wireless connections if not in use.

## CAUTION

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

If your WiFi reception is too low:

Use the System Monitor app. Make sure you are not far from the WiFi hotspot.  
Update the firmware of the device: <http://www.snakebyteVyper.com/support>

Reset and redefine your connection parameters.

Contact your WiFi connection provider.

If you want to restore your product (forgotten password? erase all your settings?) :  
While holding Volume+, press the ON/OFF button to turn on the device.

Once the green robot ANDROID is displayed, release the volume+ button.

Press and hold the ON/OFF button and press once the volume+ button.

The Android system recovery is displayed.

Use the Volume buttons to scroll and the ON/OFF button to validate.

Select “Wipe data/factory reset” and validate. Select “Yes -- delete all user data” and validate.

Select “Reboot system now” and validate.



## Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE:

1, This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

2, This manual includes some important safety method and some information about how to use the product correctly to avoid the unnecessary troubles. Before you use the product, please refer to the manual carefully.

3, The socket-outlet shall be installed near the equipment and shall be easily accessible.