

HOLIDAY
LIVING®

ITEM #5968039
MODEL #93116

**Bluetooth® 6.5-FT Animated
Nutcracker (white model)**

Español p. xx

ATTACH YOUR RECEIPT HERE



Serial Number _____

Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at ascsc@lowes.com.

PACKAGE CONTENTS

1.



2.



3.



PART	DESCRIPTION	QUANTITY
1.	Head	1
2.	Body and control box	1
3.	9V 1A Adapter	1



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING

• Warning Risk of injury to persons. Read and understand instruction manual before use.

- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

No tools required for assembly.

Estimated Assembly Time: 5 minutes

ASSEMBLY INSTRUCTIONS

1. Locate the handle on the top of the body and depress the button located in the center of the handle.



2. With the button on the handle depressed, pull the body upward to the locked and standing position.



3. To complete assembly secure the head to the body by inserting the two posts located on the bottom of the head into the body.




OPERATING / BLUETOOTH PAIRING INSTRUCTIONS

ON SWITCH POSITION

Insert the 9V 1A adapter (included) and gently twist to secure. Do not over tighten.


Move the switch to the ON position located on the control box. Make a loud sound (clap) to activate the item. This mode will play the Nutcracker default song. Turn item to DEMO/OFF position when not in use.

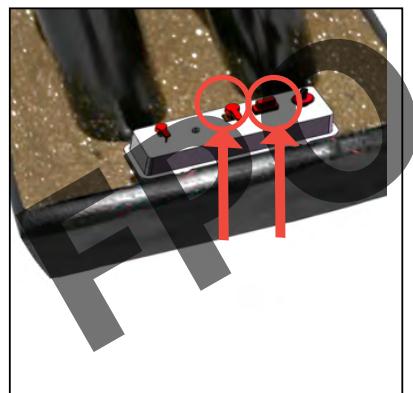

BLUETOOTH SWITCH POSITION

Move the switch to the BLUETOOTH® position on the control box to play your own Holiday music/playlist.

Locate the name NUTCRACKER on your phone/device and pair. When your music is playing the item will automatically activate.

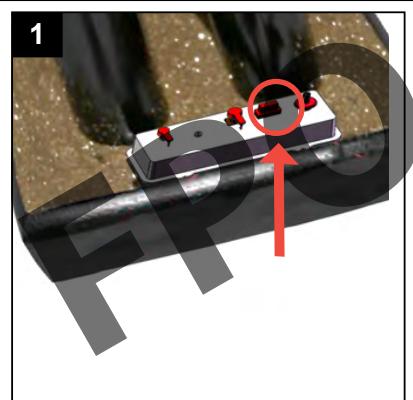


OPTIONAL DEMO AND EXTERNAL SPEAKER SET UP

OPTIONAL DEMO SET UP

FOOTPAD/PUSH BUTTON IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad/push button into the jack labeled DEMO on the CONTROL BOX.
2. Place the switch in the DEMO position to enable DEMO activation.
3. Step on the FOOTPAD or press push button to activate the demo sequence!

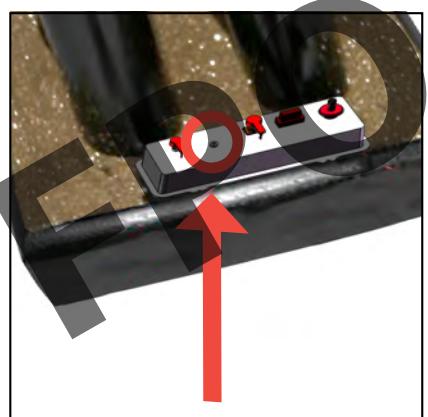

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- IN INCLEMENT WEATHER BRING ITEM INDOORS.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	<ul style="list-style-type: none">• 9V 1A adapter is not plugged in.• Switch on control box is not in the ON position.	<ul style="list-style-type: none">• Check 9V 1A adapter is plugged in and securely inserted into the control box.• Move switch to ON position.
Item has no sound while operating	<ul style="list-style-type: none">• Volume knob is turned down or bluetooth device is not paired	<ul style="list-style-type: none">• Check that the volume knob is turned up and your phone or bluetooth device is paired properly..

FCC REGULATION

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AAAI-TEKKY-BT

To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, this device must be installed to provide a separation distance of at least 20cm from all persons.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.