




Top View of the EUT - Toggle Backplate Version

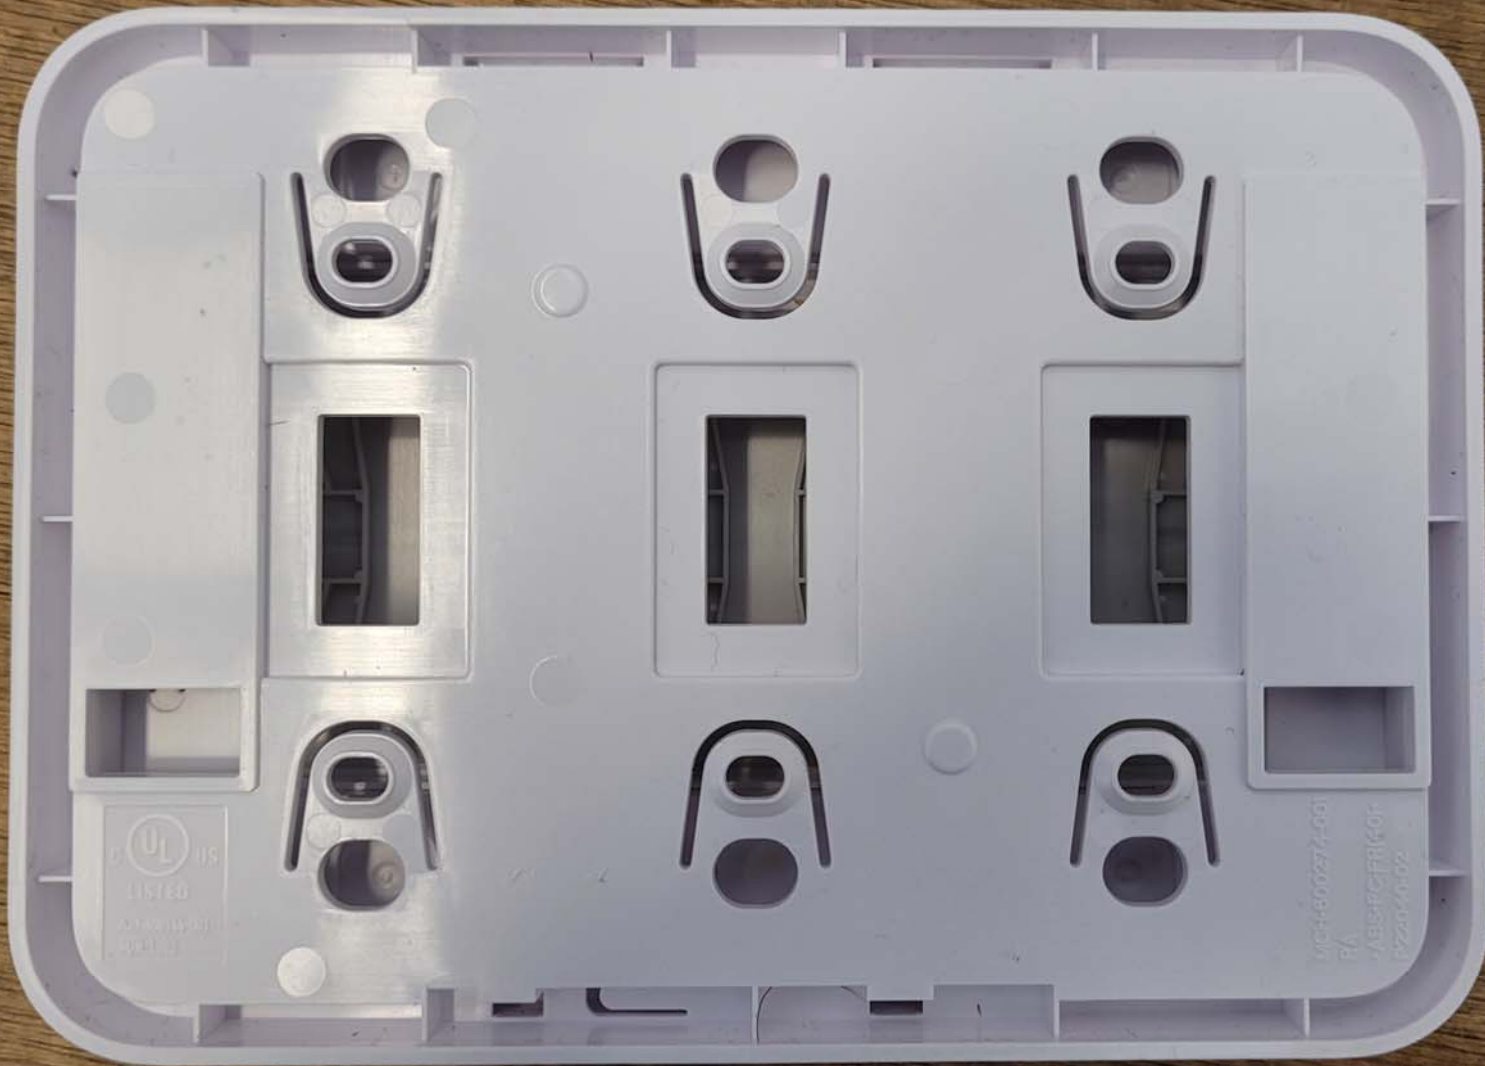

Bottom View of the EUT - Toggle Backplate Version



Side View #1 of the EUT - Toggle Backplate Version



Side View #2 of the EUT - Toggle Backplate Version



Side View #3 of the EUT - Toggle Backplate Version



Side View #4 of the EUT - Toggle Backplate Version