



User Manual

TABLET PC

V1003 MID



android

Instruction

Please read the precautions and important tips in the instructions before use

Catalog

	Chapter one (overview)
1-1	Appearance
1-2	Buttons
1-3	Open and shut down
1-4	Open and close standby mode
1-5	Lock and Unlock the screen
1-6	Homepage information column
1-7	Text input
	Chapter two (Browser)
2-1	Browser
	Chapter three (Applications)
3-1	Camera
3-2	Video player
3-3	Music
3-4	Calendar
3-5	Document browsers
3-6	Application installation
3-7	Simulation Game
3-8	Downloads
3-9	E-mail
	Chapter four (Establishment)
4-1	Sound settings
4-2	Wireless networks settings
4-3	Display settings

- Please close the running program before returning to the main interface.

Chapter One Overview

1-1 Appearance

Picture for reference only, Please subject to specific products.



1-2 Buttons

Power button

Long press the button () about 2-3 seconds to open the screen.

When open the tablet, short press this() to enter the off-screen state and short press again to light up the screen.

Volume

  this to adjust the volume

Set up

This key () to set up the applications

1-3 Open and shut down

Open

Long press the power button () on the right side, A9 sign and pictures will show up in turn until to the interface.

Shut down

Long press the power button (), then the screen shows <would you like to shut down>,press <sure> to shut down.

In charging state, when the tablet is off, press the right upper “power button” it will shows “charging” figure, once again to click “power button”, the equipment will be opened.

1-4 Open and close standby mode

Open the standby mode

In boot mode, you can tap the power button () on the upper right side of the tablet, the system will enter the stand by mode which can save power.

Chose the standby mode


In the stand by mode, light tap of the power button on the right side to wake up the device ,enter the normal state.

1-5 Lock and unlock the screen

Lock

You can set up the sleep time in the system of <display>.

The system will sleep automatically and lock the screen to the standby mode if without any inactivity when reaches the preset of standby time.

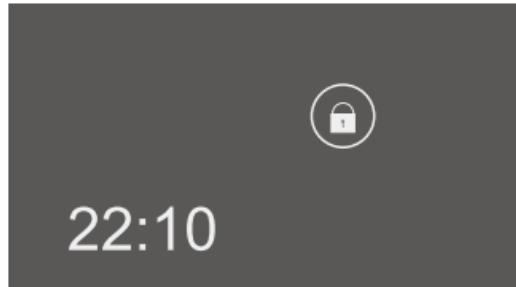


Unlock

Move the sign () to unlock, show as below.

Drag this () to unlock the screen and enter the application interface.



1-6 Homepage information columns

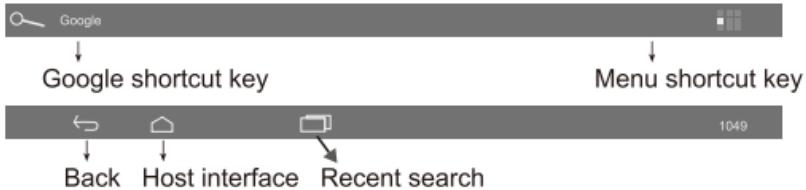

1-7 Text input

When use the table, you can use the virtual keyboard to enter text, number, symbols directly by touching screen. After selecting the Android input method, the default keyboard show as below.



To switch the numbers and letters, please press this

?123

To switch the capital and lowercase letter, please this

⇪

Chapter two: Internet

2-1 Browser

Require network support before using a web browser, if there are network supporting problems, please contact your network operator or the service provider.

Tablet's web browser can connect to the Internet via WIFI to satisfy your business and individual network needs.

Please touch this  to set up the WIFI so that can use the browser normally. See as picture;



Touch here  in the application list to enter the browser pages; the default homepage is the <Recently Viewed> showing recently viewed pages.

Browser supports the following features



Movie Back Refresh input area Add bookmarks Search Bookmarks

Enter the URL-touch the input area to get the soft keyboard, then text the URL.

Book mark search-click this  to add into the bookmark

Touch this  to read the favorite website that collected

Touch this  to search the internet

Touch this  to add new browser.

Touch this  to close the browser

Chapter three: Application

3-1 Camera

Touch this  in the application list to enter the camera, the views showed on the screen and you can do the following as picture:



Camera

Click this to get Snap shot.

setting: to set up white balance , exposure, save, , start.

Video

Click this to video and do the relevant operation .

setting : while balance setting delay , , save , click this to start video

View photo and videos

 
In picture preview interface, click on the screen to preview photos, also you can set up the pictures to slides

3-2Video player

Touch this to the Video player

You can see the Videos in and files.

There are some control areas at the bottom after you enter the video player.



3-3Music

Touch here  to the music player. Music can be player by artists by artists or album classification.

This page displays the songs alphabetically.

Click the songs you want to listen and get into selected state to play

Click on the (now playing) will display being played album page; there will be lyrics shows under the page right.

Artists

In the <artist> page, it is sorted, according to the artist is initials, click on one, you will open the artist's related album and song list; then you can click songs to play.

Album

The album shows all albums in the list, sliding it can browse all .Click on the album cover will transfer to the album back automatically. When all music shows, click again on the songs began to play.

3-4 Calendar

Touch this  to Calendar, the default page shows the months, click this  to the day.


Date view: long press to the events to rebuilt, view, edit, and delete; Click on the blank area can set up new events; long press the blank area, you can built new events or display/not display the lunar day view.

Week views: Long press the event to rebuilt, view, edit, and delete events; long press the blank area you can rebuild events or display /not display the lunar weeks view.

Month view: long press date to build new calendar items or display / not display the lunar month view

Agenda: list all events click to read the details

In any view, when you switch to other date, week or month, all can be back to today or week or month now by touching <today>button

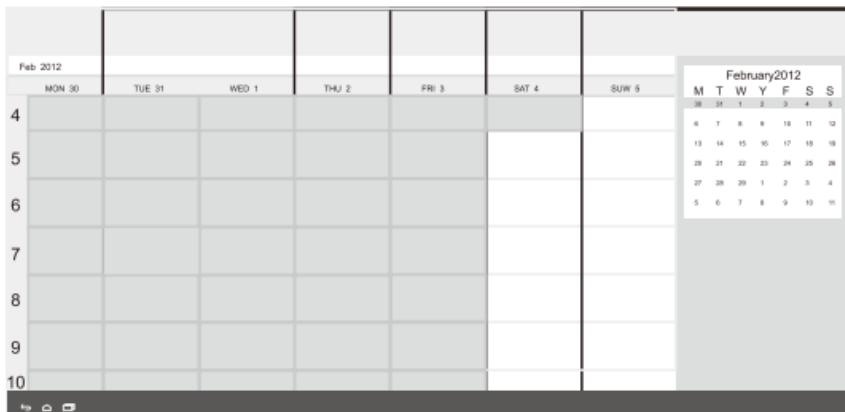

You can also click here  to search task memo, edit ,notation and share.

3-5 Document browsers

Touch here  in the application list; it supports the files mutual copy in this two places internal memory and SD card.

Touch the button  when it turn to yellow, you can edit the file

Edit

Touch this  to edit the file including cut/copy/paste/delete

Copy, choose one file in the list, click this  to copy when show the 

Then click this  to choose where to put the file, and then click this  to paste.

Delete, choose one file that click here  to delete

3-6 Application installation

Touch here  in the application list, it will install, unload the APK files automatically.

It searches the APK file from  or 



Touch the selected APK application directly for installation and unloading

3-7 Simulation Game

In the application list click here ① to connect the handle to the game, there will be AC, PS, MD, GBA, FC APK file in the Motion Game.

Different equipment installs different simulator

3-8 Downloads

Click here ① in the application list; you can preview the downloading or done document contents.



Click download file to stop or delete the download contents.

3-9 E-mail

Require the internet support before using e-mail, if there are problems in network supporting, please contact your network operator.

Add account

If you are the first time to use email, get into a mailbox interface directly to set up an account according to instruction.

If you want to add more mailboxes, click <Settings> on the top of the page to add more mailboxes, and then select <add account>.

(Account setup)

Email account

You can set up email for most accounts in just a few steps.

Email address _____

[Manual setup](#)

Draft e-mail

In <inbox> page, you can click  this on the right page top to draft mail quickly.

In the draft mail page, you can:

Add mail recipients quickly.

Enter the recipient address in recipient input box or click on the <contact> in the contact list of recipients to choose mail address; you can copy/close to send input address.

Write email subject and text content (the text area support copy, shear operation).;

Add attachment

Add attachments from the document management, when it succeeds, the name will show one <New e-mail> page, you can click to select to open or remove them.

Reply, forward mail

Click the right page preview area of the toolbar <reply><replyall> or <forwarding> choices.

The basic operation is same with the draft e-mail.

Chapter four: system setting

Click here  to enter the system setting interface.

4-1 Sound setting

Sound settings, click this  to sound setting page. You can choose mute switch which can get more detailed settings if you need. Click the <volume setting> can set up the notice, the media and the alarm of volume and choose the prompt operation sound and the bell and software disk boot switch voice.

4-2 Internet setting

This setting module includes: the wireless local area network settings

The wireless local area network Settings

Open wireless LAN switches, the system will scan available wireless network automatically and display the wireless local area network in the list.

Among them ,if the local area networks have the sign  behind it, that represents the networks don't need a password, can be connected directly.

This sign  represents the network has been encryption, it needs to enter the password to connection.

You can choose the network from the list you want ,click it to connect directly ,also you can click the <advanced> option to set up the<IP>and<agent>then click<connected to the network>,you can also select <add wireless local area network>,to add by hand.

Network notice: open the switch, it will notice if there any open network.

The wireless local area network certificate: the wireless local area network loading and management.

MAC address to show the MAC address

4-3 Display setting

 Display Setting contains: wallpaper settings, dormancy time ,brightness, automatic rotating settings

Wallpaper setting

In the wallpaper setting ,you can set up the wall paper and dynamic wallpaper ,the wallpaper can be chosen from gallery.

Standby Screen

When the screens in light state a period of time, it will automatically lock to save the power if without any operations.

Brightness


The user can adjust brightness manually to get the lightness you want.

Font size

You can set up the font size according to individual's favorite, there were respectively : small, ordinary, big, huge.

How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC,
touch right side of the status bar on the bottom of desktop

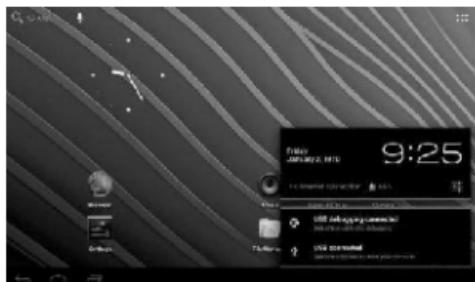

Press "USB connected", select "Turn on USB storage". The device is recognized at Explorer of the computer. Now you can use it as an external storage



After finishing your work,
Press "Turn off USB storage" to unmount it.

This manual contains important safety precautions and information of correct use. Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer; do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently; otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.

The device shows  on the top right corner.

⚠ Warning: this mark is a warning sign alerting you of dangerous voltage in side the product.

⚠ Caution: this mark is a warning sign alerting you of important operation and maintenanct instructions accompanying the producgt.

- “The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus”
- “The main plug is used as the disconnect device, the disconnect device shall remain readily operable.”
- The design and manufacture of the appliance have filly considerted the safety of human body. However, inappropriate handling of it may cause such accidents as electric shock and fire. So, the following safety instruction should be fully observed.

Notice: the appliance cannot be handled with wet hand. It should be kept at dry place with proper ventilation.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

