

Table of Contents

Basic Introduction.....	1	Photo Browser.....	19
Device description.....	1	Camera	20
Basic specification.....	3	Sound Recorder	23
Quick Start.....	4	Google Play Store	25
Boot and Shutdown	4	Frequently Asked Questions	26
Connect with PC	5	Important Safety Precautions	28
Interface Introduction.....	7		
Top bar of the Interface	7		
Desktop	8		
Basic Operation.....	9		
Date and time settings:.....	9		
Display settings	11		
Wireless Connection:	12		
Applications install and uninstall.....	14	System: Android4.1	
Browser.....	15	Processor: APRIL T7	
Video player:	16	Edition: V03	
Music player:	17	DA42	

Basic Introduction

Device description



① **Camera:** You can take photos and videos etc.

② **Headphone:** 3.5mm standard earphone jack.

③ **MIC:** High-fidelity recording.

④ **POWER:**

- Turn on/off the device by long pressing this button.

-- When the power indicator is on, press the power key,

the device will turn on. (It will take some time)

-- Press for 3 seconds when it is off.

The system would indicate MID Option. Click “Power off” to shut it down. Press the return key to stay.

- Press the Power key for a short time, you can shut /start the screen.

⑤ **RESET:** Reset button to restart.

⑥ **Vol-:** Volume decrease key

⑦ **TF-card:** TF card slot.

⑧ **Vol+:** Volume increase key

⑨ **HDMI:** Support 1080 P HD video output.

⑩ **Micro USB:** Support connect the mouse, keyboard, U disk, MP3, USB, USB adapter CARDS; Support connected PC exchange data, etc.

⑪ **DC:** Connect the power cable to charge to the device.

Basic specification

- **CPU:** APRIL T7 Cortex A9-1.5Ghz
- **Display Screens:** 7inch, 1024*600 IPS
LED-backlit
- **Camera:** Front 0.3M/Rear 2.0M
- **Operating System:** Google Android 4.1
- **Network Connection:** Built-in 802.11b/g/n
wireless Wi-Fi
- **Audio**
format:MP3,WMA,APE,FLAC,WAV,OGG,AA
C,MP1,MP2,AC3,AMR,DST,
RA,M4A
- **Video format:** max 2160p full HD video
(AVI, 3GP,MP4,MPG,RM,RMVB,MOV,FLV,W
MV,MKV)
- **Language:** support multiple languages
- **Ports:** micro USB *1(OTG) , mini
HDMI*1,Earphone * 1, TF card slot * 1,DC

IN*1,MIC*1


- **Buttons:** Power /Vol+/Vol-

Quick Start

Boot and Shutdown

Boot: Press and hold the power button, the system will enter the boot process

System has been started, entering the Android system:

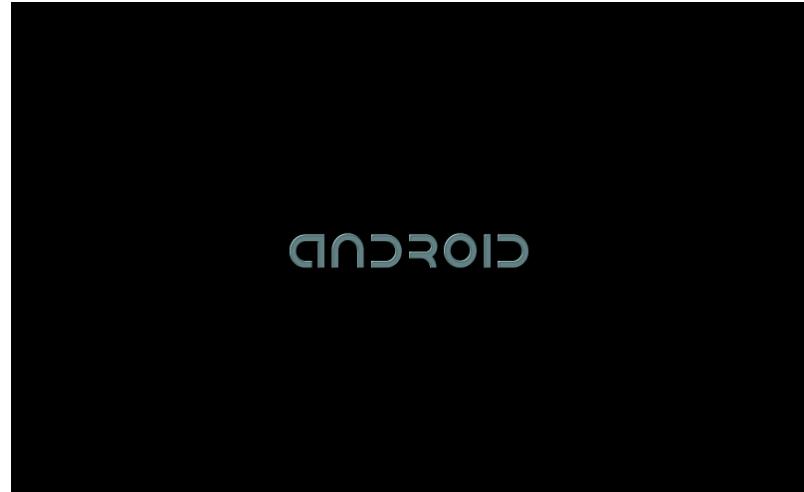

System into the main interface.



Shutdown: Press the power button, pop-up device


options, select Power off

Click OK, you can safely shut down.


Connect with PC

By micro USB (OTG) interface of the device, You can connect with PC by micro USB cable attached with the device. USB Data transferring is available. You can operate the files through the PC.

When your device is connected successfully, to pull up the notification area of the status bar, can see the following icon.

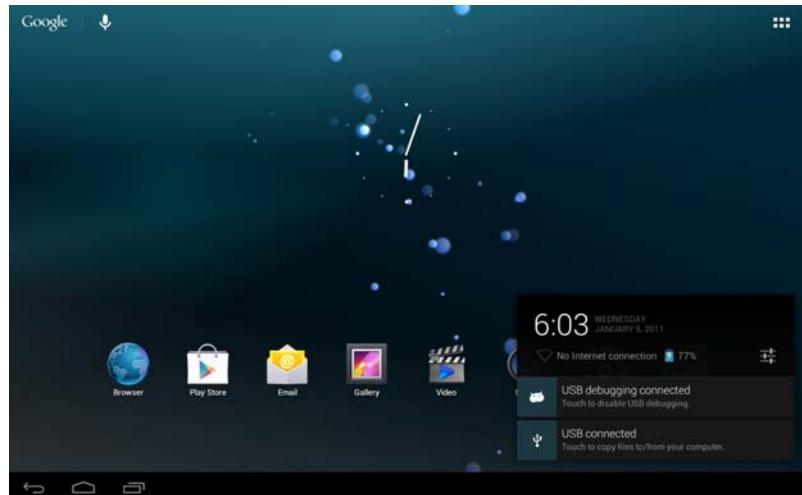

Then click  **USB connected** to enter the next.

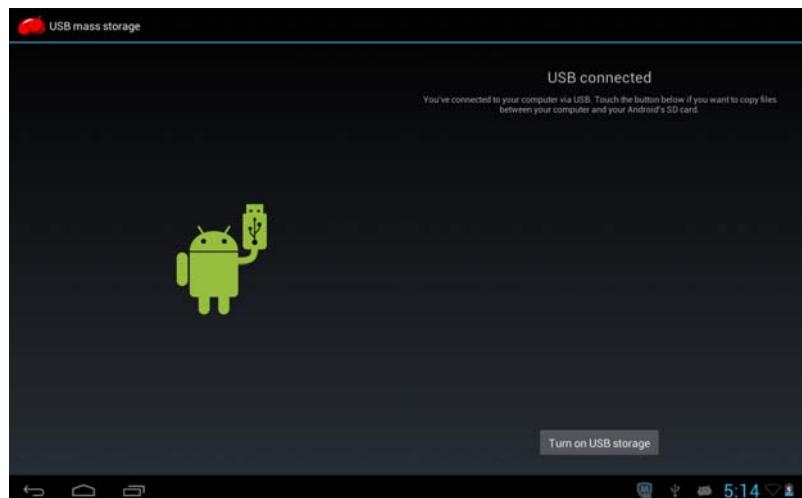

Click **Turn on USB storage**, Then the device can transmission data with PC.

Note: The device also supports the FAT32 format for external devices, for example U disk, Micro SD card to Transfer data.

Interface Introduction

Top bar of the Interface




- A. USB connected. Select to copy files to/from your computer.
- B. USB debugging connected. Select to disable USB debugging.
- C. Time display: Display the time of the current system, which has been set.
- D. WIFI signal status icon: If connected to the WIFI

wireless network, the icon will be displayed.


- E. Battery status icon: Displaying the current battery level and the charging status.
- F. Back, Home, recent apps Screen menu virtual buttons.

Desktop


When sliding around with your finger to switch the main screen, the desktop fixed on the main screen, will not move. User could drag the application icon placed on the desktop area in the main screen.

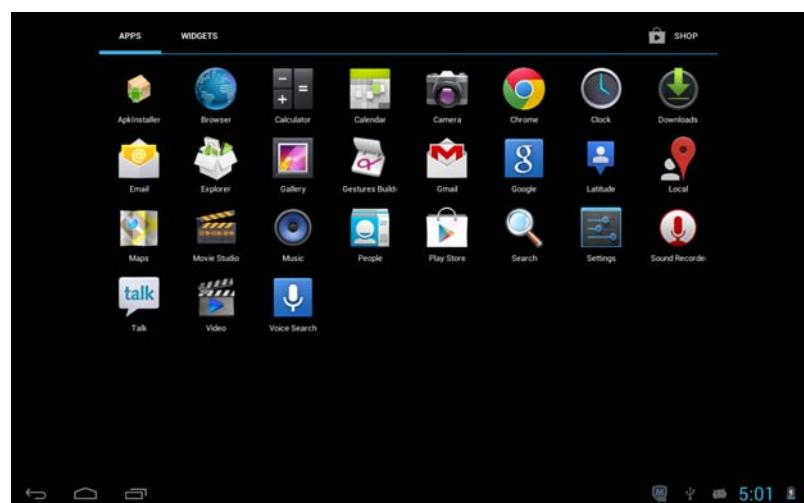

Basic Operation

 

Click the "Settings" icon in the main applications area, you can open the system settings interface, as shown below:

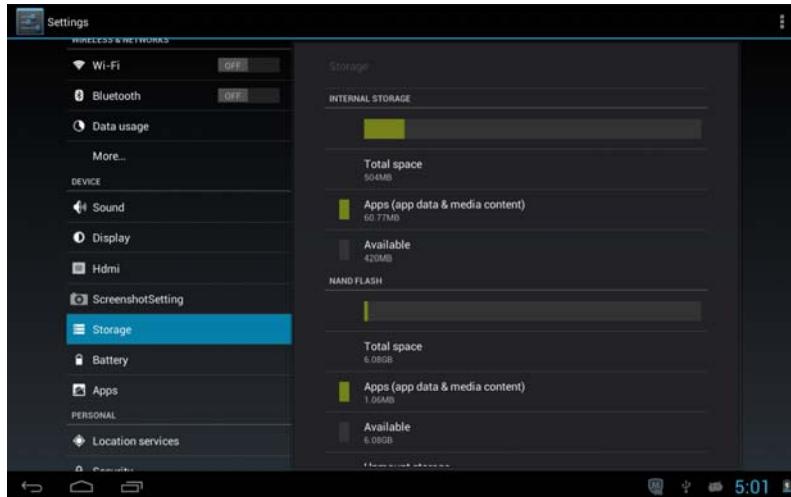

Select the appropriate operation of the relevant items, such as: wireless and network, Display, date and time settings, about Device, etc


Date and time settings:

Click "Date & time" to enter the Date and time

settings interface:

Select to set the date, select the time zone, set the time, time format, date format and other information.

For example, choose to set the date, as follows:

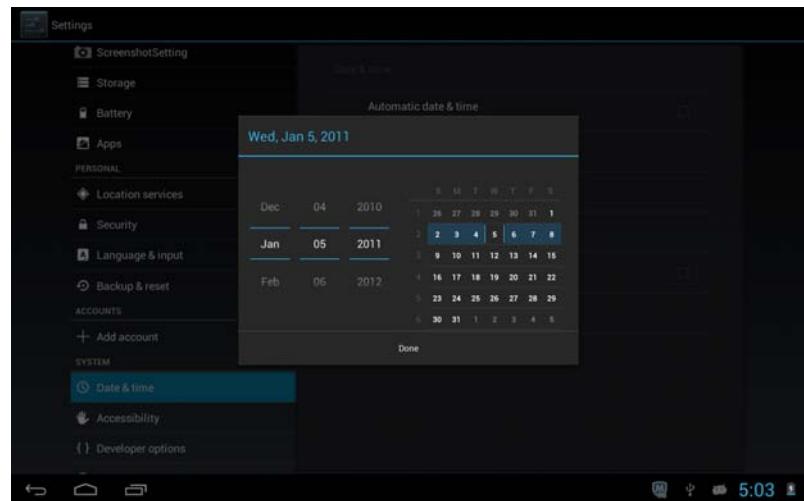

Click upward: that the increase of 1 unit,


Click down: that the reduction of 1 unit.

Also you can choose the number, enter the input mode.


Directly entering the desired number, then click "Done" to set the Date.

Display settings

In the settings interface choose “Display” to enter the display settings interface, select "Brightness", Pull the progress bar to adjust the brightness, as below interface:

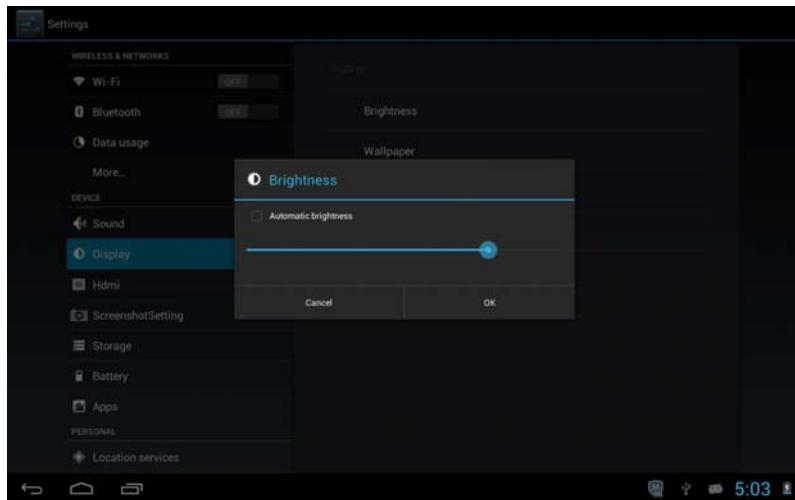


Click Sleep, Adjust the inactivity time of the device. You can press power key to activate the device. When display "Screen locked" interface, follow the prompts to unlock it

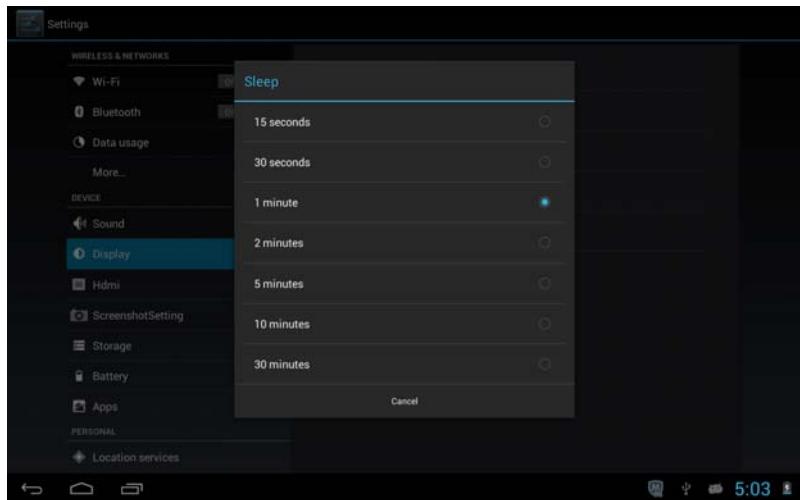


Wireless Connection:

Click the main menu "Settings" icon, go to "Settings" screen, click on "Wireless and networks" into the "Wireless and networks settings" interface. Turn on Wi-Fi switch, the Wi-Fi module built-in the device will search AP lists automatic , click the searched AP can be used, will pop up settings dialog, please follow the prompts to complete the WIFI network links. Some encrypted network, need to enter a valid key. As shown below:

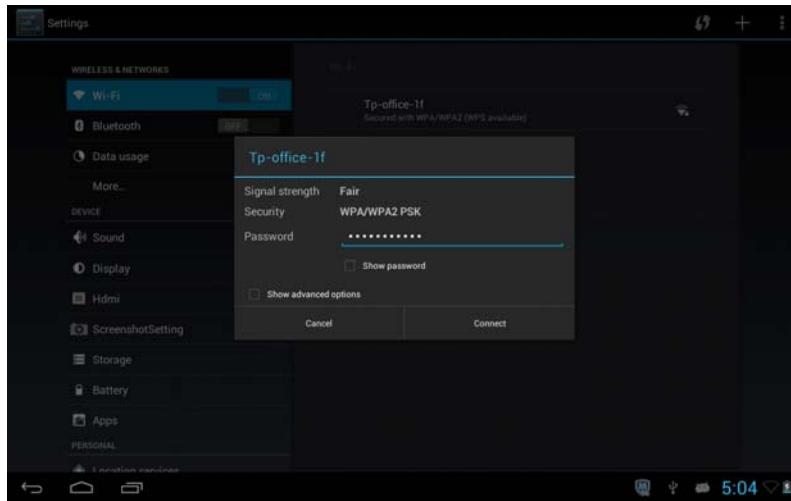


According to the above method to connected Wi-Fi, as shown below:

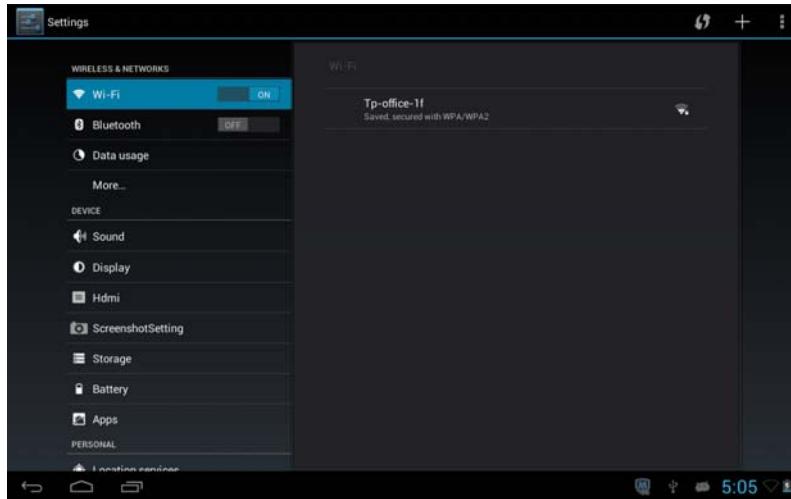

Applications install and uninstall

Install applications


1. First you should select the Unknown sources which allow installation of non-Market apps.

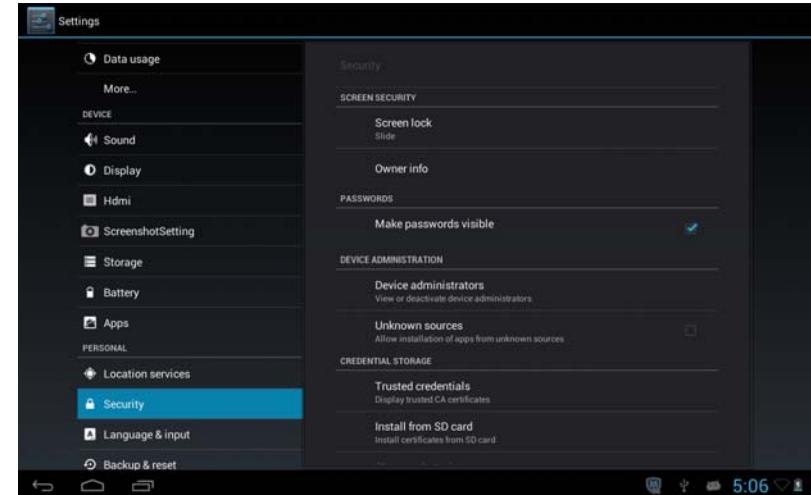

2. Copy the APK installer software to Micro SD or NAND FLASH.



3. click FileManager to find the app directory, then Select applications to install.

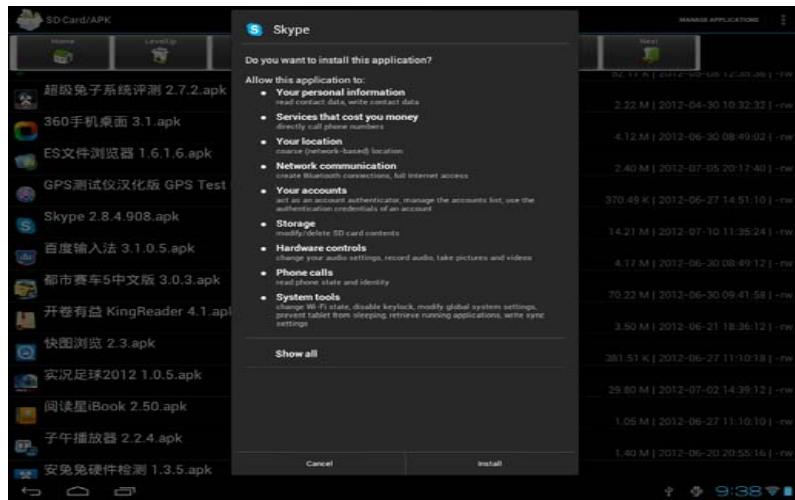

Users can "Android market" online installation, or download via the computer, or online through the machine built-in browser to download and install.


Uninstall applications

Pitch on the item "Settings - Apps –DOWNLOAD ", select the appropriate application has been installed, click the applications which you need to uninstall.

Browser

When the network connected, open the Web browser enter the URL, you can quickly browse the Web; or

through the main desktop search bar enter the URL, open the web page.


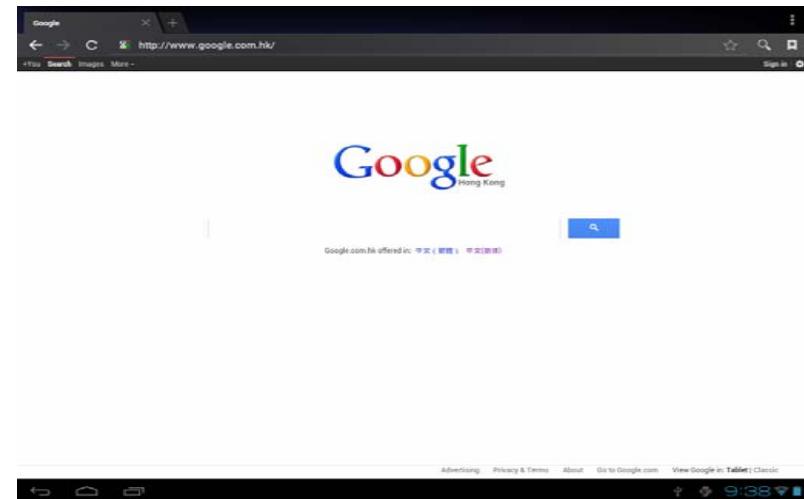


Video player:

Online video: The product supports HTML5 online video playback.



Local video: Click on the video icon , can load the local video play.

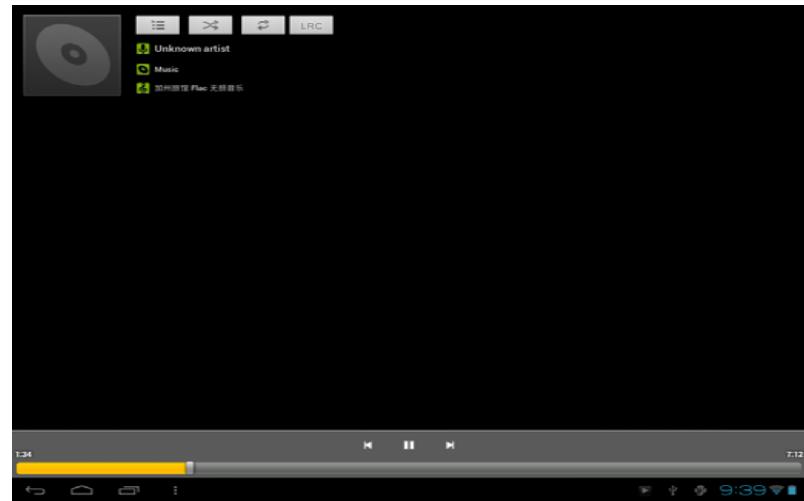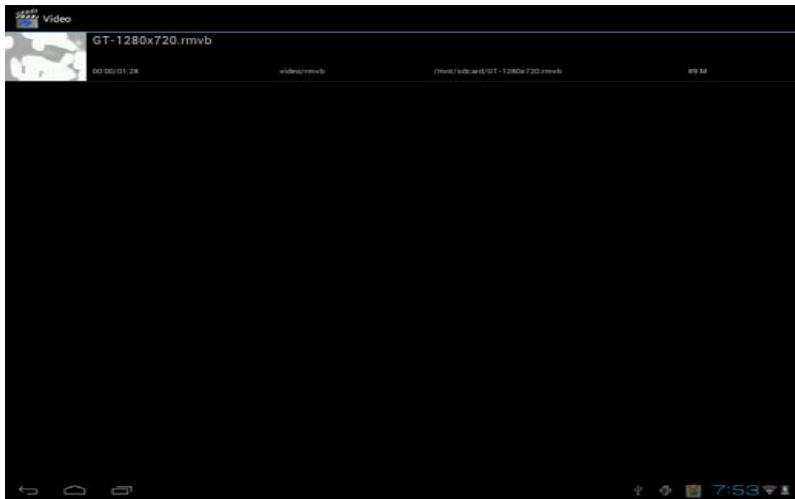

Music player:

Click the music icon , you can enter the music player interface.

Click the music files you will enter the player to play music.

Click “” : Play the previous music, long press to fast reverse.

Click “” : Click it to suspend, the icon turn to “”, click and return to the normal playing again.


Click “” : To play the next song, long press to do function.


Click “” : To display the present playing list.

Click “” : To select the random playing mode.。

Click “” : To select the repeat playing mode.

Photo Browser

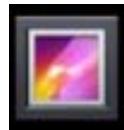

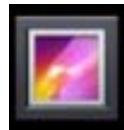Click  to get into Photo Browser directly. there will list all the picture files and video files. As shown below:



Select a picture file; enter the picture playback interface, as shown below. Can the following operation: double click image scaling, in the dropdown menu has "delete", "slideshow" and "Edit", "Crop," "Set picture as", "Details".



Camera


Photo Mode :




Click the Camera icon  in the applications menu, as shown below .



Click the camera shutter  to take photos .

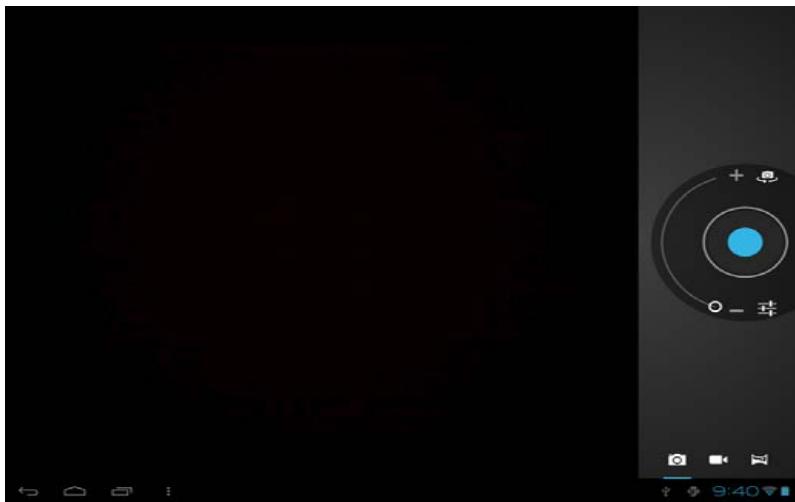



Video mode:

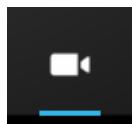

Click on the icon, conversion to video mode.





Click the camera shutter to take videos .

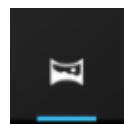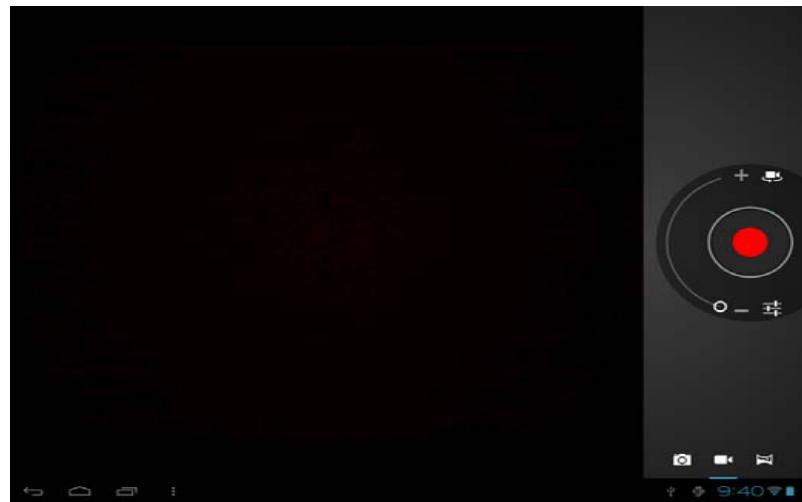

Click on the icon, converted into a panorama mode.



Click the camera shutter photography panoramic pictures.

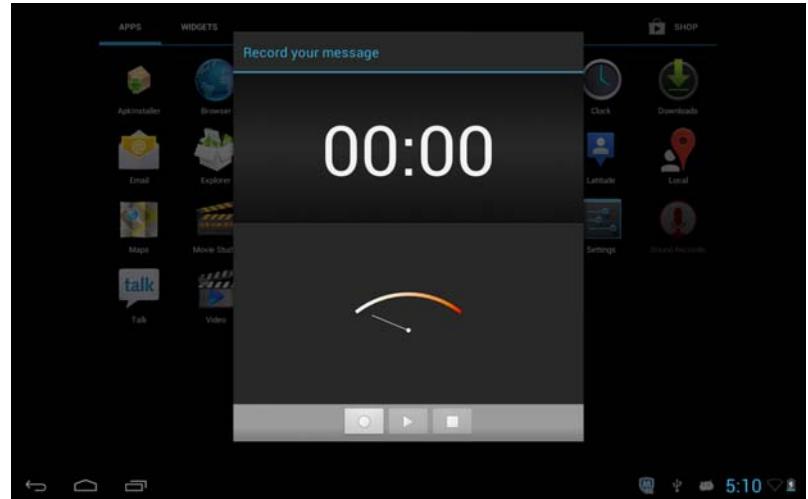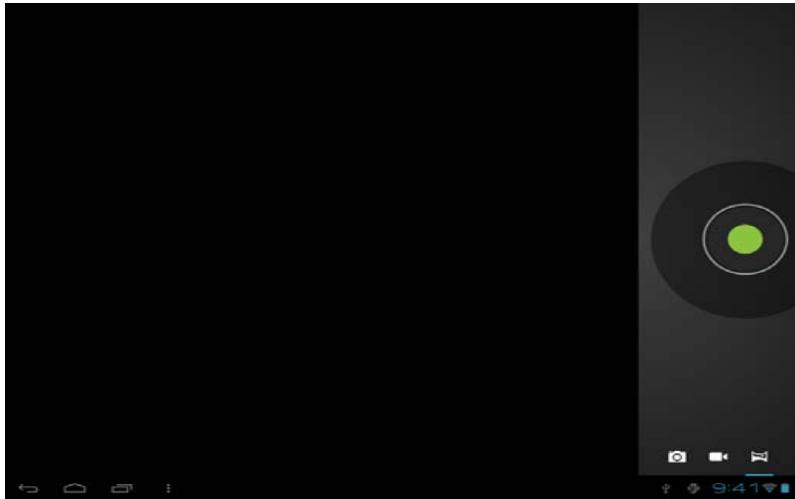

Sound Recorder




Click the recorder icon  in the applications menu, as show below:

Note: Select "Record" button  to record,


when it is completed, select "Stop" button .


Choose "play" button  to play already recorded voice.

Already the recorded voice can choose to "save" or "give up".

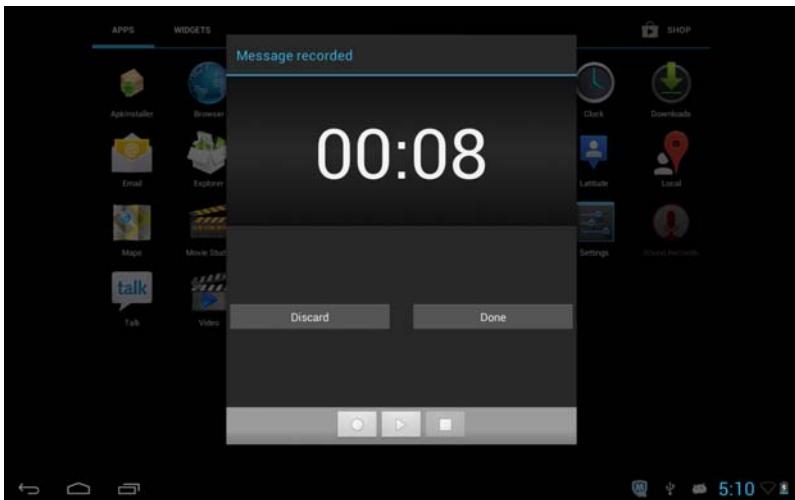

Google Play Store

 

 Click the icon  into the " Play Store " interface. If have no Gmail account, should create a Gmail account

Select "Accept" to enter market, as shown below



Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: 4.1

APK

Q: What is APK?

A: APK is Android Package acronym that Android installation package.

Q: How to obtain the APK?

A: You can download via PC-side installation, you can also "Android market" online to download and install.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP3, WMA, MP2, OGG, AAC, M4A, FLAC, APE, WAV

Photos.

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP, JPG and PNG.

Video

Q: What type of video files can I play on my device?

A: AVI, 3GP, MP4, MPG, RM, RMVB, MOV, FLV, WMV, MKV (max 2160p full HD video)

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

➤ Do not expose this product to rain or moisture.

- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.
- Clean your Device.
- Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

FCC STATEMENT:

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.