


# WT7.0 QUICK START GUIDE



Thanks for choosing our Tablet PC. This unit is a high performance, multi-functional tablet pc, will bring you enjoy entertainment. For using this unit properly, please read this guide carefully. Thank you.

-1-

## 1. Outlook & button description

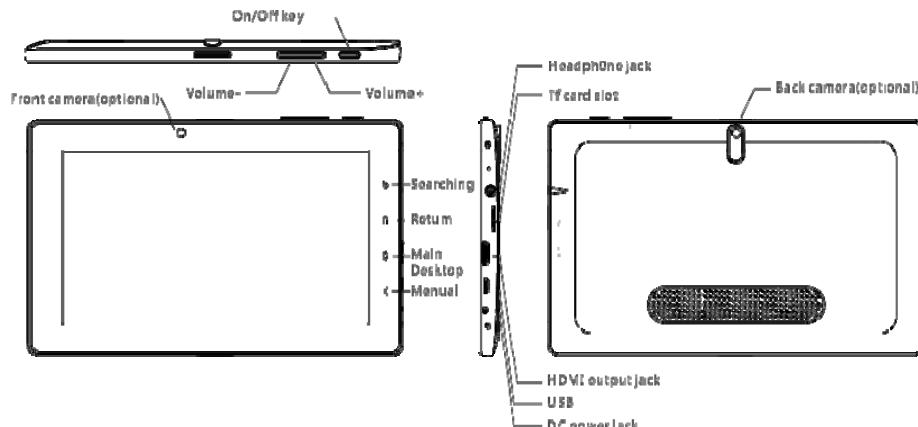

### Icon status of the main interface :



-2-

## 2. Operating Instruction

### 2-1. Power on/off

**Power on:** long press for 3 seconds, the system will be on, and will take about 50 seconds to get into the tip interface. If do not operate, the system will be locked and into the standby status. For recovery, press the on/off key to start the system, then press the icon “”, slide to the icon “” for unlock.

**Power off:** long press on/off key, appear the power off interface, press “ok” to power off.



-3-

### 2-2. WIFI connection

Press the icon on the desktop, into the WIFI interface, slide on/off icon to turn the WIFI on (the icon will change to the blue color) system will automatically scan and list all available WIFI network, choose the network to which you want to connect, enter the network, password if applicable. If there is no proper WIFI network, you may manually search for network in WIFI interface, press “SCAN” for network search.

### 2-3. ES File Explorer

Press the ES file explorer icon “” in the main desktop, the default directory is the internal storage disk. If you wish to enter the TF card or USB drive, follow the steps below:

Press the ES file explorer icon “”, into the local/sd card file, press the icon “Favorites”, press “mnt/ext\_sd” file for TF card storage file, and choose “usb\_sdal” for the USB drive storage file.

**Note: connect the USB drive through USB OTG cable!**

-4-

## 2-4. Download, Installation & Uninstallation for Apps

### Download

Connect the WIFI, press “Market” for download the APK.

### Installation

First, copy the APK to the file on the system, press the “ES File Explorer”, press the APK file for installation. When complete the installation, the icon will appear on the main desktop.

**Note: the first time installation, the message “install blocked” may pop-up, in this case, press “setting”, then into “security”, tick the unknown sources, and then go back to “ES File Explorer” to continue for installation.**

### Uninstallation

Press “setting” and into “Apps”, choose the one you wish to uninstallation.

-5-

## 2-5. HDMI HD video output

This unit can support 1920 x 1080 HD video play and output.

Press “setting”, “display”, “output setting”, choose “HDMI” in the “output type”, setting the display to be HDMI format to complete the HDMI output to the display. Please use the HDMI cable to connect the display to the unit.

**Note: when exit the HDMI output, change to the “LCD” mode, otherwise the unit will not be able to the standby status.**




-6-

## 2-6. Connect to the computer

Please make sure the unit is on, using USB cable to connect to the PC. Press “turn on USB storage”, then press “ok” to complete the connect with the PC.

**Note: if do not connect properly, the unit will not appear the message of “turn on USB storage”**

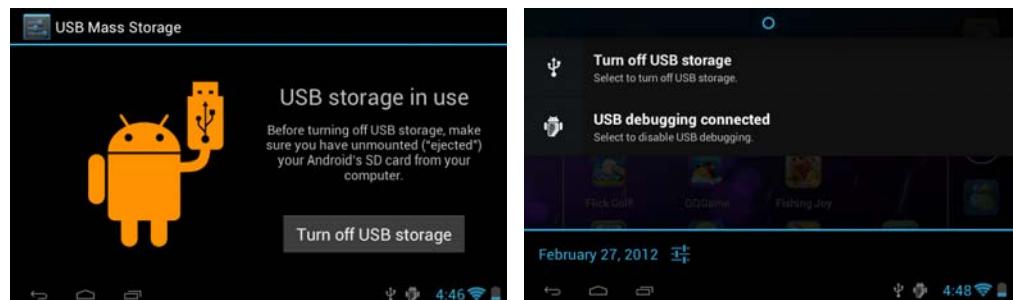

-7-

## 2-7. Charging

Use the power adaptor to connect to the dc jack for charging. During the period of charging, when the unit is off, will appear the icon ‘charging’, when the unit is on, the battery icon will flicker.

**Note: this unit does not support charge thru connecting to the PC.**

## 3. Frequently asked questions

### 3-1. The unit cannot boot ?

Check power level of the unit, please charge it before booting. If the unit still cannot be booted, you may reset the unit before you boot.

### 3-2. No sound from speaker.

Check if volume is set to mute mode, please increase volume or unmute. Press “settings” icon”→ press “Sound” → press “mute mode” and choose “OFF”.

### 3-3. WIFI connection cannot access the network.

The unit do not search WIFI signal, please press “SCAN”, and make sure that have any wireless router opened within 10 meters. If the WIFI still cannot search, please reboot the unit again and turn on the WIFI.

-8-

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.