


MANUAL | QUICK START GUIDE

HS80 MAX for XBOX

PREMIUM RGB GAMING HEADSET WITH SPATIAL
AUDIO



PACKAGE CONTENTS

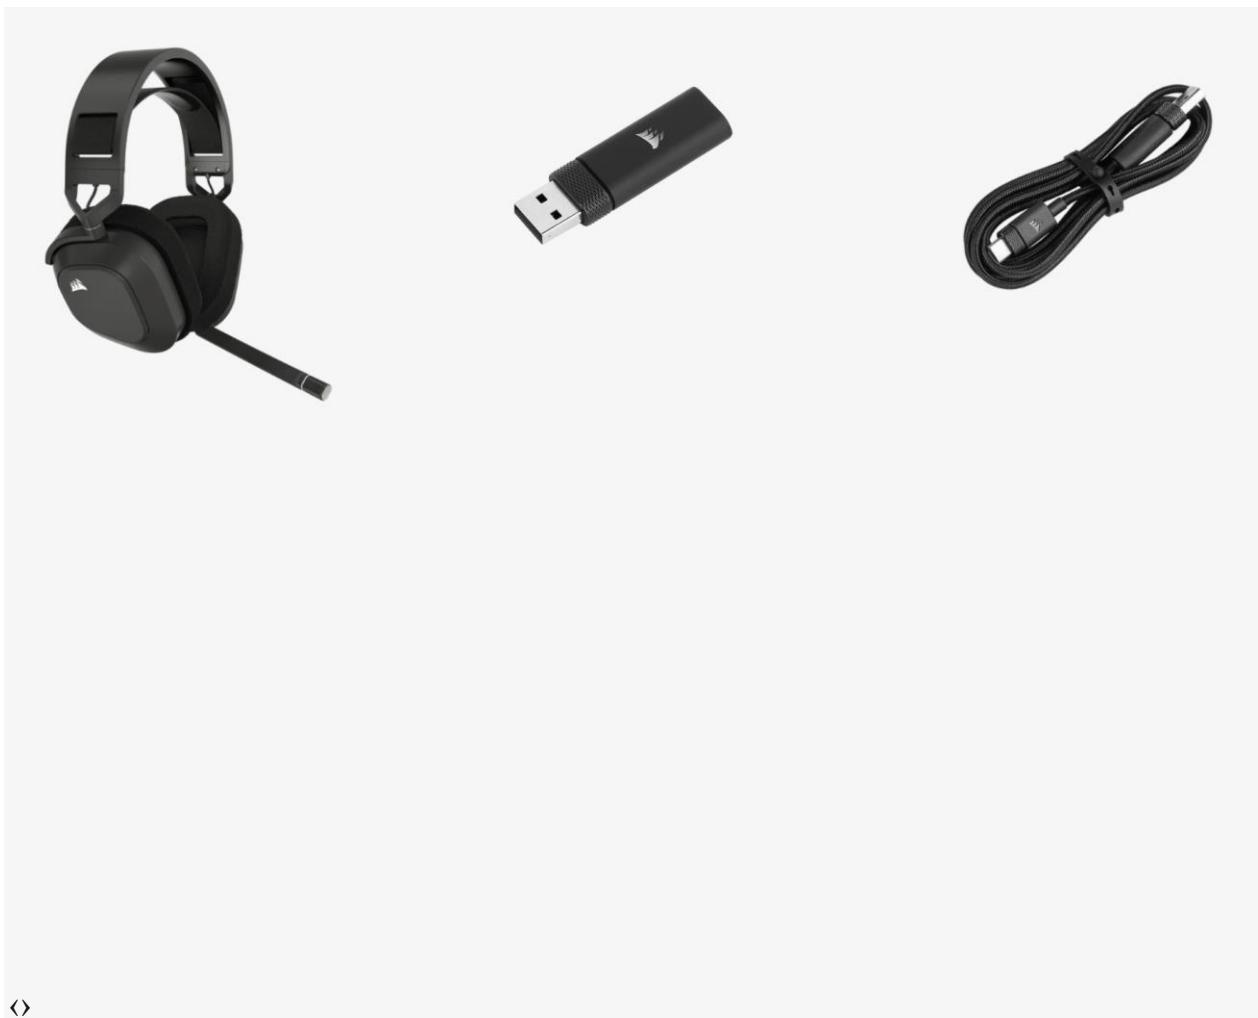

<>

GETTING TO KNOW YOUR HEADSET



- A. POWER BUTTON / WIRELESS MODE
- B. RGB LED LIGHT
- C. VOLUME CONTROL / EQ SELECT / iCUE CONTROL
- D. HEADSET STATUS LED
- E. CHARGING PORT
- F. MICROPHONE STATUS LED
- G. BLUETOOTH / MULTI-FUNCTION BUTTON (MFB)
- H. PAIRING STATUS LED (WIRELESS USB RECEIVER)

RF WIRELESS MODE

XBOX MODE - Connect the wireless USB transmitter to any USB port on your Xbox game console. On the headset, double press the POWER BUTTON to switch into the Xbox mode. In Xbox mode, the receiver LED will be solid green. During Xbox mode, the VOLUME CONTROL WHEEL (D) will control your game volume. Tap the Volume Control Wheel once will toggle to control Game/Chat Balance. Tap the Volume Control Wheel again to switch back to game volume. To exit Xbox mode, double press the POWER BUTTON again to switch out.

PC - Connect the wireless USB transmitter to any USB (type-A) port on your PC. Press the power button on the headset. The headset powers on in RF wireless mode by default. The headset is designed to operate at a range of up to 50 feet (15.24m) from the transmitter, but other wireless devices, electronics and obstructions such as walls may impact performance.

UPDATE FIRMWARE

Please install CORSAIR iCUE software prior to use.

On first setup, please run iCUE and check for the latest firmware update via the Device Settings.

NOTE: The first time you use the CORSAIR HS80 MAX WIRELESS headset on a PC, the operating system will automatically install a device driver. After the device driver is installed, we recommend you reboot your PC before use.

PLAYSTATION - Connect the wireless USB transmitter to any USB port on your PS4 or PS5 console. Use the PlayStation UI to set “Output to Headphones” to “All Audio”. Adjust volume control (Headphones) to maximum level. Then adjust volume with the headset volume control.

BLUETOOTH MODE

The headset can connect to simultaneous RF and Bluetooth®.

With the headset powered on, enable pairing by holding the MFB until the status LED rapid blinks red and blue. When the headset is paired, the status LED will blink blue. To toggle Bluetooth on or off, press and hold the MFB for two seconds. When the headset is in RF wireless mode the status LED will blink red, orange or green depending on the current battery level. The headset will default to the last mode it was set to when turned off.

ANSWERING AND ENDING PHONE CALLS

To answer an incoming call, single press the MFB. To end the call, single press the MFB again.

LISTENING TO MUSIC (MEDIA PLAYBACK)

To play a track, single press the MFB. To pause playback, single press the MFB again. To skip forward, press the MFB twice quickly. To skip backwards, press the MFB three times quickly.

NOTE: When connected to RF and Bluetooth, the volume control will only adjust your RF volume. Please use your Bluetooth device to control its volume levels.

FOR OPTIMAL WIRELESS PERFORMANCE

- Place the wireless USB receiver in an open, unobstructed area.
- Make sure the battery is fully charged before initial use.
- Do not leave the battery fully discharged for long periods. Battery life is maximized by keeping the battery in a partially charged state.
- Keep the headset at room temperature (20–30°C or 68–86°F).

NOTE: Prolonged listening at high volumes may adversely affect your hearing. Take breaks between sessions and always begin with the volume at a low level before increasing.

DOLBY ATMOS FOR XBOX SETUP

- Navigate to the Settings menu on your Xbox.
- Go to General > Volume & Audio Output.
- Go to Headset Audio > Headset Format.
- Select Dolby Atmos® for Headphones.
- Follow the prompts to download the Dolby Access app from the Xbox Store.
- Open the Dolby Access app and select Dolby Atmos for Headphones.

CORSAIR iCUE

Go to corsair.com/icue to download the CORSAIR iCUE software.

Using iCUE software will enable the full feature set of the HS80 MAX WIRELESS v2 headset. The USB Wireless Receiver must be connected to your PC to use iCUE software.

Note: If the headset is used without software, some features will be disabled.

- Install the iCUE software on a PC running Windows 10 or later, or on macOS.
- After installation is complete, reboot your PC, and launch iCUE.

iCUE software can be used to:

- Select and customize audio equalizer (EQ) settings.
- Assign and customize the EQ scroll press settings.
- Enable and adjust your microphone sidetone levels.



MICROPHONE CONTROL

Raising the microphone boom up will mute the microphone and lowering the microphone boom will unmute the microphone.

The headset will sound when the microphone is muted or unmuted.

VOLUME CONTROL

Use the volume control/EQ select wheel to adjust volume up or down. When connected to simultaneous RF and Bluetooth, please use your Bluetooth device to control it's volume levels. In addition, pressing and holding the volume wheel for 1 second cycles through four audio EQ presets.

CHARGING

The CORSAIR HS80 MAX WIRELESS Headset must be fully charged before its first use.

- Connect the USB charging cable to any working USB port on your PC.
- Connect the USB charging cable to the CORSAIR HS80 MAX WIRELESS Headset.

The CORSAIR HS80 MAX WIRELESS Headset battery has no “memory effect”, so there is no need to completely discharge it before recharging. Remember that the USB charging cable requires a high power (USB 2.0 or better) port. Some USB ports found on older devices do not support USB 2.0.

BATTERY STATUS LED INDICATIONS (ON HEADSET)

LOW	MEDIUM	
RED	ORANGE	


The status LED will pulse while being charged and turn solid green at full charge. When not being charged, the status LED will blink based on the power levels shown above.

WIRELESS STATUS LED INDICATIONS (ON WIRELESS USB RECEIVER)

- When the receiver is connected to the headset and operating normally, the LED will turn solid white.
- If the receiver cannot connect to the headset, the LED will blink red rapidly.
- If headset is turned on and the receiver is powered on and LED is still blinking red, please use iCUE software to re-pair the transmitter to the headset.

BATTERY REMOVAL INFORMATION

This product uses a rechargeable battery and safety guidelines must be followed in the event that the product is disabled for disposal and recycling. To safely remove the battery for disposal and recycling, follow the numbered steps with the below diagrams.

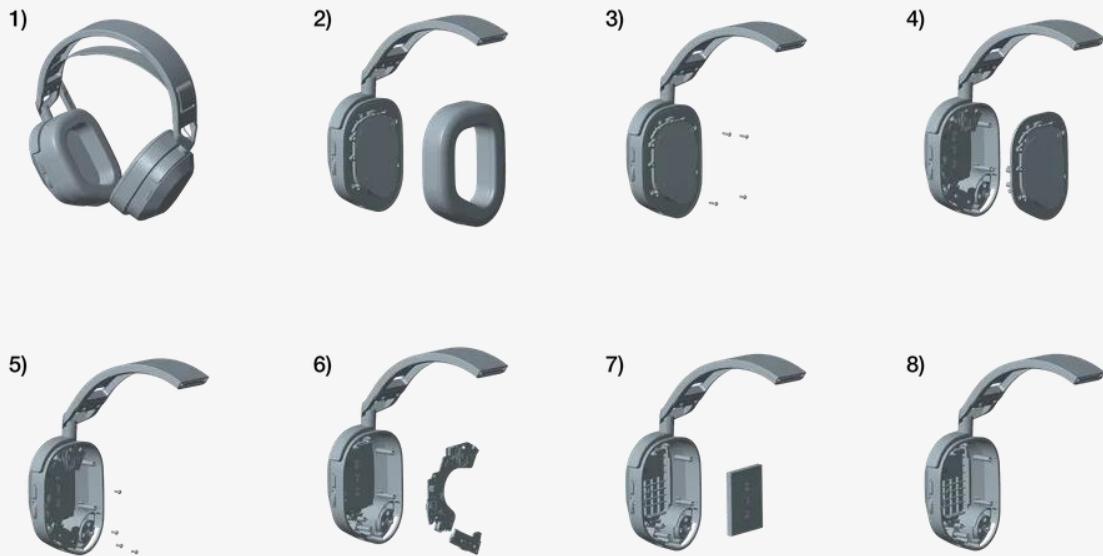

CORSAIR MEMORY, Inc. encourages customers to recycle used electronic hardware and rechargeable batteries in accordance with local laws and regulations.

FCC ID: 2AAFM-RDA0056 (Headset)

FCC ID: 2AAFM-RDA0057 (Dongle)

IC: 10954A-RDA0056 (Headset)

IC: 10954A-RDA0057 (Dongle)

M/N (Model): RDA0056 (Headset)

M/N (Model): RDA0057 (Dongle)


DOLBY LABORATORIES

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

COPYRIGHT / LEGAL INFORMATION

© 2023 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks of CORSAIR in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured.



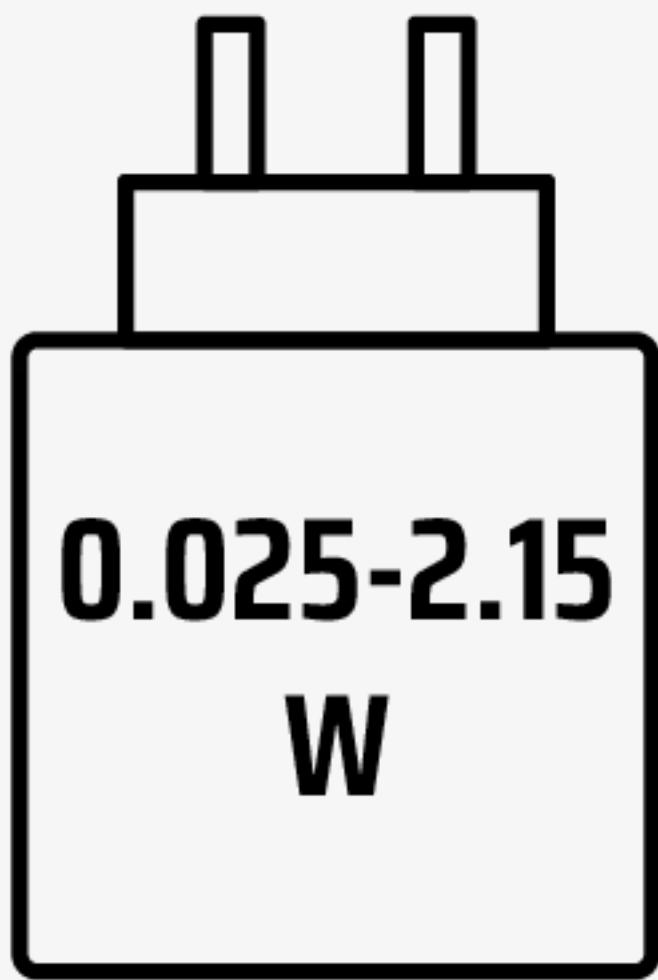

The power delivered by the charger must be between min [0.025] Watts required by the radio equipment, and max [2.15] Watts in order to achieve the maximum charging speed.