CORSAIR M75 AIR WIRELESS

FPS Gaming Mouse

CHARGING THE MOUSE

IMPORTANT: The DU M75 AIR WIRELESSST mouse must be fully charged before its first use.

Connect the mouse to an available USB 2.0 or 3.0 port on your PC with the USB CHARGING / DATA CABLE (M).

The MULTI-PURPOSE LED INDICATOR (D) on the mouse will begin pulsing green to denote battery charging and will turn solid when charging is complete.

GETTING TO KNOW YOUR MOUSE



IMAGE FPO

Α	LEFT MOUSE BUTTON	Н	POWER / WIRELESS MODE
			BUTTON
В	RIGHT MOUSE BUTTON	1	USB WIRELESS RECEIVER
			STORAGE
С	MIDDLE CLICK / SCROLL WHEEL	J	FORWARD BUTTON
D	MULTI-PURPOSE LED	K	BACK BUTTON
	INDICATOR		
Е	MARKSMAN OPTICAL SENSOR	L	USB WIRELESS RECEIVER
F	USB CHARGING / DATA PORT	M	USB CHARGING / DATA CABLE
G	100% VIRGIN-GRADE PTFE		

SETTING UP 2.4GHz SLIPSTREAM WIRELESS

Hyper-fast sub-1ms wireless connection is designed for no-compromise gaming grade performance.

- Connect the USB WIRELESS RECEIVER (L) to an available USB 2.0 or 3.x port located on the front panel of your PC or nearby USB port. (e.g. on CORSAIR MM700, MM800, MM1000 mousepads).
- The MULTI-PURPOSE LED INDICATOR (D) will turn solid white when connected.
- If the MULTI-PURPOSE LED INDICATOR (D) is blue, simply press the POWER
 / WIRELESS MODE BUTTON (H) once and it will turn white.
- Download the iCUE software from www.corsair.com/downloads.
- Run the installer program and follow instructions for installation.

If reconnection is required, initiate USB wireless receiver pairing via the iCUE software settings menu.

SETTING UP BLUETOOTH WIRELESS

Bluetooth wireless is best for everyday computing tasks, productivity, and office applications.

• Initiate Bluetooth pairing on your Bluetooth 4.0 or higher enabled device.

- Power on your mouse by holding down on the POWER / WIRELESS MODE BUTTON (H) for 5 seconds, or until the MULTI-PURPOSE LED INDICATOR (D) lights up.
- Press and hold down the SCROLL WHEEL (C) and then press the POWER / WIRELESS MODE BUTTON (H) once to enter Bluetooth pairing mode.
- Follow the instructions provided to successfully connect your device.
- The MULTI-PURPOSE LED INDICATOR (D) will turn solid blue when connected.

MOUSE STATUS AND INDICATIONS

Wireless connection and battery status are communicated through the MULTI-PURPOSE LED INDICATOR (D).

BATTERY STATUS	MULTI-PURPOSE LED INDICATOR
Battery charging	Pulsing green
Battery critical, recharge required	Pulsing red
Battery low, recharge soon	Blinking red
Battery Medium	Blinking amber
Battery high	Blinking green
Battery charged	Green

WIRELESS STATUS	MULTI-PURPOSE LED INDICATOR
2.4GHz wireless mode – pairing	Blinking white
2.4GHz wireless mode – paired	White
2.4GHz wireless mode – pairing failed	Pulsing white
BT wireless mode – pairing	Blinking blue
BT wireless mode – paired	Blue
BT wireless mode – pairing failed	Pulsing blue

CHANGING DPI AND PROGRAMMABLE BUTTONS

To tailor your DPI and programmable buttons to your preferences, you must have iCUE installed on your device.

- Download the iCUE software from www.corsair.com/downloads.
- Run the installer program and follow instructions for installation.
- Connect the USB WIRELESS RECEIVER (L) to an available USB 2.0 or 3.x port located on the front panel of your PC or nearby USB port. (e.g. on CORSAIR MM700, MM800, MM1000 mousepads).
- Once connected, follow the instructions presented in iCUE for how to customize your M75 AIR.

BATTERY REMOVAL INFORMATION

NEED IMAGE

This product uses a rechargeable battery and safety guidelines must be followed in the event that the product is disabled for disposal and recycling. To safely remove the battery for disposal and recycling, follow the numbered steps with the below diagrams.

CORSAIR MEMORY, Inc. encourages customers to recycle used electronic hardware and rechargeable batteries in accordance with local laws and regulations.

FCC ID: 2AAFMRGP0159 (Mouse)

FCC ID: 2AAFMRGP0146 (Dongle)

IC: 10954A-RGP0159 (Mouse)

IC: 10954A-RGP0146 (Dongle)