

Section Header	Logos	Content								
GETTING TO KNOW YOUR KEYBOARD		 A. GAME MODE BUTTON B. G-keys C. Key Matrix D. Color LCD screen E. Rotary Knob F. Detachable braided Type-C cable G. 2 in 1 Keycap & Switch puller H. Dongle and connectivity switch Keyboard RMN RGP0173 Dongle receiver RGP0177								
SETTING UP YOUR KEYBOARD		Connecting the keyboard USB connector (E) to an available USB 3.0 or better Type-A port on a compatible device including: <table><tr><td>Windows® PC</td><td>Apple Mac®</td><td>Microsoft Xbox One*</td><td>Sony PlayStation 4**</td></tr><tr><td></td><td></td><td>Microsoft Xbox Series X S*</td><td>Sony PlayStation 5**</td></tr></table> *Keyboard is compatible out of the box, see corsair.com/xbox-support for details. **See Connecting to Sony PlayStation section.	Windows® PC	Apple Mac®	Microsoft Xbox One*	Sony PlayStation 4**			Microsoft Xbox Series X S*	Sony PlayStation 5**
Windows® PC	Apple Mac®	Microsoft Xbox One*	Sony PlayStation 4**							
		Microsoft Xbox Series X S*	Sony PlayStation 5**							

FACTORY RESET		Hold ESC key for two seconds while device is plugged in to erase onboard memory profiles and restore factory default settings.									
3-Way Mode Switch	2.4 GHz on Wired/Off Bluetooth on	• USB dongle connect to USB device • Connection priority: Cable > HW Switch • Switch to USB mode automatically when cable is plugged in • 2.4G mode: 2.4GHz/BLE Indicator turns solid white 3s turns solid white and should always be on as long as in 2.4G mode if connected, pulsing white if not connected constantly breathe(pulse) for disconnected, and 120s rapid blink for pairing • BLE mode: 2.4GHz/BLE Indicator turns solid blue 3s turns solid blue and should always be on as long as in BLE mode if connected, pulsing blue if not connected constantly breathe(pulse) for disconnected, and 120s rapid blink for pairing									
CONNECTI NG TO SONY PLAYSTATI ON		The keyboard also has a special mode to support Sony PlayStation 4 and 5 that can be activated via shortcut. <table><tr><th>SHORTCUT</th><th>FUNCTION</th><th>INDICATION</th></tr><tr><td>FN+  (Hold for 5 seconds)</td><td>Switch to PlayStation mode</td><td> Blinks white 5 times over 5 seconds</td></tr><tr><td>FN+  (Hold for 5 seconds)</td><td>Switch back to standard mode</td><td> Pulses white 2 times</td></tr></table> NOTE: Available functions may be limited depending on gaming console support and application.	SHORTCUT	FUNCTION	INDICATION	FN+  (Hold for 5 seconds)	Switch to PlayStation mode	 Blinks white 5 times over 5 seconds	FN+  (Hold for 5 seconds)	Switch back to standard mode	 Pulses white 2 times
SHORTCUT	FUNCTION	INDICATION									
FN+  (Hold for 5 seconds)	Switch to PlayStation mode	 Blinks white 5 times over 5 seconds									
FN+  (Hold for 5 seconds)	Switch back to standard mode	 Pulses white 2 times									

Warranty Year

Specify how many years of warranty applies to this product

Warranty Year	2 years
---------------	---------

Legal/Copyright Statement

Item	Copy (text only)	Images/Line-art/Logos
Legal statement	© 2025 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks of CORSAIR in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured.	

Compliance Statement

Ex. FCC ID, IC#, KCC ID... etc

US	FCC ID
Canada	IC
Korea	KCC
Taiwan	NCC