
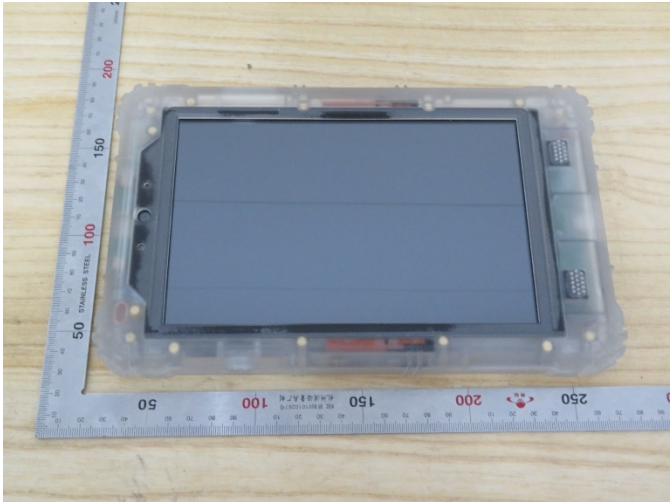
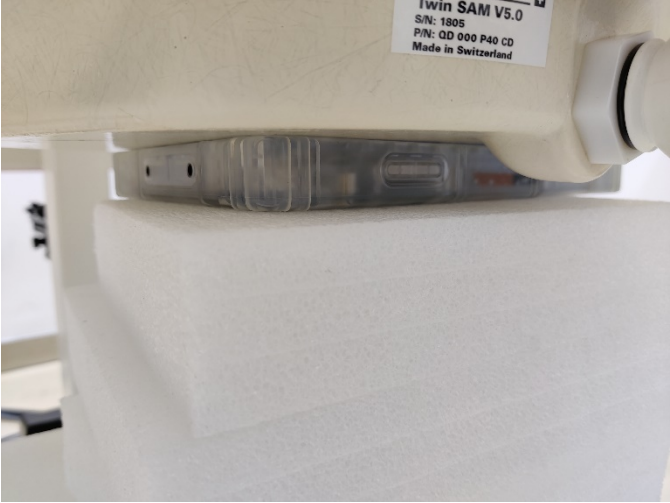
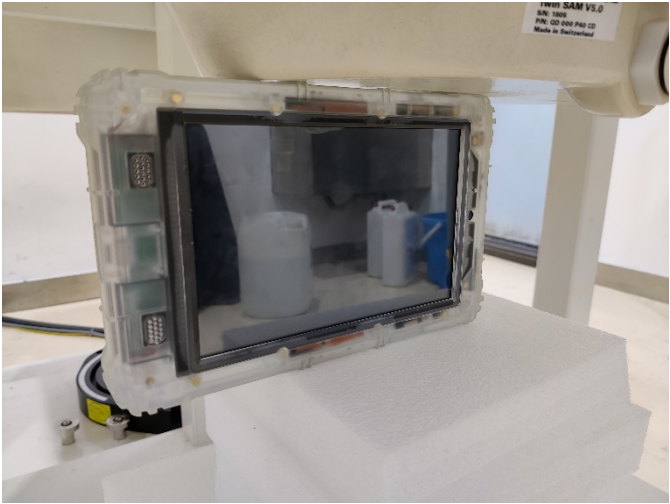
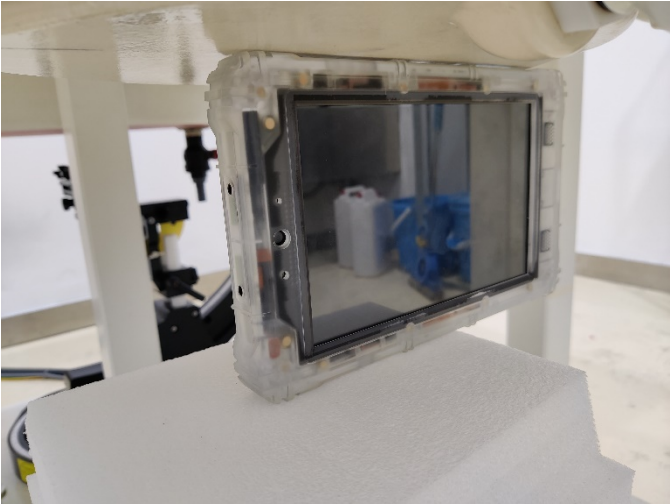


Photo

Sample	
Front view	Rear view
	

Test position	
Top Edge (0mm)	Back surface(0mm)
	
Left Edge(0mm)	Right Edge(0mm)
	

Antenna location diagram

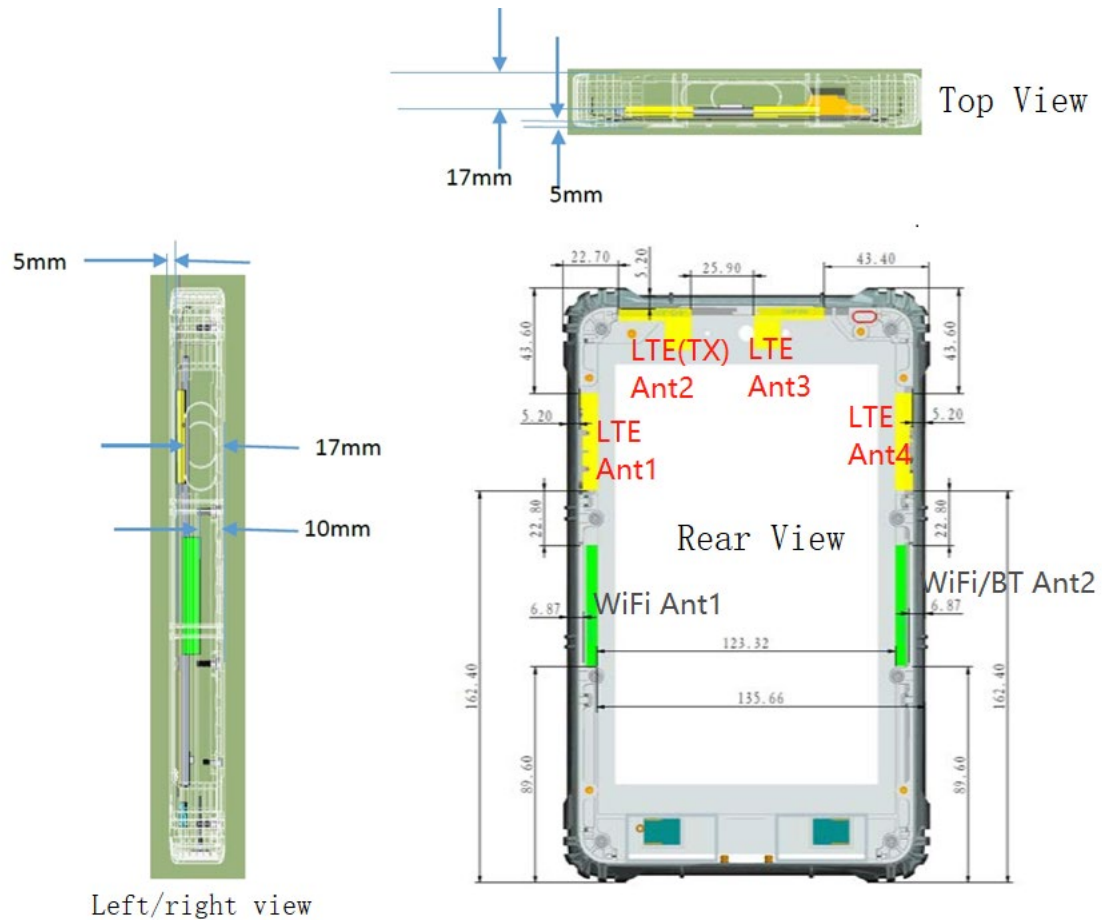

Note: Only antenna 2 can be used as transmitting/receiving antenna. Other antennas only can be used as receiving antenna.

2 x WiFi & BT ANT
WIFI Freq: 2412MHz~2462MHz, 5150MHz~5350MHz, 5725MHz~5825MHz

BT Freq: 2402MHz~2480MHz

4 x LTE ANT
Band 48 Freq: 3552.2MHz ~ 3697.5MHz