

Zongle USB-A

Audio Transmitter

QUICK START GUIDE

How to get started with the Zongle and the Home Line III range of Acton III, Stanmore III and Woburn III

Preparation

The Zongle is connected to your playback device (computer, phone or tablet), either directly via the USB-A port or with an adapter via the USB-C port or Lightning port. Adapters are available online and in most consumer electronics stores and the most common adapters used with the Zongle are are:

Older PC or Mac - no adapter needed

Newer PC or Mac – USB-C (M) to USB-A (F)

iPad or iPhone – Lightning (M) to USB-A (F) Android tablet or phone – USB-C (M) to USB-A (F)

Note: Check what adapter is needed for connecting the Zongle to your playback device.

Setting up the Zongle with your Playback device

1. Connect your Zongle to your playback device, either directly or via an adapter
2. Set the Zongle as your audio output.

This is done automatically on most phones or tablets. If you're connecting the Zongle to a PC or Mac,

go to Settings and set the Zongle as the audio output.

3. Begin playing music on your playback device at mid volume and the Zongle will show a blue light. You

will not be able to hear any music until you perform the next step below.

Connecting your playback device with the speakers

1. Connect the mains lead to the mains input on your speaker, then connect the mains plug to the wall socket. Use the power switch (8) to turn the speaker on.
2. Use the source button (3) to select Bluetooth.
3. Push and hold both the source button (3) and the media control button (7) for a minimum of 3 seconds,

until the music starts playing.

Your Home Line III speaker is now connected to the Zongle using Bluetooth Low Energy Audio which means that the Bluetooth Classic connection is deactivated. You can return the speaker to its original settings by repeating the 3 second press on both buttons.

Important: Always read the safety instructions that are supplied with any electronic device before using it.

Set the correct volume

You can use the top panel audio-controls (3) to set the speaker volume, bass, and treble. Adjusting the volume on your playback device will change the volume on all speaker volumes relative to their setting.

1. Ensure that any equalizer in your music player is set to 'Off' or 'Flat'.
2. Set the playback device to mid volume.
3. Set the volume, bass, and treble on each speaker.

Use the volume setting on the playback device to adjust the overall volume during the day.

Use the network standby mode

Home Line III speakers will go into network standby if left unused for 10 minutes to save energy. The Zongle and your speaker will stay connected and the speaker will wake up when music is resumed.

Note: The button on the Zongle has no function and will not wake-up the speakers or resume playback.

Perform a factory reset

A factory reset will return the speaker to its original settings, excluding any firmware updates.

*Note: This will delete all user settings, the speaker will return to normal mode, and the speaker needs to be set up again, see **Connecting your playback device with the speakers**.*

1. Push and hold the media control (7) for more than 10 seconds and the speaker will reset.