



BUSH - Bluetooth Stereo Speaker

User Instructions – Please keep for future reference SPK310

BUSH

SPK310

Important – Please read these instructions fully before using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct use and maintenance.

Functions & Controls Customer Helpline: 0870 600 3030

Please familiarize yourself with the parts and accessories listed below

Accessories included

- 1 x SPK310
- 1 x Micro USB cable
- 1 x Instruction manual

Overview of controls

1. Knob Switch (Power ON/OFF [Press and hold]; Vol+Vol- [Turn left / right])

2. AUX IN (Connect the mobile phone via the 3.5mm Audio cable directly)

3. Micro USB INPUT Socket (Connect the provided micro USB cable to your computer for charging up the speaker)

4. Battery charging indicator

5. Internal micro USB cable

6. USB OUTPUT (Charge the mobile phone)

7. Mode indicator

8. Microphone

User Instructions

Power ON/OFF

Press and hold the knob switch to turn the unit on. The unit will beep. The LED indicator will blink in blue once, then light up in blue color. Press and hold the knob switch to turn the unit off. The LED indicator will disappear.

Power bank

SPK310 provided with an internal micro USB cable, you can charge your mobile phone via the cable directly.

Bluetooth

1. Turn on the Bluetooth function of your Bluetooth device.

2. Turn on the speaker will beep.

3. Press and hold the knob switch button twice continuously and quickly to activate Bluetooth pairing. The unit will beep, then the LED indicator will flash blue once. When successfully paired, the unit will beep once and the LED indicator will regularly flash blue at 5-second intervals (approx.).

4. Search for the unit with your Bluetooth device and you should see 'SPK310'. Enter password '0000' if required.

Operations

To	Press / Hold	Effect
Increase Volume	Turn right the knob switch	Louder
Decrease Volume	Turn left the knob switch	Quieter
Answer Call (during playback)	Press once the knob switch	Answer call & stop playback
End Call (during playback)	Press once the knob switch	End Call
Reject Call (any time)	Press the knob switch for about 1 second	Reject call
Use Speaker for call (during call)	Press the knob switch for about 1 second	Switch to unit's speaker
Use mobile phone for call (during call)	Press the knob switch for about 1 second	Switch to mobile phone

5 **6**

Safety Information

Important – Please read these instructions fully before installation

Caution

The unit has a built-in rechargeable Li-polymer battery. The battery is charged automatically when the micro-USB INPUT socket is connected with your computer or USB charger.

1 The speaker needs to be fully charged once a month.
2 It takes 5 - 6 hours (approx.) to fully charge the battery.
3 A fully charged unit has up to more than 6 hours of playback time.
4 Do not overcharge the battery as it may shorten its life.
5 To prolong battery life & sound quality, do not use while charging.

Troubleshooting

In the unlikely event of difficulties with your appliance please follow the troubleshooting guide below.
If the problem persists, contact the retailer if the machine is still under guarantee.
Customer Helpline: 0870 600 3030

3 **8**

Contents

Safety Information	2-4
Functions & Controls	5
Accessories included	5
User Instructions	6
Power ON/OFF	6
Bluetooth	6
Power bank	6
Operations	6-7
LED Indicator Status	7
Caution	8
Troubleshooting	8
Rechargeable battery removal	9
Specifications	9

Product Codes SPK310

1 **2**

User Instructions

Operations

Call functions only applicable if mobile phone is paired with the speaker and both are switched on.

When the minimum volume or maximum volume is reached, the unit will beep.

- To successfully answer a call, ensure your mobile device supports Bluetooth HFP.
- If the Bluetooth device is configured to take full advantage of the unit's functions, please refer to your Bluetooth device's manual for detailed instructions.
- When using the AUX IN function, you need to use your media device for all operations.

LED Indicator Status

The below table provides a summary of the LED indicator statuses:

Unit Mode	LED Color	LED Action
On	Red (Mode indicator)	Blinks once
Standby, without pairing	Blue (Mode indicator)	Blinks twice every other 1.5 seconds
Pairing	Blue (Mode indicator)	Blinks rapidly
Connected to Bluetooth Device	Blue (Mode indicator)	Blinks twice every other 5 seconds
AUX IN	Red & Blue (Battery indicator)	Solidly lit & Blinks as the Bluetooth mode
Charging	Red (Battery indicator)	Solidly lit
Charging complete	Blue (Battery indicator)	Solidly lit

4

CE This appliance complies with the following EU directives: 2006/85/EC (EEC Low voltage directive, 2004/108/EC EMC directive, 2002/96/EC WEEE directive).

WEEE The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate disposal of this product. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

4

Safety Information

Important – Please read these instructions fully before installation

Rechargeable battery removal

In order to preserve the ecology please dispose of this unit properly so that it can be recycled.

Do not dispose of it as unsorted waste.

For more detailed information about recycling of this product or battery, please contact your local Civic Office or your household waste disposal service.

If need to disassembly the battery, please follow the steps as follow:

NOTE: The instruction for maintenance person reference only. Special tools may required.

1. Pull the mains plug
2. Remove the locking stripes
3. Remove the iron net
4. Pull the knobs
5. Remove the knob and PCB.
6. Open the shell
7. Remove the battery

9 **2**

Specifications

Model	SPK310
Output Power	5W x2
Bluetooth	Bluetooth 4.0 (A2DP V1.2/HFP V1.6)
Dimension	186 (L) x 77 (W) x 65 (D) mm

Features and specifications are subject to change without prior notice.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on unstable or unstable surfaces as the unit may fall off or tip over. The mains unit should be easily accessible, socket must be located near the unit.

Mains

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, immediately switch it off. If damage, switch it off at the mains and immediately withdraw the mains plug and consult your dealer.

正面

反面

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following tow conditions: (1) this device may not cause interference, and (2) this device must accept any interference, includinginterference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables auxappareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :(1) l'appareil ne doit pas produire de brouillage, et(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre lefonctionnement.