

# AUVIO

THE PERFORMANCE YOU NEED<sup>®</sup>

## Wireless Speaker Kit with Subwoofer Output

Please read this user's guide before using your new speaker kit.

User's Guide 1500491



2

### Install the Receiver

1. Connect the rear speakers to the receiver with speaker wires, matching polarities.
2. Connect the supplied AC adapter (15V, 4A) to the **DC IN 15V** jack, and then plug it into a standard household outlet.

**Note:**

- Make sure the exposed tips of the speaker wires do not touch each other, and make sure they are fully inserted into the terminals.
- This speaker kit is designed for connecting to your amplifier surround speaker terminals only.
- For speaker wires that have proprietary connectors, you may need to strip the end of the wires to allow connection to the receiver. However, check with the speaker manufacturer before doing this, as it may void the warranty.
- When the RCA cables are connected, audio input from the speaker terminal will be mixed.
- Unplug the AC adapters from the AC outlet before unplugging it from the transmitter or receiver.
- Use the supplied AC adapters only. Using an AC adapter not designed for this product may cause damage.

3

### Package Contents


- Transmitter
- 9V AC Adapter
- Stands (2)
- User's Guide
- Receiver
- 15V AC Adapter
- 6-foot speaker wire (2)

### Features

- 2.4GHz digital wireless link provides crystal-clear audio signals.
- 34-channel selection.
- Up to 100 feet (30.5m) operation distance between transmitter and receiver (line of sight).

### Install the Transmitter

1. Make sure your amplifier is off. Connect the transmitter to your amplifier's speaker output terminals with the provided 6-foot speaker wire, matching polarities. Or connect your transmitter to the amplifier's RCA output ports with RCA cables (not included).
2. Connect the supplied AC adapter (9V, 200mA) to the **DC IN 9V** jack, then plug it into a standard household outlet.

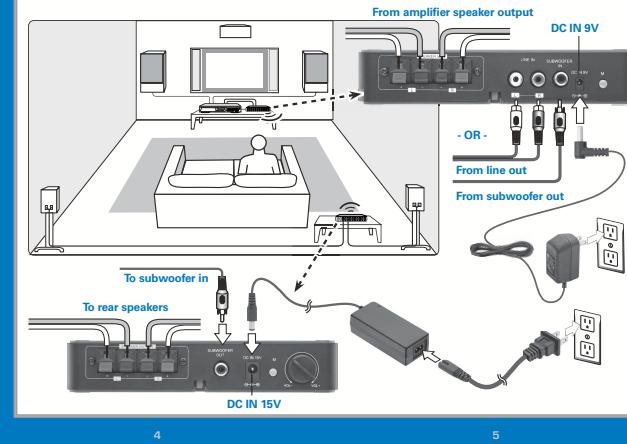


4

5

### Place the Transmitter and Receiver

The transmitter and receiver must be placed within 100 feet for proper operation. They can be placed horizontally on a flat surface, vertically in the provided stands, or mounted on a wall using the mounting holes on the bottom.

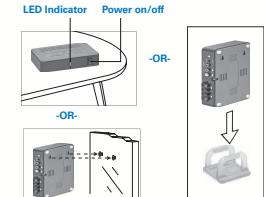

**Note:**

- If you need to mount the receiver on a wall, install it against the wall in such a way that the ventilation slots are not blocked.
- To optimize the reception performance, place the transmitter and receiver in the same orientation.

6

## Use Your Speaker Kit

1. Once the AC adapters are connected, the receiver LEDs light green. The speaker kit enters standby mode.
2. Turn on your amplifier and then play the audio or video source through your amplifier.
3. When an audio signal is detected by the transmitter and the transmitter signal is detected by the receiver, the speaker kit will automatically go into active mode. The transmitter and receiver LEDs will both turn blue.

 **Note:** After powering on, if there is no signal input within 17 minutes, the speaker kit enters standby mode.

## Change the Channel

If you experience any interference, press and hold the **M** button on both units. The units will then automatically pair.



7

## Adjust the Volume Balance

1. Power on the transmitter and receiver, and then turn on the amplifier and adjust it to your normal listening level.
2. Adjust the receiver's **VOL +/-** control to balance the front and rear speaker sound level. This step is only necessary during first-time installation of the speaker kit with your system.
3. After balance setup, simply use the volume control on your amplifier to adjust speaker volume during playback.



8

## Specifications

Audio Output Level	Subwoofer out: 2 V Speaker out: 25W (Load at 4Ω)
Input Sensitivity	Line in: 1V Subwoofer in: 2 V
Frequency Response	Subwoofer: 20Hz-200Hz Speaker: 20Hz-20kHz
Audio Distortion	Subwoofer: <1% Speaker: <10%
Signal to Noise Ratio	100 dB (20.6mV)
Operation Distance	100 ft (30.5m)
Dimensions (HxWxD)	6.9 X 3.9 X 1.6 inch 175x100x32mm
Weight	3.3 lb. (1.5kg)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct this interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

9

- Increase the separation between the equipment and receiver.
- Connect the equipment and receiver on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship for a period of one (1) year from the original purchase for **refunds** (90) days after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage caused by or attributed to acts of God, such as floods or lightning, or excess voltage or current; (b) improper or incorrect performed repairs by persons who are not a licensed or certified service center; (c) damage caused by fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) damage by misuse, abuse, or negligence. Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided above, (a) repair the product at no cost to the customer and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products

may be used in the performance of warranty service. Required or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY, AND IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ANY WARRANTY FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD. EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY, WHETHER IN CONTRACT, WARRANTY, OR OTHERWISE, FOR ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF THE BREACH OF ANY WARRANTY, WHETHER EXPRESS OR IMPLIED. IGNITION L.P. SHALL NOT BE LIABLE FOR INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, PROFITS, OR SIMILAR INCIDENTAL, CONSEQUENTIAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of limitation of incidental or consequential damages, so the above limitations or disclaimers may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact Ignition L.P. at:

Ignition L.P., 3162 Maple Ave., Suite 450, Dallas, TX 75201  
02/09

For product support, call  
**1-866-315-0426**

11

 Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



12

© 2013. Ignition L.P. All rights reserved. Audio is a registered trademark used by Ignition L.P.  
Ignition and user documentation are recyclable. User documentation contains recycled material.

Printed  
in China  
05A13  
1500491