

GSM MOBILE PHONE

User Manual

Trade Name:EAGLE

Model Name:M03

FCC ID:2AAHZM03

Preface

Thank you for choosing M03 mobile phone!

M03 is an intelligent mobile phone, with the ultra-thin fashion appearance, it supports application software installation and unload from Android electronic market, Wi-Fi network connection, multi-touch capacitive screen, high-pixels dual cameras, high-quality audio and HD video, etc. It will lead you into an entirely new and fascinating mobile internet world.

This manual systematically introduces many functions of M03 mobile phone, tips and notes. Please carefully read it before using M03.

The illustrations in this manual are only for reference, and their functions are based on the real product. The company reserves the right of final interpretation.

■ About Manual

This manual introduces basic functions of M03

Note:

The illustrations in this manual are only for reference, and their functions are based on the real product.

1. You are advised to use the attached earphone & Charger & Battery.
2. Because this product is updated continuously, this manual may not introduce all the features and it is only for your reference, the features are based on real product.

■ Accessories

1. M03 Mobile Phone,
1. Battery,
2. Charger
3. Data cable
4. Earphone
5. Manual

Note: You are advised to use our original accessories.

Contents

I. SAFETY PRECAUTIONS	6
II. FIGURE	7
III. QUICK USER GUIDE	7
1. <i>POWER ON/OFF</i>	7
2. <i>TURN ON/OFF SCREEN</i>	8
3. <i>LOCK AND UNLOCK</i>	8
4. <i>SWITCH DESKTOPS</i>	8
5. <i>HOT BUTTONS</i>	8
6. <i>DESKTOP MENU</i>	8
7. <i>MAIN MENU</i>	8
8. <i>MOVE APPLICATIONS</i>	9
9. <i>DELETE APPLICATIONS</i>	9
10. <i>NOTIFICATION BAR</i>	9
11. <i>STATUS BAR</i>	9
12. <i>CHOOSE WALLPAPER</i>	9
13. <i>RECENT TASKS</i>	9
14. <i>BLUETOOTH CONNECTION</i>	10
15. <i>Wi-Fi CONNECTION</i>	10
16. <i>INPUT METHODS</i>	10
17. <i>DESCRIPTION OF KEYS</i>	10
IV. BASIC FUNCTIONS	10
1. <i>MAKE A CALL</i>	10
2. <i>CONTACTS</i>	11
3. <i>CALL-LOG</i>	12
4. <i>MESSAGES</i>	12
5. <i>BROWSER</i>	13
6. <i>SEARCH</i>	14
7. <i>EMAIL</i>	14
8. <i>MUSIC</i>	15
9. <i>GALLERY</i>	16
10. <i>MOVIES</i>	16
11. <i>CAMERA</i>	17
12. <i>FM RADIO</i>	17
13. <i>SOUND RECORDER</i>	18
14. <i>FILE EXPLORER</i>	18
15. <i>NOTES</i>	19
16. <i>CLOCK</i>	20
17. <i>CALENDAR</i>	20
18. <i>CALCULATOR</i>	20
19. <i>SEARCH CALLOG</i>	20


20.	<i>USER PROFILES</i>	20
21.	<i>BACKUP</i>	20
22.	<i>DOWNLOADS</i>	20
23.	<i>SETTINGS</i>	21
V.	APPLICATIONS	23
1.	<i>F-SECURE LAUNCHER</i>	23
2.	<i>NEWSHUNT</i>	23
3.	<i>OPERA MINI</i>	23
4.	<i>PLAY STORE</i>	23
5.	<i>SAR (SPECIFIC ABSORPTION RATE)</i>	23
VI.	HOW TO RESOLVE MALFUNCTION	23

I. Safety Precautions

Before using a mobile phone, please read and observe the following rules.

	While driving or answering a call, please use an earphone or stop your car.		Mobile phone interferes with aircraft communication, please ensure that mobile phone power off during the entire flight.
	All mobile phones may be disturbed, and affect their performance.		Please don't use mobile phone, and power off phone where medical equipments exist.
	To ensure the best performance or avoid damage to phone, please use the original accessories and batteries.		At the gas station and close to the fuel and chemicals and other dangerous goods, please power off your mobile phone to avoid explosion.
	To avoid interference of the blasting operation, In the scene of the explosion or post "Turn off the radio" icon in the local, please power off phone.		Please don't burn batteries as ordinary garbage, to avoid the risk of life and damage to the environments. Please abide by the local environmental policy, timely deal with or recycle the waste batteries.
	Before your mobile phone is connected with another equipment, please read carefully this manual to ensure safety.		Some small articles (such as T-Flash card, etc.) should be placed out of children reach , to prevent children swallowing or other hazard.
	Please backup the important information or keep a written record, to prevent its loss.		When sending an emergency call, please ensure your mobile phone power on and in a service area, inform your position, without permission, please don't end this call.

II. Figure

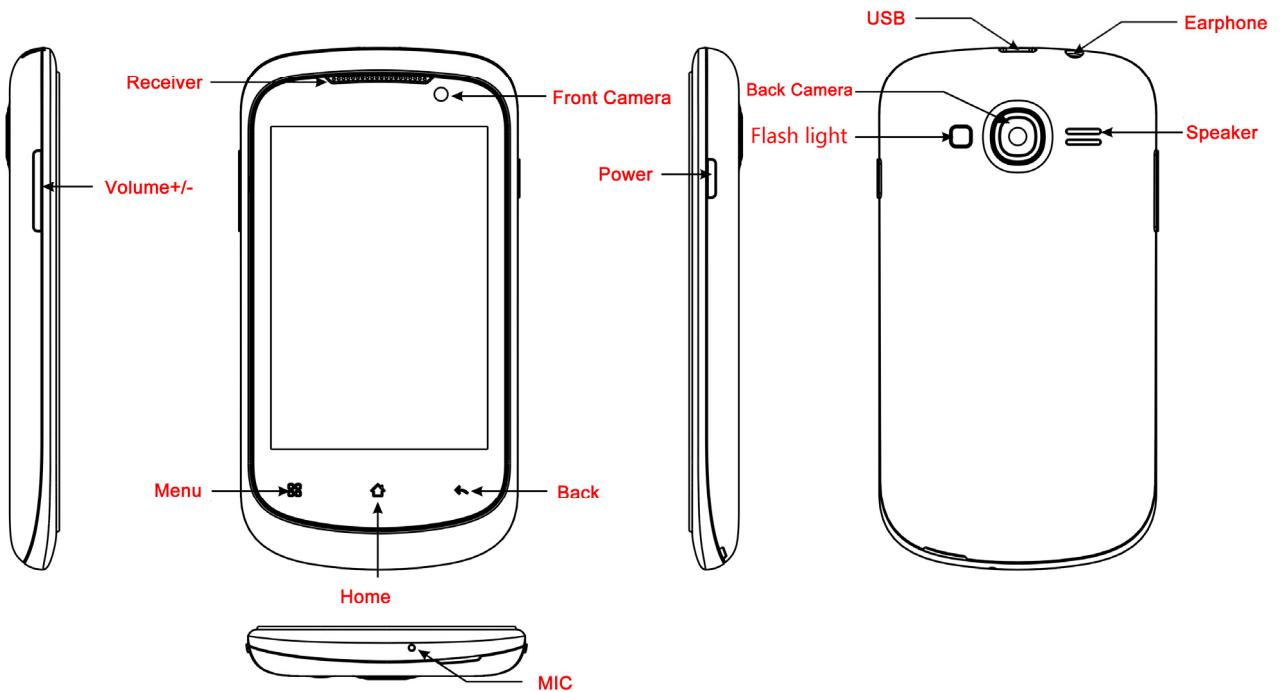

1. **LCD: 3.5 inches**, 320*480, 262000 colors
2. **Touch Buttons**:[Home], [Menu], [Back].
3. **Keys**:[Power], [Volume].
4. **Top Ports**: USB port , Earphone port.

Prompt: The illustrations in this manual are only for reference, and their functions are based on the real product.

III. Quick User Guide

The phone has not only the basic functions of mobile phone, but also support rich, practical and rapid feature functions, can be briefly introduced as follows:

1. Power On/Off

In the power-off state, long press **[Power]** key, it will power on; otherwise, in the power-on & unlock state, long press **[Power]** key, it will power off.

If you set up SIM lock or phone lock, after power-on, please input the code according to the requirements.In any other interface, short press this button to lock the screen.

Warning: As mobile phone can cause interference and dangerous where you are prohibited to use mobile phone, please power off your mobile phone.

2. Turn On /Off Screen

2.1 Turn Off Screen

Please short press **[Power]** to turn off the screen.

Prompt: *To save power, you can also set screen timeout time in Display Settings, when the timeout time is up, without any operation during the standby time, the screen will shut off automatically.*

2.2 Turn On Screen

When the screen is off, please short press **[Power]** to wake up the screen.

3. Lock and Unlock

3.1 Lock Screen

Please press **[Power]** to lock this screen to prevent some unexpected operations.

Prompt: *If screen timeout time is up, this phone will turn off and lock its screen during it is idle.*

3.2 Unlock Screen

After the screen is off, please press **[Power]** to wake up the screen, and then drag  rightwards to unlock the screen.

4. Switch desktops

In the idle mode, slide the screen to switch between the 1st~5th screens.

5. Hot Buttons



On the shortcut bar, touch  button to enter Dialer interface; touch  to enter Contacts;



touch  to enter Messaging; touch  to enter Browser; touch  to enter Main Menu.

6. Desktop Menu

On the desktop, press **[Menu]** key to display options, including: Add, Manage apps, Wallpaper, Search, Notifications and Settings. Touch and choose an option, and enter its interface, and operate the corresponding functions.

7. Main Menu

In main menu interface, slide the screen right and left to switch between all the applications and widgets. In Apps menu, touch and choose one, enter and run this application..

8. Move Applications



Choose a desktop, touch  button to enter Main Menu, long press an application, drag it onto the free area of the desktop, create this application shortcut on the current desktop. By this way, create any favorite application shortcut onto the 1st-5th desktops.

Prompt: Before creating an application shortcut, you ensure that there is free space to place this App. on this desktop.

9. Delete Applications



On the current desktop, long press an application shortcut, drag it onto , delete this application shortcut from the current desktop.

10. Notification Bar

On any interface, drag the screen downward from the top, you can display Notification bar; then drag the screen upward from the bottom, you can hide the notification bar.

You can view: the operator information of SIM 1 and SIM 2, USB connection state, SD card state, the notifications of new SMS & Call & Email, etc., touch an option to enter the corresponding interface. Touch  to delete the notifications of SMS or Call or Email, etc.



Touch  to open or shut WLAN; Touch  to open or shut Bluetooth; Touch  to adjust



LCD brightness; Touch  to open or shut Data connection; Touch  to open or shut



Silent; Touch  to open or shut Rotate state; Touch  to open or shut fly mode.

11. Status Bar

On the LCD top of the idle interface, it is Status Bar, it displays some relevant information, including: Wi-Fi, Bluetooth, Battery power, System time, Signal strength of SIM1 & SIM2, etc.

12. Choose Wallpaper

On the desktop, long press the blank area, display “Add to Home screen” menu, touch “Wallpapers”, choose a picture from Gallery or Live Wallpapers or Wallpapers to set as a wallpaper.

13. Recent Tasks

On any interface, long press **[Home]** to access to the recent tasks interface, view all the recent tasks, touch one of them to enter this App.

14. Bluetooth Connection

This device supports Bluetooth V 2.1+ EDR, about Bluetooth settings and operations, please refer to Bluetooth section in System Settings.

Prompt: Bluetooth function and operations are based on the real product.

15. Wi-Fi Connection

This device supports “Wi-Fi 802.11 b/g/n”, about Wi-Fi settings and operations, please refer to the Wi-Fi section in System Settings. The device supports hot spot mode.

16. Input Methods

This mobile phone is embedded “Android Keyboard”, user can install other input method apps.

Touch  to switch to English input mode; touch  to switch to numbers and symbols input mode.

17. Description of Keys

Key	Function
[Menu] Button	Short press to display options box.
[Home] Button	Short press to return to the desktop. Long press [Home] to access to the recent tasks interface.
[Back] Button	Press to return to the upper layer.
[Volume] Key	Press to adjust the volume for call or media player or system ringer.
[Power] Key	Long press [Power] key to power on or power off mobile phone. Short press [Power] key to turn off & lock the screen in any interface. Press it again to lighten screen.

IV. Basic Functions

1. Make a Call

1.1. Emergency Call

You can directly dial an emergency service call without SIM card. Different network uses different emergency numbers, please consult your network operations company for more details.

1.2. Domestic Call

Enter a phone number, touch  to make a call by SIM1 or SIM2. If you want to make a long-distance call, please add the area code before the telephone number.

1.3. International call

Enter country code & area code (usually area code without "0") & telephone number, touch  to make an international call by SIM1 or SIM2.

1.4. Answer a Call

When an incoming call arrives, slide  rightwards to answer this call.

1.5. Refuse a Call

When a call is coming in, slide  leftwards to refuse this call.

1.6. End a Call

After finishing a call, touch  to end this call.

2. Contacts

This phone can help you View, Edit, Save, Share or Delete contacts in the phone and SIM cards.

2.1. Contact List

In contacts list, touch  /  /  /  on the top, you can switch among Dialpad & Calls list & Contacts & Favorites.

In contacts list, press **[Menu]** button, perform the following functions:

2.1.1. Search

Search contacts by key words or key numbers.

2.1.2. New Contacts

Add new contacts in Phone or SIM1 or SIM2.

2.1.3. Contacts to display

Set contact list display style, such as Phone or SIM1 or SIM2.

2.1.4. Contacts Group

Access to Contacts Group, you can Add & View & Delete Group, and can add contacts into a group.

2.1.5. Contacts Delete

Delete one or some or all contacts from Phone or SIM1 or SIM2 or All contacts.

2.1.6. Accounts

Enter Accounts & sync interface, you can Add Account or Edit or Delete Account; you can also Set Accounts & Sync ON or Off.

2.1.7. Import /Export

After choosing this option, display option menu of Import/Export Contacts, including: Import from SIM card, Import from SD card, Export to SIM card, Export to SD card, Share visible contacts.

2.1.8. Memory Query

Enter Memory Query interface, view the contacts amount of Phone or SIM1 or SIM2 card.

2.1.9. Black List

Enter Black List interface, Add or Delete contacts in (or from) Black List.

2.2. Contacts View

Enter Contacts view interface, press **[Menu]**, perform the following functions:

2.2.1. Edit Contact

Enter this contact edit interface, modify its information, touch “Done” to save this record, touch “Revert” to cancel modifying.

2.2.2. Share

Share contacts by Bluetooth or Email or Messaging.

2.2.3. Delete

Delete the current contact.

3. Call-log



In main menu interface, touch / / / on the top, you can switch among Dialpad & Calls list & Contacts & Favorites.

3.1. Call-log list

After entering Call-log, it displays all call records. Touch the buttons on the bottom to switch among All & Missed & Outgoing & Received call records. Touch one record to enter its details.

In calls list, press **[Menu]**, you can perform the following:

3.1.1. Display Options

Display call records by SIM1 or SIM2.

3.1.2. Clear call log

Delete one or some or all call records.

3.1.3. Firewall

Access to Blacklist interface to view Black list logs or SMS list logs. .

4. Messages



In main menu interface, touch to enter “Messages”.

4.1. Folder View

After touching this option, enter Messages folders interface, view Inbox or Outbox or Sent or Drafts,etc.

On messaging folders list, press **[Menu]**, perform such operations as Message View & Compose & Search & Settings & Cell Broadcast SMS.

4.2. Messages List

On messages list, touch “New Message” to enter message edit interface; touch one message to enter its details.

On messages list, press **[Menu]**, it displays the options menu, including: Folder View, Compose, Delete Threads, Search, Settings and Cell Broadcast SMS, touch an option to perform its corresponding operation.

4.3. Message View

After touching one message, enter its view, you can view its content, and also type a new message to reply the sender.

On message view interface, press **[Menu]**, perform such operations as Call & Add subject & Attach & Insert Smiley & Delete Thread & All threads & Add to Contacts.

4.4. Compose

On messages list, touch “New message”, you can compose a new message, touch  to choose the recipient(s) from Contacts or enter the recipient's phone number, enter message content, touch  to send this message by SIM1 or SIM2.

On message edit interface, press **[Menu]**, perform such operations as Add subject & Attach & Send & Discard & All threads.

4.5. Delete Threads

On messages list, press **[Menu]**, choose “Delete Threads”, you can delete a or some or all messages.

4.6. Search

On messages list, press **[Menu]**, choose “Search”, you can search some messages by key words.

4.7. Settings

On messages list, press **[Menu]**, choose “Settings”, enter message settings interface, you can perform the corresponding operations, including: Storage Settings or SMS Settings or MMS Settings or Notifications Settings or Forwarding Settings or Font Settings.

4.8. Cell Broadcast SMS

On messages list, press **[Menu]**, choose “Cell Broadcast SMS”, enter Cell Broadcast SMS list, you can view Cell Broadcast SMS. Press **[Menu]**, you can perform Cell Broadcast SMS settings.

5. Browser



In main menu, touch  to enter and run Browser, and access to the websites.

Press **[Menu]** to display options menu, perform the following:

- ✧ **New Window:** Open a new window and type a new website address.
- ✧ **Bookmarks:** Access to Bookmarks interface, add or view or delete bookmarks, and also access to Most Visited or History.



✧ **Windows:** Access to Windows list, touch one to open this window, touch  to delete this window from the list.

✧ **Refresh:** Refresh or stop refreshing webpage.

✧ **Exit:** Exit from Browser.

✧ **More:**

- **Forward:** Goto the next webpage from the current webpage.
- **Add bookmark:** Add this webpage into bookmark.
- **Goto homepage:** Return to homepage from the current webpage.
- **Find on page:** Find some key words on the current webpage.
- **Select text:** Select text on the current webpage.
- **Page info:** Access to Page info details.
- **Share page:** Share the current webpage via Bluetooth or Email or Messaging.
- **Downloads:** Access to Downloads interface.
- **Save page:** Save the current webpage as Offline Page.

- **Look Offline Page:** Access to Offline Page.
- **Oma Download:** Access to Oma Download history.
- **Full screen switcher:** Switch the current screen to full screen.
- **Settings:** Access to Browser Settings, you can perform the corresponding operations such as:
Page content settings & Privacy & Security & Advanced settings.

6. Search



In main menu, touch **Search**, access to Google Search, enter key words, touch **→**, you can search a target in All or Web or Apps or Contacts, the matched result will display below.

7. Email

You can receive or send your Email anywhere or at any time by this device.

Note: *E-mail can be used normally when the wireless network is well connected.*

7.1. Create Account

After entering Email, input Email address & password & the relevant parameters of POP3 & SMTP Server, go through POP3 and SMTP server detection, Email account can be created.

Note: *On an email accounts list interface, press [Menu] ,choose “Add account”, you can add another email account.*

7.2. Inbox

On accounts list, touch an account, and enter its inbox. Press **[Menu]**, Touch “Refresh” to refresh emails of the current account; touch “Compose” to enter compose interface; touch “Folders” to view its folders; touch “Accounts” to enter Accounts list; touch “Account settings” to access to Accounts settings interface. .

7.3. View Email

In the inbox list, touch an email to enter its view interface.

On mail view interface, touch to switch into the previous and the next mail; touch to reply to the sender, touch to reply all the recipients and the sender, touch to delete this email.

Press **[Menu]** to display options menu, including: Delete & Forward & Reply & Reply all & Mark as unread, touch an option to perform the corresponding operations.

7.4. Compose

After entering compose interface, input Recipient & Subject & mail content, touch to send email, touch to save this email as draft, touch to cancel composing email. press **[Menu]** to display options menu, including: Add Cc/Bcc & Send & Save as draft & Discard & Add attachment.

7.5. Settings

After entering email accounts, press [Menu], touch “Account Settings” to access to account settings interface, you can perform the corresponding operations, including: General settings & Notification settings & Server settings.

Prompt: The capacity of attachment should be less than 5M.

8. Music

Music player supports various audio formats, including: Midi, MP3, amr, ogg, AAC, AAC+, wav, wma, etc..

8.1. Play Interface

On the play interface, if there are songs in the playlist, touch  to play; touch  to pause.

Drag the slider left or right to rewind or fast-forward. Touch   to play the previous or

the next song. Touch  to repeat playing all songs, touch  to repeat playing the current

song. Touch  to set shuffle on or off. Touch  to access to playlist. Press [Volume] key to adjust the volume. Press [Menu], operate the following:

- ✧ **Library:** Access to songs library.
- ✧ **Party Shuffle:** Set Party Shuffle on or off.
- ✧ **Add to Playlist:** Add the current song into playlist.
- ✧ **Use As Ringtone:** Set the current song as SIM1 or SIM2 call ringtone.
- ✧ **Delete:** Delete the current song from T-flash Card.

8.2. Library

Music library contains “Artists”, “Albums”, “Songs”, “Playlists”, etc. touch a song in music library, it will start playing.

8.2.1. Long Press Menu

In the songs list, choose and long press a song, operate the following:

- ✧ **Play:** Touch this option, start to play the current song.
- ✧ **Add to playlist:** Add the current song into playlist.
- ✧ **Delete:** Delete the current song from T-Flash card.
- ✧ **Search:** Search songs from Browser or Music library.

8.2.2. Options Menu

In the songs list, press [Menu], operate the following:

- ✧ **Party Shuffle:** Set party shuffle on or off.
- ✧ **Shuffle All:** Set shuffle all on.

8.3. Playlist

In the playlists list interface, press [Menu], perform the following operations:

- ✧ **Party Shffle:** Set party shuffle on or off.
- ✧ **New Playlist:** Create a new playlist.

After entering one playlist, press [Menu], perform the corresponding operations, including: **Party shuffle off** or **Shuffle all** or **Save as playlist** or **Add music** or **Remove**.

On songs list in a playlist, long press a song to display options menu, perform the following operations:

- ✧ **Play:** Touch this option, start to play the current song.
- ✧ **Add to playlist:** Add the current song into playlist.
- ✧ **Remove from playlist:** Remove the current song from the playlist.
- ✧ **Use as phone ringtone:** Set the current song as SIM1 or SIM2 call ringtone.
- ✧ **Delete:** Delete the current song from T-Flash card.
- ✧ **Search:** Search songs from Browser or Music library.

9. Gallery

In main menu, touch  to enter Gallery, touch  to switch into Camera interface. In the folders list, touch a photo folder to enter, slide from left to right to view pictures list. Touch a picture or photo to enter its view.

On picture folders list, select one or some folders, press **[Menu]**, perform the following operations:

- ✧ **Share:** Share the selected folders by Messaging or Bluetooth or Email or Gmail.
- ✧ **Delete:** Delete the selected folders.
- ✧ **Details:** View its details.

9.1. Picture List

On the pictures list, long press one of pictures, perform the corresponding operations:

- ✧ **Share:** Share the selected pictures by Messaging or Bluetooth or Email or Gmail.
- ✧ **Delete:** Delete the selected picture(s).
- ✧ **More:**
 - **Details:** View the details of the selected picture .
 - **Set as:** Set the selected picture as Contact icon or Wallpaper.
 - **Crop:** Crop the selected picture and save it automatically.
 - **Rotate Left:** Rotate left the chosen picture(s) by 90° .
 - **Rotate Right:** Rotate right the chosen picture(s) by 90° .

9.2. Picture View

On the pictures list, touch a picture to enter its view. Touch this picture continuously to shrink or enlarge this picture, slide the screen right or left to view the previous or the next picture. Touch

 to enlarge this picture, touch  to shrink this picture; touch  to slideshow the pictures of the current folder; touch  to perform "Share" or "Delete" or "More" (Details or Set as or Crop or Rotate Left or Rotate Right).

 
10. Movies

In main menu, touch  to enter video folders, touch a video file to play, touch  to pause, touch  to stop, touch   to rewind or fast-forward playing, touch  to play the previous or the next file, press **[Volume]** to adjust the volume, press **[Menu]**, perform the following:

- ❖ **Original Size:** Play the current video file by the original size.
- ❖ **Playback mode:** Select playback mode, e.g. None Playback or Single Playback or All Playback.
- ❖ **Left/Right Channel:** Switch sound between left or right channel of the headset, and also switch to Stereo.
- ❖ **Parameter Settings:** Access to Parameter Settings, perform the corresponding operations, including: Network & ProxySet & RTP/RTCP Port Settings.
- ❖ **Headset/Loud Speaker:** After plugging in headset, switch the sound between the headset and the loudspeaker.

Prompt: During playing a video, if not touching the screen for 5 seconds, it will play in full screen.

11. Camera



In main menu, touch  to enter Camera to capture photos, On the findview interface, touch



to switch between the front and the back lens; touch  to take photos, touch 



switch to Camcorder, touch  to begin to camcorder, touch  to adjust zoom, touch 



to adjust video quality, touch  to adjust White balance, touch  to adjust Exposure or Scene mode or Preview mode or Picture size or Picture quality or Brightness, etc..

Press **[Menu]**, perform the following:

- ❖ **Switch to video:** Switch from Camera to Camcorder interface.
- ❖ **Gallery:** Access to Gallery.
- ❖ **Switch Camera Lens:** Switch between the front lens and the back lens.

12. FM Radio



In main menu, touch  to enter FM Radio interface, then you can listen to FM radio freely.



On FM Radio interface, touch  to turn on/off FM radio; touch  to add channels; touch



  to search available channels forwards or backwards



from the current channel; touch   to switch to the previous or the next channel among



the available channels list; touch  to switch between earphone and speaker.

Press **[Menu]**, perform the following:

- ❖ **Auto Search:** Search FM channels, touch “OK” to begin to search FM channels, touch “Cancel” to give up searching.



After entering stations list, touch  to edit station info., touch  to delete the station.

Prompt: Please connect with the earphone before you listen to the radio, for the device is equal to radio antenna. When the battery of your cell is insufficient, you may not run FM Radio .

13. Sound Recorder



In main menu, touch to enter Sound Recorder. The format of recording files is *.amr, The recording length depends on the size of T-Flash card.

Touch to record, touch to stop recording, touch to play the recording file in the list.

After stopping recording a file, press **[Menu]**, perform the following:

- ✧ **Record list:** Access to recording list.
- ✧ **Bluetooth:** Send this recording file by Bluetooth.
- ✧ **MMS:** Send this recording file by MMS.
- ✧ **Email:** Send this recording file by Email.
- ✧ **Set ringtone:** Set this recording file as phone ringtone of SIM1 or SIM2.

14. File Explorer



In main menu, touch to enter File Explorer.

14.1. Files / Folders List

On file explorer interface, touch or to switch between Local disk and T-Flash card

root directory; touch to view favorites interface; touch to enter multi-select state, and

select one or more files or folders; touch to search audio or video or picture or other files;

touch or to switch between the list and matrix display mode; touch to display the

toolbar; touch to view recommendation interface; touch to select apps category; touch

to access to Apps Management interface; Touch to exit step by step.

Touch to display “Change View” option menu, choose “Local” or “LAN” or “FTP” or “Bluetooth” or “Net”, perform the following operations:

- ✧ **Local:** Access to Local root directory.
- ✧ **LAN:** Access to the shared directory of LAN server.
- ✧ **FTP:** Access to the remote root directory of FTP.
- ✧ **Bluetooth:** Access to the shared directory of Bluetooth.
- ✧ **Net:** Access to the shared directory of some definite server.

14.2. Option Menu

On files or folders directory interface, press **[Menu]** to display option menu, perform the following:

- ✧ **Operations:** Display operations menu, including: Cut, Copy, Delete, Select reverse, Music, Move to, Copy to and Properties.
- ✧ **New:** Display options menu of New, including: File, Folder.

- ✧ **Manager:** Display options menu of Manager, including: Task Manager, App Manager, Security Manager, Bookmark Manager, SD Card Analyst.
- ✧ **Show Tabs:** Show the tabs of “Local” & “LAN” & “FTP” & “Net” on the toolbar.
- ✧ **Settings:** Access to settings interface, including: Display Settings, View Settings, Path Settings, Other Settings, Root Settings.
- ✧ **More:**
You can perform More operations such as **Refresh**, **Flip orientation**, **Help Centre**, **About US** or **Exit**.

14.3. Long Press Options

On files or folders directory interface, choose and long press a file or folder to display its options menu, perform the following:

- ✧ **Open As:** Open this file or folder as Text or Audio or Video or Image.
- ✧ **Cut:** Cut this file or folder.
- ✧ **Copy:** Copy this file or folder.
- ✧ **Rename:** Rename this file or folder.
- ✧ **Delete:** Delete this file or folder.
- ✧ **Move to:** Move this file or folder to a directory.
- ✧ **Copy to:** Copy this file or folder to a directory.
- ✧ **Select All:** Select all the files and folders (on) in the current interface.
- ✧ **Shortcut:** Create a shortcut of this file or folder on the desktop.
- ✧ **Bookmark:** Create a bookmark of files on the SD card or internet browser.
- ✧ **Compress:** Compress the file or folder.
- ✧ **Share:** Share this file by Bluetooth or Email.
- ✧ **Properties:** View the properties of this file or folder.

14.4. LAN

In the shared directory, create a new LAN server, when it is connected with the router , share the file or folder onto the LAN server.

14.5. FTP

In case of connecting the router, access to remote directory, create a FTP server, access to the shared file(s) or folder(s) by the remote login, operate the file(s) or folder(s), e.g. copy, move or delete them.

14.6. Net

In ES explorer, you can access to net disk by choosing this option, manage files or folders between your net disk and phone.

15. Notes



In main menu , touch **Notes** to enter Notes. Touch to create an event record, enter its content, on its content view, press **[Menu]** , operate the following:

- ✧ **New Note:** Add a new record.
- ✧ **New Folder:** Add a new folder.
- ✧ **Delete:** Delete record(s) or folder(s).
- ✧ **Delete All:** Delete all records or folders.
- ✧ **Move to Folder:** Move record(s) into a folder.

16. Clock

After entering Clock, touch  to set Alarm; touch  to access to Gallery; touch  to access to Music player; touch  to return to the desktop.

17. Calendar

This phone supports Calendar. You can view calendar or edit an event by this application.

17.1. Month Display

In month display mode, slide the screen up and down to view the previous and the next month calendar. Press [Menu] to perform the relevant operations as **Day**, **Week**, **Month**, **Agenda**, **Today** or **More**.

17.2. Day Display

In day display mode, slide the screen up and down to view the different time of the current day; slide the screen from left to right to view the previous and the next day.

17.3. Week Display

In week display mode, slide the screen up and down to view the different time of the current day; slide the screen from left to right to view the previous and the next week.

***Prompt:** The operations of [Menu] for Day or Week display state, please refer to Month display..*

18. Calculator

In main menu, touch  to enter Calculator. It supports four arithmetic operations such as “+”, “-”, “x” and “/”. Slide the screen to switch into functional operations, e.g. Sin, Cos, Tan, Ln, Log,!, π , e, \wedge , etc.

19. Search Callog

In Search Call-log application, search call records by key words or numbers.

20. User Profiles

In User Profiles application, you can select the predefine audio profiles, e.g. General or Silent or Vibration or Outdoor, and can define audio profiles by yourself.

21. Backup

In Backup application, you can backup applications and data, and also restore these applications and data.

***Prompt:** Before executing this function, ensure that T-Flash card has enough space; After backing up applications and data, please don't remove or destroy the backup. Because illegal operations cause data loss or damage, user will take the responsibility by himself.*

22. Downloads

In main menu, touch  to enter, you can view the downloaded files or applications.

23. Settings

In settings, you can perform such operations as: Wireless controls, Sound settings, Display settings, Security & location, Applications, SD Card and Local disk, Date and time, Accessibility, Speech synthesis, About phone, etc.

23.1. Dual SIM Settings:

Set data connection of SIM1 or SIM2, and also set the standby state as SIM1 or SIM2. SIM1 can't transmit with SIM2 simultaneously.

23.2. Wireless Controls

Set WLAN, Bluetooth, Networks, VPN settings, Airplane mode, etc.

23.2.1. Airplane mode

Touch "Airplane Mode" to switch between "On" and "Off". If Airplane mode is On, all the wireless networks will be disconnected automatically in this mode.

Warning: Even if airplane mode is activated, it is forbidden to use on plane or in some *special labs or under hospital equipments, other special environments, etc., so as to prevent the intervention of electronic equipments to the communication or this device, you are advised to power off this device in such environments.*

23.2.2. WLAN On/Off

Touch "WLAN" to switch between "On" and "Off".

Note: Please turn off WLAN to save power when not using.

23.2.3. WLAN Settings

Set up and manage the wireless access points.

- ✧ **Scan WLAN:** Scan and search WLAN devices nearby.
- ✧ **WLAN:** Same as WLAN On/Off.
- ✧ **Network Notification:** Touch this item to switch between "On" and "Off". If network notification is set as "On", the owner will be notified when an open network is available nearby.
- ✧ **WLAN network:** It lists the WLAN network devices, touch one in the list, perform such operations as: connection, disconnection or clear, etc.

Press [Menu],choose "Advanced", perform the following operations:

- ✧ **Advanced:** Set WLAN sleep policy, and view MAC address & IP address.
- ✧ **IP Settings:** Set IP address, Gateway, Netmask, DNS1 and DNS2.
- ✧ **Proxy Settings:** Set Proxy, Port, Proxy Exception list.
- ✧ **Choose Network Dialog:** Choose "Auto Connect" or "Manual Connect" or "Always Ask" ..

23.2.4. Bluetooth On/Off

Touch "Bluetooth" to switch between "On" and "Off".

Note: To save power, please turn off Bluetooth when not using.

23.2.5. Bluetooth settings

You can set Bluetooth On or off, Device name, Discoverable, Scan for devices and list the scanned devices.

- ✧ **Bluetooth On/Off:** Touch "Bluetooth" to switch between "On" or "Off".
- ✧ **Device Name:** It displays the factory device name, touch this item to edit its name.
- ✧ **Discoverable:** Touch "Discoverable" to switch between "On" or "Off". If it is "On", The Bluetooth devices nearby can detect this device.
- ✧ **Scan For Devices:** Touch this item to detect the Bluetooth devices nearby.

- ❖ **Bluetooth Devices List:** When this device find other Bluetooth devices nearby, it will display them in this list, you can click one and then input PIN for matching and connection.

23.2.6. Tethering & Portable hotspot

You can set USB tethering or Portable Wi-Fi hotspot.

- ❖ **USB Tethering:** Set USB tethering on or off.
- ❖ **Portable Wi-Fi Hotspot:** Set Wi-Fi hotspot on or off.
- ❖ **Portable Wi-Fi Hotspot Settings:** Set Portable Wi-Fi hotspot or Configure Wi-Fi hotspot.
- ❖ **Help:** Access to USB Tethering Help.

23.2.7. VPN Settings

In VPN settings, you can add a new VPN, set VPN server, enable Encryption, DNS search domains, etc.

After adding a new VPN , touch it in the VPNs list, and you can connect it to network.

23.2.8. Mobile Networks

In Mobile Networks, you can set Data enabled or Data Roaming or Access Point Names or Network Operators.

- ❖ **Data Connection Setting:** Set Data connection by SIM1 or SIM2 or Off.
- ❖ **Data Roaming:** Set data roaming on or off.
- ❖ **Access Point Names:** Choose Access Point Names.
- ❖ **Network Operators:** Search networks by hand or automatically.

23.3. Call Settings

In Call Settings, you can set SIM1 or SIM2 call Setting or Voicemail or Message Reject or Other call settings, and also set IP dialing or Vibration when answers/hangs up.

23.4. Sound Settings

In sound settings, you can set User Profiles, Ringer Volume, Media Volume, Notification Ringtone, Audible Touch Tones, Audible Selection, Haptic Feedback, etc.

23.5. Display Settings

In display settings, you can perform such operations as “Brightness”, “Auto-rotate Screen”, “Animation”, “Screen Timeout”, etc.

23.6. Security & Location

You can set My Location or Screen Unlock or SIM Card Lock or Passwords or Credential Storage.

23.7. Applications

You can perform the relevant settings of Applications, including: Unknown sources, Manage Applications, Running services, Storage Use, Battery Use, Development.

23.8. Accounts & Sync

You can perform adding accounts and Sync settings.

23.9. Privacy Settings

You can perform the relevant settings of Privacy and Factory data reset.

23.10. Storage

You can perform the relevant settings of SD card or Phone Storage.

23.11. Language & Keyboard

You can select Language or Input Methods , and access to User Dictionary.

23.12. Voice Input & Output

You can perform Voice Input & Output Settings.

23.13. Accessibility

You can manage accessibility options.

Note: This feature is based on the real product.

23.14. Date & Time

You can set date or time or time zone or time format or Auto. Update date and time.

23.15. About Phone

You can check Status or Battery Use or Legal information or Manufacture or Model No. or Android Version or Baseband Version or Kernel Version or Build No.,etc.

V. Applications

1. F-Secure Launcher



In main menu, touch **F-Secure Launcher** to enter F-Secure Launcher, and perform the corresponding operations.

2. NewsHunt



In main menu, touch **NewsHunt** to enter NewsHunt app., you can read news and perform the corresponding operations.

3. Opera Mini



In main menu, touch **Opera Mini** to enter Opera Mini app., and perform the corresponding operations.

4. Play Store

Play store allows you to find and download applications and fun games for your device.

5. SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 Watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue.

VI. How To Resolve Malfunction

If you meet with the abnormal state during using mobile phone, please refer to the following guide to resolve it. If you can not solve, please contact with the designated service center.

1. Phone can not power on?

Possible Reasons for Malfunction	Solutions
----------------------------------	-----------

1. Press [Power] key shorter.	Long press [Power] key over 3 seconds
2. Battery runs out.	Please charge for your phone in time.
3. The battery is installed incorrectly.	Please install it properly.
4. Abnormally using leads phone not to power on.	Please contact the local service centre.

2. Phone can power off auto.?

Possible Reasons for Malfunction	Solutions
1. Battery runs out.	Please charge for your phone in time.
2. Battery is loose.	Please install properly.

3. PIN or PUK locks phone?

Possible Reasons for Malfunction	Solutions
1. Input PIN code wrong.	Please input PIN code correctly.
2. Input PUK code wrong.	Please input PUK code correctly.

Note: If inputting error PIN code 3 times, PIN code will be locked, it needs PUK code to unlock; If inputting PUK code 10 times, SIM card will be locked. Please keep and use the PIN & PUK information, when meeting with problems or difficulties,please consult with the SIM card supplier.

4. Phone call is not good?

Possible Reasons for Malfunction	Solutions
1. The current signal strength is unstable.	You may be in the fast-moving state (by train or car, etc.), according to the signal strength, select a place with good signal to make a call to ensure call quality.
2. Perhaps you are in a poor signal region.	Please move to open areas.

5. You can't receive a call?

Possible Reasons for Malfunction	Solutions
1. Perhaps you set up call forwarding.	According to your needs,please cancel call forwarding.
2. Perhaps you set up call barring.	According to your needs,please cancel call barring.

6. You can't make a call?

Possible Reasons for Malfunction	Solutions
1. Phone power off.	Please power on your phone.
2. Phone is out of the network service area.	Please make sure the current network is in good service.
3. Your SIM card is not proper or out of service fee.	Make sure your SIM card can work properly.
4. Perhaps you set up call barring.	According to your needs,please cancel call barring.
5. The phone screen is locked.	Please unlock the screen according to the prompts.

7. Your phone call voice is low?

Possible Reasons for Malfunction	Solutions
----------------------------------	-----------

1. Call volume is low.	Please adjust your phone call volume to louder.
------------------------	---

8. The other party can't hear your voice?

Possible Reasons for Malfunction	Solutions
1. Mic is too far away from the sound source.	Place the mic near your mouth.
2. The signal is poor or unstable.	Please move to the open areas with good signal.
3. Antenna is assembled not properly.	Please contact the local service centre and have a check.

9. The call alert doesn't ring when a call coming in?

Possible Reasons for Malfunction	Solutions
1. Incoming call alert is set as silent.	Please re-set the incoming call alert as a sound alert.
2. The ring volume is set too low.	Please increase the phone call volume.
3. You set up call forwarding.	Please cancel call forwarding.

10. Battery can't charge?

Possible Reasons for Malfunction	Solutions
1. Battery power runs out or not used for a long time.	Please charge in time after the prompt of "Low Power".
2. Battery is not good with the phone connection.	Please install battery properly.
3. Charger is not good with the phone connection.	Please connect the charger and phone properly till it displays the charging icon on the screen.
4. Perhaps the charger or battery is damaged.	Please contact the company's designated repair centre.
5. The surrounding temperature is too low or too high.	Make sure the phone is in the normal temperature during charging.

11. Phone displays no network?

Possible Reasons for Malfunction	Solutions
1. SIM card is not installed properly.	Please install SIM card properly.
2. There are impurities on the phone and SIM card contacts.	Please ensure that SIM card & phone contacts are clean.
3. The SIM card is invalid	Please check whether the SIM card has been expired
4. The network environment is in a weak-signal areas.	Please move to the strong-signal areas to use cell phone.

12. Phone can't detect the memory card?

Possible Reasons for Malfunction	Solutions
1. T-Flash card is not installed properly.	Please install T-Flash card properly.
2. T-Flash card is damaged.	Please change T-Flash card.

13. Phone is out of memory?

Possible Reasons for Malfunction	Solutions
1. MMS or SMS takes up too much storage space.	Please delete the unwanted SMS or MMS to release space.
2. The browsing history takes up too much storage space.	Select "Browser - Settings - Privacy Settings - to clear the cache to release space.
3. Running too many programs leads to lack of space.	Enter "Settings –Applications—Manage applications" or "Settings –Applications—Running services", force stop some running applications or services.
4. You have installed many applications in your phone.	Enter "Settings – Applications — Manage applications", choose and touch the applications installed by yourself, to uninstall them to release space. Note: The built-in applications can't be uninstalled.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 0.5cm is 0.914W/kg, next to the head is 1.043W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help**

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.