Wi-Fi Storage

SKYMAX

WS221

Operation Instruction 操作手冊

Product Specification

Step 1: Please load 2.5 "SATA II HDD to a WI-FI HDD

agent who you buy from.

Quick Operation Guide

Quick Start Guide

Enclosure, as the 4 in 1 feature.

WI-FI HDD is designed for Smart Phones and Tablet PCs. This design is the

Built-in 802.11n Wi-Fi transmission interface, let you can audit files between

WI-FI HDD and I-Phone, I-Pad, Androld Tablet or Smart Phone wirelessly,

Wi-Fi HDD is also with built-in LAN / WAN interface. It could be a Wireless

In addition, it's with built-in high capacity battery providing backup power,

when you need it for charging your IPad / IPhone, and Android Smart Device

Wi-Fi HDD series offer wireless Internet access, backup power, expandable

storage, data exchange., audio and video entertainment and other functions

That is the best peripheral for business men and the Smart Device users.

Remark: Please read this manual carefully. If you need more information

about this product's operation and problem solution, please check with the

such as Windows' File Management function, like move and copy.

It's also easily play or browse the files, like movie, music, pictures,

documents, stored in WI-FI HDD and aforestated Smart Devices.

Router. Let your I-Pad and Smart Phones readily operate in different

environments to connect internet through router.

Rechargeable Power Supply, Wireless Storage, and External Hard Disk


innovative peripherals, combined with the Mini Wireless Router,

a. First, please take out the closed cover of this device from one side of front-end Interface. Please remote the sides of the card bit slowly until the over is opened completely


Attention: Please don't take out the cover directly from the middle of front-end Interface. Please do it from one side, then, from another side.

Federal Communication Commission Interference Statement




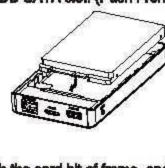

 Fasten the cover with the card bit of frame, and slowly laminate card it assembly cover with device

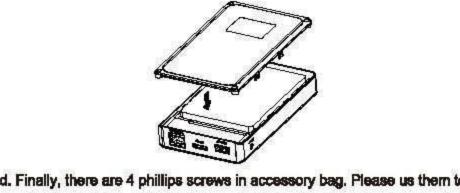

screw the bottom of body. Attention: In the processes of locking screws, don't make excessive force

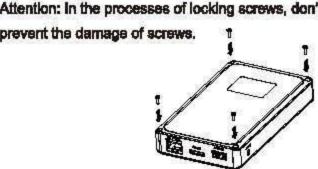

療型手機等設備之間實現檔案搬移、複製等磁碟管理功能,並可以前

來使用,使你的i-Pad與智慧型手機隨時在不同環境下輕易可以透過的

由器上網・另外亦透過內建的高容量電池提供備用電源功能・可在需

的無線上網、佛用電源、擴充儲存、資料交換、影音娛樂等實用性功

提示:讀詳細閱讀本手冊・更完整使用者手冊與問題解決・請洽詢您

a.首先將密合於本體之底蓋由前端接口方向其中一側開始由上往下拔

注寫: 前端方向之本體底蓋謂以一側邊拔除後再拔除另一側方式拔除

b.將SATA 硬碟插入SATA卡槽。(由下往上推至SATA卡槽)

要時對你的i-Pad與智羅型手機進行充電·Wi-Fi HDD系列產品提供

能,是商務人士與一般智藏型手機使用者的最佳周邊產品。

步驟1:转入2.5″ SATA II硬碟至Wi-Fi HDD

除,並將兩側卡位慢慢卸除直至底蓋完全打開。

讀勿直接由中間開始拔除

購買的經銷商連繫

快速使用

Step5: Use Wi-Fi to connect with Wi-Fi HDD

Step2: Charge for WHFI HDD

Wi-Fi HDD by the other end of cable.

Step3: APP application downloading

Step4: Switch on WI-FI HDD Power

about 2~3 seconds, then enter shutdown.

blue power indicator will be fully lighting. (It should be charged for 5 to 6

First of all, please search "WIAIr" from App Store and the Google Play by

phone or Tablet PC. Please download and install this application. This

application is compatible with WI-FI HDD for file management function.

("WiAir" supports Smart Phone and Tablet PC with iOS and Android OS.

With regard to more information, please refer to the User Manual of WIAIr)

Press the WI-FI HDD power button (about 2-3 seconds) to switch on WI-FI

HDD power. When the power is switched on, the battery indicator blue light

will be in clockwise displaying, and the green power light will light up till the

green light starts flashing. Until WI-FI Indicator light (blue light) is also

completely to enter the status of wireless sharing of standby.

lighting up and the green light stops blinking, that mean Wi-Fi HDD boot

In the status of switching on, short press the power button, it will show the

current power capacity about 5 seconds. Long press the power button

Turn on the function list of such portable device (IPad/IPhone/Android

hours in order to ensure optimal battery performance status).

turn on the WI-FI function and choose "WS221" from "Choose a Network" For the first time, please use WI-FI HDD for full charge by the accessory: and start the connection. (Because the ways of every device for turning or Please use DC Cable to connect with the computer of two USB Ports or the Wi-Fi and access point are different, please follow the various devices' adaptor which is more than 5V1A DC. Then, connect with the DC in port of The display of battery indicator blue light will be in clockwise increment. Step 6: Use the Wi-Fi HDD according to charging progress. When Wi-Fi HDD fully charged battery, the After WI-FI connection, execute the application "WIAIr", which was installed

on the iPed, iPhone, Android Phone, the Android Pad and other mobile devices already. Then, start the complete operation and enjoy "WiAir" functional experience, including the using and management of the WI-FI HDD storage space, as well as audio and video file playback and sharing functions. WI-FI HDD support three users, simultaneous online for audio and video playback and file sharing.

Phone/Android Pad). Please enter into the page of Wi-Fi setting. Please

Step 7: About the capacity of WI-FI HDD, exchange and data packup. Wi-Fi HDD hard disk storage space is displayed as "HDD1", such as cutting two hard disk storage space is displayed "HDD1, HDD2," and so on, Wi-Fi HDD supports up to 10 partitions display, the largest capacity support to

Step 8: Turn on and Use Power Bank Function In the state of shutdown, short press Wi-Fi HDD power button (

I-Phone, tablet PCs and smart phones and other devices for charging, then 步塵4:開歐Wi-Fi HDD電源 於開機狀態下按下Wi-Fi HDD 電源按鈕(約2~3秒鐘),以開啟Wi-F HDD電源·當電源開啟後·電量指示燈會以順時針旋轉顯示·且錄色

approximately 0.5 seconds), it will display the current battery capacity for 3

seconds. So when the 5V OUT interface has been inserted with i-Pad.

步置5: Wi-Fi強線至Wi-Fi HDD

開路iPad、iPhone、Android Phone、Android Pad等行動裝置設定 功能列表·點選Wi-Fi設定頁面·將Wi-Fi功能開啟·在「選擇網路 下選取「WS221」並開啟連線(每各設備開啟Wi-Fi與連接網路無線有 取點方法不同,請依各設備使用說明進行本項操作)

Wi-Fi連線後, 開路iPad、iPhone、Android Phone、Android Page 等行動裝置中安裝好的「WiAir」APP應用程式·即可以「WiAir」進

步驟7: Wi-Fi HDD的儲存空間與資料備份交換

10個磁碟分割·最大容量支援到2TB·

步骤8:開放與使用Power Bank功能

佛註C: Wi-Fi HDD也支援USB 3.0 随插即用賓線使用 將隨機所附USB3.0線連接至Wi-Fi HDD,另一頭連接至具備USB隨持

(本機與電腦連線·只支援Wi-Fi HDD 本體內建硬碟連線·不支援 5V OUT **外接之設備連線)**

onnect with USB Plug and Play device or computer. We use the ways, like nouse dragging and select files through the built-in file management of devices/computer, we can start to make data transfer and backup in Wi-Fi power Indicator will be in counterclockwise descending. And WI-FI HDD will HDD. Note: When Wi-Fi HDD is connecting with computer through USB 3.0 cable

It only supports the built-in hard disc of WI-FI HDD, not supports the external a. When the battery indicator is only a blue light and flashing, that means the I devices connected with 5V OUT Remark C: The Explanation for AP mode and Extender mode When WI-FI HDD is under WI-FI connection and run WIAir program, please click the "Settings; option. At this time, there will be two options; AP MODE

> described below. AP modes: As a wired LAN, and wireless access to wired LAN functionality. Select AP mode, such as click On, the machine will restart, in the meantime, please insert the network cable. If the connection is successful, the state light of network bridge will be lighting up, and make I-Pad, I-Phone, Tablet PC and smart phones and other devices via a wireless connection to the Wi-Fi HDD to the Internet. Extender modes: As a wireless internet access bridging. Select Extende mode, it will show the hot sports of wireless channel. Please select the hot sport what your request and also type the password to enter if the wireless

If the above operation is successful, WI-FI HDD will restart and make the

onnection with your smart device again. When the state light of network

and Extender MODE in " Network Connection " column. The features are

ridge is lighting up, you can connect the network, and access to the web 2. WI-FI LED (Blue) 3. Extender LED(Blue) Remark D: The Cautions for The Operation of WI-FI HDD. 4. Power LED (Green: System On) * For charging Wi-Fi HDD, the Wi-Fi HDD should be staying the status: Turn

Off. The time for full charging will be around 5 to 6 hours. If Wi-Fi HDD is under the status: Turn On and insert DC power supply in the meantime, the

power of Wi-Fi HDD will be used by running owned system, not in charging.

 Power supply could be from computer or the adaptor more than 5V/1A out If you use computer for charging, please use the accessory: DC cable to connect with two USB ports of computer for ensuring the full power supply When the Wi-Fi HDD is not under ordinary way to turn on/turn off, please press the button for 2 seconds to face, then start to boot for resolving

If the Wi-Fi HDD spent long time to download, the body temperature will slightly rise. It's normal status. Please don't worry.

When you enter the Wi-Fi HDD setup page and choose network, you forget the wireless network password for getting internet, please press the rest button at the right side of WI-FI HDD. That will back to the factory

defaults setting and resolve the issues. Each Side of The Product

Power Capacity LED (Blue)

產品各部份說明:

1. DC 5V in 電源充電孔

,永統接鐵重置接續

4.5V OUT 電量輸出孔

5. USB 3.0 DEVICE

6. WAN / LAN 接口

2. 電源開闢

(D)

1. DC 5V in Charge Port 2. Power Switch

3. Setup Reset 4. 5V OUT Charge Por

5. USB 3.0 DEVICE 6. WAN / LAN Port

產品規格

備用行動電源

儲存容量

內接2.5吋SATA II硬碟最大至2TB

外插隨身碟或外接硬碟

支援5V 2A 輸出充電功能

Supporting 2.5" SATA II HDD Up to 2TB Wireless Network Interface | Wi-Fi 802.11 g/n with wireless security (WPA/WEP) Transceiver Speed 150Mbps 5V-2A (Rechargeable Battery: 4800 mAh) USB 3.0 DEVICE x 1 Downloadable at Apple's App Store and Android Google Play, WI-FI HDD Enclosure also support Web format service for PC or Compatible with LPad 1/2, LPhone 3G/3GS/4/4S/5, IPod touch, PC, MAC, Laptop, Tablet and Smari Reorient or relocate the receiving antenna. Operating Temperature | 32°F to 122°F (0°C to 50°C) Increase the separation between the equipment and receiver 180g (without HDD) Dimensions 132.5mm(L) x 82mm(W) x 22mm(H) which the receiver is connected. Supports IOS File Formets | Audio: AAC, MP3, WAV Consult the dealer or an experienced radio/TV technician for help. Video: m4v, mp4, mov, Motion JPEG (M-JPEG) Image: jpg, bmp, tiff FCC Radiation Exposure Statement: Document odf, doc, dock, opt, potx, txt, rtf, xls Plays any file supported by your device PC/Laptop / Tablet / applications Smart phone File Formats Inside the Box Wi-Fi HDD Enclosure

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

USB 3.0 Cable / DC Charger Cable

Quick start guide / Screws Pack

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may no cause harmful interference, and (2) this device must accept any nterference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to Part 15 of the FCC Rules These limits are designed to provide reasonable protection agains harmful interference in a residential installation. This equipment enerates, uses and can radiate radio frequency energy and, if no istalled and used in accordance with the instructions, may cause narmful interference to radio communications. However, there is no uarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Connect the equipment into an outlet on a circuit different from that to


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &

his device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter


使用者快速入門指南

Wi-Fi HDD 是一款專為智慧型手機與平板電腦所設計的創新性周邊產 品、结合了迷你無線路由器、備用充電電源、無線儲存裝置、外接硬 碟盒等四合一強大功能·內建802.11n Wi-Fi傳輸界面·讓您可隨時 以無線方式在Wi-Fi HDD與i-Phone、i-Pad、Android平板電腦或智

將底蓋扣上外框卡位・並慢慢壓合卡位將底蓋組装回去 述設備輕易來播放或瀏覽存放於上硬碟之影片、音樂、圖片、檔等| 容,另Wi-Fi HDD內建一個LAN/WAN界面,使其可以當無線路由器

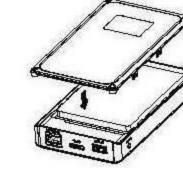

d.最後將配件包中所附的4顆十字型螺絲鎖至底蓋本體· 注意: 在鎖螺絲的過程,不要使力過度,以免將螺絲柱損壞造成滑牙

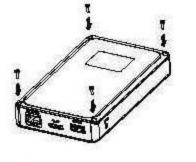

步展2:為Wi-Fi HDD充電

首次使用前請先將Wi-Fi HDD進行完整充電·請將DC雙頭USB充電 線連接兩個電腦USB接口,或5V1A以上之變壓器. 再將DC線另一頭 連接 Wi-Fi HDD DC IN的接口進行充電。電量指示藍燈會依照充電達 度順時鐘變增顯示·當Wi-Fi HDD充飽電量後·藍色電量指示燈會等 亮·(首次充電須充電5~6小時以上·以確保電池性能達到最佳狀態) 步騰3:APP應用程式下載

首先請以手機或平板電腦在App Store或是Google Play應用程式庫 載中Search搜零頁面·輸入「WiAir」以搜零對應Wi-Fi HDD使用的 免費APP軟體「WiAir」·請下載與安裝該應用程式·(「WiAir」支 搜iOS與Android系統的手機與平板電腦·詳細使用說明請參考WiAir 電源燈會亮起·直至綠燈電源燈開始閃爍以及Wi-Fi指示燈(藍燈)亮 起,代表Wi-Fi HDD開機完成進入無線分享符機狀態,如於開機狀態 短按電源按鈕則會顯示當前電量約5秒後熄滅,長按電源按鈕(約2~3 秒鐘)則會進入關機・

步慶6:使用Wi-Fi HDD

Wi-Fi HDD硬碟的儲存空間顯示為「HDD1」·如硬碟切割2個磁碟 則會顯示儲存空間「HDD1、HDD2」依此類推·本機最多支援顯示

於開機狀態下短按Wi-Fi HDD 電源按鈕(約0.5秒鐘)·會顯示當前電量

3秒·如此時5VOUT接口有插入i-Pad、i-Phone、平板電腦與智慧 手機等装置・進行充電的話・電量指示監燈・會依照逆時鐵遞減顯示 ・並且也會開始進行對外接裝置進行充電・若裝置已充飽・或與於中 途拔除裝置情況下·Wi-Fi HDD電量指示燈會逆時鐵遞減一次並自動 進入開機狀態・

行完整的功能體驗操作·包括使用與管理Wi-Fi HDD的儲存空間以及 影音文件播放與分享等功能,Wi-Fi HDD具備支援三位以上使用者同 時在線使用影音播放與檔案分享之傳輸能力。

a.當電量指示藍燈只有1顆並閃爍時·這代表系統進入低電壓·請

b.當電量指示藍燈同時4顆快速閃爍時·代表系統進入過電壓/過電流/ 温度保護狀況・請先卸下外接充電裝置・並且需等待一段時間・直

無再次快速閃爍·再嘗試重新啟動電源。 c. 5V OUT接口只能供外部充電使用·無法當USB Host功能使用

charge indicator blue light, will follow the counterclockwise descending

enter the state of shutdown automatically.

system enters the low-voltage, please charge.

c. 5V OUT interface can only be used

display, and will begin to charge for external devices. If the device is fully

When the battery indicator while four blue lights flashing quickly, that

means the system into over voltage / over current / temperature protectio

status, please remove the external charging device, and need to wait for

some time, until no flashes fast again, and then try to turn on the power

WI-FI HDD support different systems, such as Windows and MAC computer

The first, please switch on Wi-Fi function from the Wi-Fi settings page of

device. Please select "WS221" under "Choose a Network" and start the

connection (Because the ways of every device for turning on Wi-Fi and

access point are different, please follow the various devices' operation)

After you connect with WI-FI HDD, please implement internet Brower of

192.168.2.1 to enter), then it will be a WEB interface for the full functional

space as well as audio and video files playback and sharing functions.

operation, including the using and management of the Wi-Fi HDD storage

temark B: Wi-Fi HDD also supports USB 3.0 Plug cable to use

We provided USB3.0 cable for connection of the WI-FI HDD, the other end to

the Wi-Fi HDD operation screen(Or type the default server address:

computer/device. The Home screen will automatically switch to the pages of

for external charging, can not be used for USB Host function

Remark A: Wi-Fi HDD support WEB across systems

or mobile device with Wi-Fi connectivity, by wireless connection

charged or lost the connection with WI-FI HDD, the displaying of WI-FI HDD

僧註A 輸出功率 IEEE:802.11b mode: 14.33 dBm

IEEE:802.119 mode: 19.78dBm IEEE:802.11n HT 20 MHz Channel Mode: 19.74 dBm IEEE:802.11n HT 40 MHz Channel mode: 19.85 dBm

機註B: WI-FI HDD支援WEB時系統使用 Wi-Fi HDD支援不同系統如Windows 與MAC等具備Wi-Fi連線能力的

空間以及影音文件播放與分享等功能・

電腦或行動裝置等設備以無線方式連接來使用,首先請將設備在Wi-Fi 備註 E: Wi-Fi HDD使用注意事項 設定頁面將Wi-Fi功能開啟,在「選擇網路」下選取「WS221」並開 放連線(每各設備開放Wi-Fi與連接網路無線存取點方法不同,請依名 設備使用說明進行本項操作),連線上Wi-Fi HDD後請執行電腦或設備 的網際網路瀏覽器·此時首頁畫面會自動切換為Wi-Fi HDD的網頁操 作畫面(或手動輸入內定服務器位址192.168.2.1進入) · 此時即可以 此WEB介面進行完整的功能操作,包括使用與管理Wi-Fi HDD的儲存

即用之裝置或電腦,使用裝置或電腦中內建的檔案管理工具,以滑雪 拖曳或鑑取檔案的方式,在Wi-Fi HDD中進行資料傳輸與備份的磁碟

Wi-Fi HDD連線後,並進WiAir程式,點遇設定邊項,此時,會有網影 連線欄位·點入後有AP模式和Extender模式可選·功能說明如下:

衛註D: AP模式和Extender 模式使用説明

.AP模式:作為有線局域網・實現有線局域網的無線接入功能・選擇 AP模式後、如點邏確定後、機器將會重新啟動、此時、插入網路線 連線成功後、網路構接狀態燈會亮起,然後將i-Pad、i-Phone、平板 電腦與智慧型手機等裝置,透過無線連接到Wi-Fi HDD即可上網。

2.Extender模式:做為無線網路上網橋接・選擇Extender模式後・数 附近場所有無線頻道、則會顯示頻道熱點訊息、請點選所需要用的網 線頻道網路、熱點若有設密碼、並須輸入無線網路密碼、以上操作品 功並點選確定後,機器將會重新啟動,並Wi-Fi HDD需重新連線, 網路構接狀態燈亮起後,即可連線網路,並可進入網頁。

hot spots request

為正確為Wi-Fi HDD充電·須於充電時將Wi-Fi HDD處於關機狀態 完整充電時間約5~6小時. 如為開機使用狀態同時插入DC充電源· 此時僅會提供Wi-Fi HDD本身系統用電而無法進行充電。 充電來源可為電腦或5V/1A輸出規格以上之變壓器·如使用電腦充電

請以所附DC 雙USB充電線來連接電腦雙USB接口方式充電以確保電

源供應充足 ▼當Wi-Fi HDD因使用上因素造成無法正常開闢機情況・誇先嘗試按伯 電源開開2秒鐘以強制關閉Wi-Fi HDD電源·再正常重新開機以解決

當Wi-Fi HDD處於長時間上下載使用時・本體溫度會略為上昇屬正常 安全現象・講安心使用・

*當你開啟Wi-Fi HDD設定選項中的網路登入密碼功能時,當遺忘該無 線網路登入密碼時可以尖物按壓Wi-Fi HDD右側的Reset鍵來回復出廠 設定値・以解決問題・

1. 電量顯示燈(藍燈) 2. Wi-Fi 狀線燈(藍燈) 3. 網路橋接狀態燈(藍燈) 4. 電源顯示燈(綠燈:開機)

BV QUT WANTAN

內建電池容量 內建可充電鋰電池4800mAh (可連續使用約4.5小時) **USB 3.0 DEVICE** 操作溫度 支援檔案格式IOS (蘋果作業系統)

可自行在Apple的App Store及Android 的 Google Play 下载搭配軟體:WiAir i-Pad 1/2, i-Phone 3G/3GS/4/4S/5 iPod Touch,桌上電腦,MAC.筆記型電 腦,平板電腦和智觀型手機 華氏32°F to 122°F (摄氏0°C to 50°C) 180g (不含硬碳) 132.5mm(畏) x 82mm(寬) x 22mm(高) 音樂: AAC, MP3, WAV 影片: m4v, mp4, mov, Motion JPEG (M-JPEG 圖片: jpg, bmp, tiff 文件: pdf, doc, docx, ppt, pptx, txt, rtf, xls 支援任何你設備中已可檢視或播放的檔案格 (Andriod等PC,MAC等其他 式(在左列設備中需先安裝可用於檢視或播放 檔案的軟體) Wi-Fi HDD 可攜式無線虧存裝置 USB 3.0 傳輸線 / DC 充電線 快速入門指南/螺絲包

第十二條 建型式混混合格之低功率射频电器,非连許可,公司、商號或使用者均不得擅目 使更頻率、加大功率或使更原設計之特性及功能。 第十四條 低功率射频阻碍之使用不得影響系統安全及干集台法通信:经变现有干集现象時, 應改善五集干集時方得從轉使用。前項台法通信、指依電信法規定作業之無線阻通信。低功 率射頻電器须忍受台法通信或工業、科學及驅療用電效輻射性電器設備之干集。