







BLESS		CONTENT	CONTENT	
CONTENT				
CHAPTER				
CONTENT				
1 INTRODUCTION	1	9	Viewing photos	25
About this user manual	3	10	Using music player	25
Notes for this manual	3	11	FM radio	26
Overview	3	12	7 PROGRAMS	27
2 GETTING STARTED	5	12	Backup and Restore	27
Makes sure you have everything	5	13	Browser	27
Charging battery	5	13	Calculator	27
Turning the device on or off	5	14	Calendar	27
Locking and unlocking the screen	6	14	Camera	27
Using headset	6	16	Clock	27
3 LEARNING THE BASICS	7	16	Contact	27
Home screen	7	17	Downloads	27
Extended home screen	7	17	Email	28
Shortcut icons	9	18	Messaging	28
Widgets	9	19	Play music	28
		22	Gallery	28
		22	Phone	28
		23	Settings	28
		23	Video Player	28
		25	8 MANAGING YOUR PHONE	
		25	Device settings	30
		1	Changing basic settings	31
			2	

INTRODUCTION		INTRODUCTION
1.INTRODUCTION		
ABOUT THIS USER MANUAL		
You are reading the Smartphone User's Manual. This User's Manual provides information on the various components in the Smartphone and how to use them.		 Battery
NOTES FOR THIS MANUAL		 Quick Start Guide
A few notes and warnings in bold are used throughout this guide that you should be aware of in order to complete certain tasks safely and completely.		 Headset
NOTES		
Tips and information for special situations		
OVERVIEW		
This manual refers to the hardware and essential software required to run the Smartphone.		
Not included – Operating System (e.g: Android Jelly Bean) have their own manuals. If you have questions		
about the operating systems or programs then please consult the appropriate manuals.		
Operating system – Your Smartphone may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your Smartphone for a different system, you will find this manual refers to the following operating systems:		
• Android Jelly Bean		
What's in the Box?		
Your package comes with the following items. If any of them is missing, please contact your retailer:		
 Device	 AC Adapter	 USB Cable
3		4

## 2. GETTING STARTED

### MAKES SURE YOU HAVE EVERYTHING


Before moving on the next set of instructions, make sure that you have received all items/components. If any items are missing and/or damaged, notify your dealer immediately (see "What's in the Box" on chapter 1).

### CHARGING BATTERY

The battery that came with your device is only partially charged. To fully charge the battery, charge it for 2 hours.

Charge the battery

1. Connect one end of the AC adaptor to the Micro USB connector of the device.
2. Plug the other end of the AC adaptor to the wall outlet to start charging.



**NOTES**

- Battery can also be charged when device connects to computer through USB cable.
- Battery life varies depending on network, applications, and ambient temperature.

### TURNING THE DEVICE ON or OFF

After installing SIM card and charging battery, device is ready to turn on.

Turn on your device

Press and hold the power button.

Turn off your device


1. Press and hold power button for 5 seconds.
2. A pop-up window appears, tap [Power off](#).

Set device to airplane mode

1. Press and hold the Power button for 5 seconds.
2. On the options menu, tap [Airplane mode](#).

Set device to silent mode

1. Press and hold the Power button for 5 seconds.

2. On the options menu, tap 

Set device to sleep mode

To set the device to sleep mode, press the Power button. This turns the display off.

To turn the display on, press the Power button again.

### LOCKING AND UNLOCKING THE SCREEN


Lock the screen to prevent it from accidentally being touched. By default, the screen locks after being idle for a period of time (see "Display Settings" on chapter 8).

Lock the screen

To manually lock the screen and turn off the display, press the Power button.


Unlock the screen

1. Press power button or front buttons to turn on the display from Sleep mode.

2. Drag  to the right of the screen to unlock the screen.

### USING HEADSET

For hands-free conversation or listening to music, plug one headset to headset jack.



**NOTES**

- When using headset, your ability to hear outside sounds may be limited. Do not use headset if it will endanger you.
- Do not set volume to maximum with headset as it may damage your hearing.

## LEARNING THE BASICS

## 3. LEARNING THE BASICS

### HOME SCREEN

From Home screen, you can quickly access common features and view notifications of missed calls, receive messages and check connection status.

### EXTENDED HOME SCREEN





Swipe your finger to the left or right across the home screen. The two extensions to the left and to the right of the Home screen provide more space for icons, widgets, shortcuts, and other items.

Status bar




The Status bar icons indicate different types of information. The following icons may appear on the status bar.

Volume icons

The following icons may appear on the volume icon area:






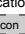
No	Icon	Description
1		Sound is off
2		Vibrate mode is activated
3		Speakerphone is on
4		Phone is muted

Battery icon



No	Icon	Description
1		Battery is full
2		Battery is low
3		Battery is charging







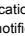

## LEARNING THE BASICS

Connection icon

No	Icon	Description
1		No network signal
2		Maximum signal strength. Fewer bars indicate lower signal strength.
3		GPRS network is in use.
4		Wi-Fi is connected.
5		Bluetooth connection is active.
6		Device is connected to PC via USB connector

Notification icons

No	Icon	Description
1		Call is progress
2		Call is on hold.

3		Miss call notification
4		New text message notification.
5		New email notification.
6		New Google mail notification.
7		Alarm.
8		Task notification.
9		File has been downloaded
10		No SIM card inserted

Notification panel

The notifications panel displays the device activities, details of status or other notifications.

Open the notifications panel

Tap and slide the status bar downwards. To open related applications, touch a notification.

Close the notifications panel

Tap and hold the bottom of the panel, then slide upwards to close the notifications panel.

### SHORTCUT ICONS

Shortcut icons allow you to access an application directly from the home screen.

Add a shortcut icon

1. Tap and hold the shortcut icon until it enlarges.
2. Add the shortcut icon that you want to appear on the home screen.

Move a shortcut icon

1. Tap and hold the shortcut icon until it enlarges.
2. Drag the shortcut icon to the desired area on the home screen.

Remove a shortcut icon

1. Tap and hold the desired shortcut icon until the **delete** icon enlarges. The icon appears at the top of screen.

2. Drag into the **Delete** icon to remove the shortcut.

### WIDGETS

Widgets allow you to receive live and personalized updates right on the home screen.

Add a widget

You may add and customize the Widgets on the home screen as you like.

1. Tap and hold the widget until it enlarges.
2. Add the widget that you want to appear on the home screen.

Move a widget

1. Tap and hold the widget until it enlarges.
2. Drag the widget to the desired area on the home screen.

Remove a widget

1. Tap Remove to remove an application

### WALLPAPER

You can customize the wallpaper of your home screen with default wallpaper or with pictures taken with this

9

device.

Set wallpaper from live wallpaper

**Live wallpapers** are animated images that you can set as wallpaper.

1. Tap and hold a blank area on the Home screen.
2. On the options menu, tap **Live wallpapers**. Live wallpapers and their descriptions are listed. Swipe up or down to scroll through the list
3. Tap to preview wallpaper.
4. Tap **Set wallpaper** to confirm.

Set wallpaper from my gallery

You can use pictures taken by the phone camera or pictures saved on the micro-SD card as the wallpaper.

1. Tap and hold a blank area on the home screen.
2. On the options menu, tap **Gallery**.
3. Thumbnails of pictures saved in the micro-SD card appear. Tap to select a picture. Drag your finger to select the crop area.
4. Tap **OK** to confirm.

Set wallpaper from wallpaper gallery

1. Tap and hold a blank area on the home screen.
2. On the options menu, tap **Wallpapers**.

10

3. All system wallpapers are displayed. Swipe your finger to the left or to the right to view the available wallpapers.
4. Tap to preview the wallpaper.
5. Tap **OK** to apply your selection.

### APPLICATION

The Application Menu contains all the applications installed on the device. On the home screen, Tap **APPS** to display all applications swipe your finger from right to the left for more applications.

Open applications

Tap an icon to open the application.

View Recently-Used Applications

Tap and hold the **Home** key and the recent application will appear.

Create Application Shortcuts

To easily access frequently-used applications, add the shortcut icon to the home screen.

1. Tap **Home** key and hold an application icon until the home screen is displayed.

2. Drag the icon to the desired area to place the shortcut.

### TEXT ENTRY

On-Screen Keyboard

Use the on-screen keyboard to enter text, numbers, and symbols.

Open and close the keyboard

- Tap a text field to activate the keyboard.
- Tap back to close the keyboard.

Using the on-screen keyboard



Lower case keyboard (default)

Upper case keyboard



Numbers and symbols

- Tap the keys to enter characters as you would on a computer keyboard.

Edit Text



Select, cut, or copy

To select, cut, or copy a word or a portion of text, do the following:

1. Touch the area where you want to place the cursor.
2. Touch and hold the text field box.

11

3. From the cursor, swipe your finger across the text that you want to select.

4. Edit the text. To cut or copy the highlighted text, touch and hold the text field box, then touch **Cut** or **Copy**.

Paste Text

To paste text, do the following:



1. Touch and hold the text field box of where you want to paste the text.
2. On the options menu, tap **Paste**.

### CONTACT

**Contact** is your phonebook that lets you store names, phone numbers, email addresses and other information. Contacts are stored in the phone memory. You can save information such as names pictures, phone numbers, e-mail addresses, etc. You can also add the frequently used Contacts to the favorites list.

Adding Contact

From the Home screen, do one of the following to open Contact.

1. Tap 
2. Tap the **Add icon** at the right of bottom 

12


3. Tap one of the following:

- Phone: To save the contact to phone memory.
4. Enter Contact information such as name, phone number, email address etc. To add a Contact picture, tap the photo icon.
  5. Tap **Save** to save the Contact.


### IMPORTING AND EXPORTING CONTACT

You can export Contact to the memory card to back up Contact information and import it to the device.

Import from memory card

1. Tap 
2. Tap **Menu > Import/Export**.
3. Tap **Import** from Phone or SD card to import Contact from the memory card to the device.

Back up Contacts


1. Tap 
2. Tap **Menu > Import/Export**.
3. Tap **PHONE**
4. Tap **Next**, and Tap **SD Card** to Export to SD card.

**NOTES**  
Exporting Contact will overwrite the old backup file in the memory card.

5. A warning message pops up, tap **OK** to proceed. All Contacts are copied to the memory card.


**COMMUNICATING WITH CONTACT**

**Call Contact**


1. Tap .
2. Tap a Contact.
3. Tap **Call mobile**, **Call work**, or **Call home**.

**NOTES**  
The available call options vary depending on the phone number(s) saved for a specific Contact and the number of SIM cards installed on the device.


**Text Contact**

1. Tap .
2. Tap a Contact.
3. Tap **Message icon**.
4. Compose and send your message. See "Create and Send Text Messages" on chapter 4.

**MANAGING CONTACT****Edit Contact**

1. Tap .
2. Tap a Contact.
3. Tap **Menu->Edit**.
4. Modify the necessary information.
5. Tap **Save** to save changes.


**Delete Contact**

1. Tap .
2. Tap a Contact.
3. Tap **Menu > Delete**.


13

**4. Tap OK to confirm.****Send Contact Information**

You can send Contact information to other devices via Bluetooth, Email, Messaging, or WLAN directly.

1. Tap .
2. Tap a Contact.
3. Tap **Menu > Share**.
4. Tap a sharing application to send the contact information.



**Assign Contact Ringtone**

1. Tap .
2. Tap a Contact that you want to assign a ringtone to.
3. Tap **Menu > Set Ringtone**.
4. Tap desired ringtone.
5. Tap **OK**.

**FAVORITE CONTACT**





Add the most frequently called Contact to Favorites to access contacts quickly and easily.

**View Favorites**

Tap  then tap the favorite .

14

**Add to Favorites**

1. Tap .
  2. Tap a Contact.
  3. Tap  to add Favorites.
- Remove from Favorites**
1. Tap .
  2. Tap a Favorites Contact.
  3. Tap  to remove from Favorites

**USING THE PHONE**

To open the Phone screen, Tap **Phone**.

**Making a call**

Make a call from the Phone screen

1. Tap **Phone**.
2. Tap the phone number on the keypad.
3. Tap Dial **Button** after finished step 2

**Answering a call**

When an incoming call is received, the device may ring or vibrate and the screen displays an incoming call message. If the caller is listed in your Contact, the Contact's name appears. You may also see the caller's phone number, if available.



**Accept or reject an incoming call**


- To answer a call, drag to the right side.
- To reject the call, drag to the left side.


**Ending a call**

To end a call, tap end button.


**In-call options**

- To put the call on hold, tap **hold** .
- To place a second call while putting the current caller on hold, tap **Add call** .

- To display the on-screen keypad, tap **Dial-pad** .
- To record the call conversation, tap **Record**.

- To mute or un-mute the microphone tap **Mute** .

- To activate or deactivate the

Speakerphone tap **Speaker** .

**Call log**

The Call Log screen displays the most recent outgoing, received, or missed calls.

To view the Call Log screen, tap **Phone**

- To call an entry, touch the corresponding phone icon.
- To send a message, add to Contacts, and view call details, tap the entry.
- To remove the entry from the list, tap and hold an entry, then tap **Delete icon**.
- To clear the call log, touch **Menu > Delete > Select call log > Delete Call log > Ok**.

15

**4. EMAIL & MESSAGING**


Use Messaging to access text and MMS messages. Use Email to send and receive email messages via your internet e-mail accounts.

**TEXT MESSAGE**

A text message can only contain letters, numbers and symbols.

**Creating and sending a text message**

This device offers several ways to create and send a new text message.

1. From Messaging screen
2. Tap **Messages**.
3. Tap .
4. In the **To** field, enter the recipient's phone number.
5. Tap **Type message** then type your message.

16

**NOTES**  
If you close messaging before sending your message, the unsent message will be automatically saved as a draft.

**Receiving and managing messages**

When you send and receive messages from a contact, these messages are grouped as a message thread.

**Reply to a text message**

1. Tap **Messaging**.
2. Tap a message thread to open it.
3. Tap **Type message** then type your message.

**Forward a text message**

1. Tap **Messaging**.
2. Tap to view a message thread.
3. Tap and hold a message to display the message options.
4. Tap **Forward**.
5. In the **To** field, enter the recipient's phone number.

Delete one message thread

1. Tap [Messaging](#).
2. Tap and hold the message thread you want to delete.
3. Tap Delete icon.
4. Tap [OK](#) to confirm.

Delete several or all messages thread

1. Tap [Messaging](#).
2. Tap [Menu](#) > [Delete threads](#).
3. Select the check box of the message threads that you want to delete or tap [All](#) to select all threads.
4. Tap [Delete](#).
5. Tap [OK](#) to confirm.

Copy message text

- Use this function to save a copy of the message to the SIM card(s) memory.
1. Tap [Messaging](#).
  2. Tap a message thread to open it.
  3. Tap and hold the message to display the options.
  4. Tap [Copy](#).

## MULTIMEDIA MESSAGE

A multimedia message (MMS) can contain letters, images, audio or video file.

Create and send MMS messages

The device offers several ways to create and send an MMS message.

1. Tap [Messaging](#).
2. Tap [New Message](#).
3. In the [To](#) field, enter the recipient's phone number or email address.  
**TIP:** To add recipients from Contacts, tap [To](#) and enter at least two numbers of a contact number or two characters of a contact name. Then the corresponding contact will be listed for you to select.
4. Tap [Type to message](#), type your message.

## CUSTOMIZING MESSAGE SETTINGS

1. Tap [Application Drawer](#) > [Messaging](#).
2. Tap [Menu](#) > [Settings](#). The following message settings are available:
  - [Text message \(SMS\) settings](#): Use this setting

17

to enable Delivery reports, manage SIM1 card and SIM2 card text messages.

- [Multimedia \(MMS\) settings](#): Use this setting to enable Delivery reports, Read reports, Send delivery report, Auto-retrieve, and Roaming auto-retrieve of MMS messages. You can also set the Maximum picture resolution and Maximum message size.
- [Notification settings](#): Use this setting to enable and set notifications of new messages.
- [General settings](#): Contains the display, storage cell broadcast and service message settings.

## EMAIL ACCOUNTS

This device can send and receive emails just as you do with a computer. This device supports Internet email: email account provided by an Internet Service Provider (ISP) or web-based email, such as Gmail, Hotmail, Yahoo! Mail, etc.

Set up email accounts

1. Tap [Application Drawer](#) > [Email](#).
2. Enter your [Email address](#) and [Password](#).
3. Tap [Next](#). The device will automatically retrieve

18

the email settings.

To manually set up the email, tap [Manual setup](#).

4. Enter [Name](#) and [Account display name](#).



5. Tap [Done](#).

Add more email accounts

1. Tap [Application Drawer](#) > [Email](#).
2. Tap [Menu](#) > [Settings](#) > [Add account](#).
3. Select the email account type, enter your [Email address](#) and [Password](#).
4. Select [Send email from this account by default](#) to set this account as the default email account.
5. Tap [Next](#). The device will automatically retrieve the email settings.
6. Enter [Name](#) and [Account display name](#).
7. Tap [Next](#).

Select email accounts

1. Tap [Application Drawer](#) > [Email](#).  
The Email account screen lists the available email

accounts.

2. Tap the account you want to access.

Delete email accounts

1. Tap [Application Drawer](#) > [Email](#) > [Menu](#) > [Settings](#).
2. Tap the email account.
3. Tap [Remove account](#).
4. Tap [OK](#) to confirm.

## USING EMAIL

Compose and send emails

1. Tap [Application Drawer](#) > [Email](#), then tap an email account.
2. Tap [Menu](#) > [Compose](#).
3. In the [To](#) field, enter the recipient's email address.
4. Tap [Subject](#) Then type a subject.
5. Compose your email.
6. Tap [Send](#).

Send email from Contacts

You can send an email to a contact with an email address stored in Contacts.

1. Tap [Application Drawer](#) > [Contacts](#).
2. Tap a contact.

3. Tap [Email](#).

4. Enter a subject and compose your email.

5. Tap [Send](#).

Add attachments to email message

1. Before sending your message, tap [Menu](#) > [Attach file](#).
2. Select the type of file then select the file you want to attach.

Receive emails

Emails are automatically received in Inbox folder when the device connects to a network.

Manually receive e-mails

1. Tap [Application Drawer](#) > [Email](#), then tap an email account.
2. On the Inbox screen, tap [Refresh](#).

Read and reply to emails

1. Tap [Application Drawer](#) > [Email](#), then tap an email account.
2. On the Inbox screen, tap an email to open it.

 
The Inbox displays the email headers. When you open the email, it shows only a part of the message, unless

19

it is a very short message. Download the email to view the complete content.

Download attachments

- With POP3 email accounts, attachments are downloaded when you download the complete message.
- With IMAP4 email accounts, tap the attachment to mark it for download. The attachment is downloaded the next time you connect to your email server.



Reply or forward e-mails

1. Open the message.
2. Do any of the following:
  - Tap [Reply](#) or [Reply all](#) to reply the email.
  - Tap [Forward](#). Then enter the recipient in the [To](#) field.
3. Compose your message.
4. Tap [Send](#).

20

Manage email folders

Delete emails

1. Tap [Application Drawer](#) > [Email](#), then tap an email account.
2. On the Inbox screen, tap and hold the message.
3. Tap [Delete](#).

View other folders

If you are viewing the Inbox or a messaging list screen, tap [Folders](#), then tap the folder that you want to view.

Move between emails accounts

If you are viewing the messaging list screen of one account and you want to view the list of another account, tap [Menu](#) > [Accounts](#), then tap the account you want to view.

Customize email settings

You can configure the general settings of your email account such as account name, email checking frequency, default account, notifications, and server settings.

- Set up your account name
1. Tap [Application Drawer > Email](#) then tap an email account.
  2. Tap [Menu > Account settings](#) to view the email account settings.
  3. Tap [Account name](#) to change the account name.
  4. Tap [OK](#) to confirm.
- Set up the email checking frequency
1. Tap [Application Drawer > Email](#) then tap an email account.
  2. Tap [Menu > Account settings](#) to view the email account settings.
  3. Tap [Inbox check frequency](#).
  4. Tap an option.

5. INTERNET & BLUETOOTH

CONNECTING TO INTERNET

This device connects to Internet via:

- Wi-Fi
- Cellular Data Networks

Wi-Fi


Turn Wi-Fi on or off

1. Tap [Application Drawer > Settings > Wireless & networks > Wi-Fi](#).
2. Tap on/off switch beside [Wi-Fi](#), to turn the Wi-Fi function.


Connect to a Wi-Fi network

1. Tap [Application Drawer > Settings > Wireless & networks](#).
2. Turn on [Wi-Fi](#).
3. Tap [Wi-Fi](#). The device scans for Wi-Fi network.
4. Detected networks are displayed below. Tap a network connection then tap [Connect](#).
5. If you select an unsecured network, the connection is automatically established.
6. Otherwise, proceed to the next step.

7. When connecting to a secured network, you will be prompted for the password. Enter the password, then tap [Connect](#).

When Wi-Fi is connected, the  connection icon is displayed on the status bar.

Add Wi-Fi network

1. Tap [Application Drawer > Settings > Wireless & networks](#).
2. Tap [Wi-Fi](#).
3. On bottom of the screen, tap  then a new window is displayed.
4. Follow the on-screen instructions and enter the necessary information, then tap [Save](#) to save the settings.

Advanced/Configure Wi-Fi settings

1. Tap [Application Drawer > Settings > Wireless & networks](#).
2. Tap [Wi-Fi > Menu > Advanced](#) to access and set up more advanced options.


Cellular data network

Check the availability of service and plan rates of data


- connections with your network service provider and obtain the following information:
- Access Point Names
- Proxy
  - Port
  - User name
  - Password
- Enable data connection
1. Tap [Application Drawer > Settings > SIM management](#).
  2. To enable data connection, do not check the disable data connection check box.
- Set up wireless data connection
1. Tap [Application Drawer > Settings > Dual SIM Settings](#)
  2. Enable data connection.
  3. Tap [Default data network](#); then select the network that you want to use for data connection.
- Starting a data connection
- Data connection is automatically activated when the device is turned on. If you set up multiple data connection, select the connection you want to use manually.
- Manually start a data connection
1. Tap [Application Drawer > Settings > SIM management](#).

2. Tap [Data connection](#).
  3. Tap [SIM1, SIM2](#) or [Off](#).
- BROWSING WEB PAGE
1. On the home screen, tap [Browse](#) or tap [Application Drawer > Browse](#).
  2. Tap the address bar.
  3. Type the URL then tap [Go](#).
- To scroll the page, swipe your finger up or down and left or right.
- Manage web page
- While viewing a web page, tap [Menu](#) to change view settings or apply other functions.
- USING BLUETOOTH
- Bluetooth modes
- **On:** Bluetooth is turned on. This device detects other Bluetooth devices, but this device is not visible to others.

- **Discoverable:** Bluetooth is turned on and this device is visible to other Bluetooth devices.
  - **Off:** Bluetooth is turned off.
- To turn Bluetooth on or off
1. Tap [Application Drawer > Settings > Wireless & networks](#).
  2. Tap on/off switch to turn the [Bluetooth](#) on.
  3. To make your phone visible to others, tap [Bluetooth name](#).
  4. To adjust your device visibility time tap [Application Drawer > Visibility Timeout](#) then select adjustable time you want
- Connecting to Bluetooth devices
- A connection to a Bluetooth device is called a partnership. You need to pair and create a partnership with a Bluetooth device to exchange information.
1. Tap [Application Drawer > Settings > Wireless & networks](#).
  2. Tap [Bluetooth settings](#) to view the menu options.
  3. To search for a new device, tap [Scan for devices](#).
  4. Tap the device to connect.

**NOTES**

- The PIN entered on the device must be the same PIN entered on the other Bluetooth device.
- If you connect with an audio device which only supports HSP/HFP, "Connected to phone audio" is displayed on the screen.
- If you connect with audio device which supports HSP/HFP/A2DP, "Connected to phone and media audio" is displayed on the screen
- If necessary, tap and hold the selected device to enter device options menu.

**NOTES**




- Once a partnership has been created, connecting to that device again will no longer require entering the pass-code

6. MULTIMEDIA APPLICATIONS


VIDEOS AND PHOTOS

This device is equipped with camera to take videos and photos.

Record videos

- 1. Tap [Application Drawer > Camera](#).
- 2. Aim the device at the subject.
- 3. Tap  then choose  to activate the video.
- 4. To start recording, tap  To stop recording

Take photos

- 1. Tap [Application Drawer > Camera](#).
- 2. Tap and hold  to focus on the subject.
- 3. Release your finger to take the shot.

VIEWING PHOTOS

View Photos in the Album

- 1. Tap [Application Drawer > Gallery](#).
- 2. Tap a folder to view the images.
- 3. Tap an image to view in full screen.
- 4. Swipe your finger to the left/right to view the previous/next image.
  - Stretch image to zoom in or zoom out.
  - To play the slideshow, tap [Menu](#) select [slideshow](#)
  - To delete, or edit the image, tap [Menu](#) then tap desired option.

USING MUSIC PLAYER

Play music

- 1. Tap [Application Drawer > Music](#). Library screen is displayed.
- 2. Tap a song to start playback.

Create a Playlist

Add songs to a specific playlist or create a playlist.


- 1. Tap [Application Drawer > Music](#). The Library screen is displayed.
- 2. Tap and hold the song you want to add.
- 3. Tap [Add to playlist](#).

- 4. Select from the current playlist or tap [New](#) to create a new playlist. The song is added to the playlist.

Remove a music file from playlist

- 1. Tap [Application Drawer > Music](#). The Library screen is displayed.
- 2. Tap [Playlists](#) and select the desired playlist.
- 3. Tap and hold the song that you want to remove from playlist.
- 4. Tap [Remove from playlist](#).
- 5. The song is removed from the playlist.

FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume. Tap the (  ) to search the channels.

PROGRAMS

7. PROGRAMS

Backup and Restore

Open the Backup and Restore, you can backup your Data as Contacts,SMS,Apps etc.

BROWSER

Open the Browser to view web pages.

CALCULATOR

With Calculator, you can perform basic arithmetic functions on your device. Tap [Application drawer > Calculator](#).

CALENDAR

The Calendar lets you schedule and sound alarms for appointments, meetings and other events. Scheduled appointments for the day can be displayed on the Home screen.

To schedule an event

- 1. Tap [Application Drawer > Calendar](#).
- 2. Tap twice on the date.
- 3. Enter the event name.
- 4. Tap the [From](#) and [To](#) date and time boxes.Slide to select time, then tap [Done](#) to set the date and time.

- 5. To set repetition, select the repetition from the list.
- 6. To set a reminder, select the reminder time from the list.
- 7. When finished, tap [Done](#) to return to the calendar

CAMERA

Capture images with this device. See “Take Photos” on chapter 6.

CLOCK

Can not set date and time. See “Setting alarms” on chapter 8.

CONTACT

View or manage your contact list. See “Contact” on chapter 3.

Downloads

From Browser downloading/downloaded files showing here

PROGRAMS

EMAIL

Use Email to connect to your remote mailbox to retrieve your new email messages, or view your previously retrieved email messages offline.

File Manager

Open the application, User can manage the files of stored in Memory

MESSAGING

Use the Messaging to send or receive text and MMS messages. See “Text Message” on chapter 4.

PLAY MUSIC

Use the Music player to play music files or recorded voice files. See “Using Music Player” on chapter 6

GALLERY

You can view your captured images,recorded video clips, and downloaded images in the Gallery.

- 1. Tap [Application Drawer > Gallery](#).
- 2. Tap the desired folder to view the camera pictures

or camera videos. The images or videos are displayed in thumbnails.

- 3. To view photos or videos, see “Viewing Videos & Photos” on chapter 6.

PHONE

Use [Phone](#) to make phone calls or manage call log. See “Learning the basics” on chapter 3.

SETTINGS

In the [Settings](#) menu, you can view and make adjustments for wireless & network settings, Device settings, Personal settings and System settings. See “Managing Your Phone” on chapter 8.

Video Player

Use the Music player to play Video files or recorded video files.

8. MANAGING YOUR PHONE

DEVICE SETTINGS

Device Setting  
Tap [Application Drawer > Settings](#) to view and adjust the settings of this device. The Settings menu is categorized into: Wireless & networks, Sound, Display, Storage, Language & input, Date & time, and About phone.

Wireless & networks

Setting	Description
Dual SIM Setting	Your device supports Dual Sim setting, which can be managed by accessing the Dual SIM Setting.
WLAN	Set up and manage wireless access points.
Bluetooth	Manage connections, set device name, and discoverability of the device.
Data usage	Serves to determine a connection based on data from a device.

More	Set options for network applications.
Audio Profiles	
Setting	Description
General	Select the desire Audio profiles, Volume and vibrate menu.
Ringtones and Notification	Select the desire ringtone (Voice call, Video call, notification and message)
System	Check to activated/deactivated the system service on the list.
Display	
Setting	Description
Brightness	Adjust the brightness of the screen.
Wallpaper	Select the desire wallpaper through this menu.
Auto rotate screen	Switch orientation automatically when rotating the device.

Sleep	Adjust the delay before the screen automatically goes off.
Font Size	To Adjust the font of Smartphone.
Storage	
Setting	Description
Internal storage	Show available phone storage.
Total space	Show the total space memory card storage.
Language & input	
Setting	Description
Language	Select language and region for this device.
Personal dictionary	Add user preset words to the dictionary.

Date & time	
Setting	Description
Automatic date & time	Check to use network provided values.
Automatic time zone	Check to use network provided values.
Set date	Tap to set date for this device.
Set time	Tap to set time for this device.
Select time zone	Tap to set time zone for this device.
Use 24 hours format	Set the clock to 24-hour format.
Choose date format	Set the preferred date format.

About Phone  
View legal information, device status and software version.

CHANGING BASIC SETTINGS

Date and time  
To set the date and time  
1. Tap [Application Drawer > Settings > Date & time](#).  
2. Tap [Set date](#) to set the date.  
3. Tap [Set time zone](#) to select the time zone from the list.  
4. Tap [Set time](#) to set the time.  
5. To use 24-hour format, tap [Use 24-hour format](#).  
6. Tap [Select date format](#) to select the format of date.

Display Settings  
The display settings of this device affect the battery and external power level.

USING WIRELESS & NETWORKS

Wireless & networks allows you to manage Wi-Fi, Bluetooth, airplane mode, and mobile networks.

1. Tap [Application Drawer > Settings > Wireless & networks](#).
2. To enable or disable [Wi-Fi](#) or [Bluetooth](#) tap on/off switch beside their own settings.
3. To change connection settings, tap the corresponding function settings then select the setting to change.

PROTECTING YOUR PHONE

You can protect this device from unauthorized users by requiring the PIN code or entering a password.  
Enable or Disable SIM card lock  
When PIN code is enabled, you are required to enter the PIN code before making a call.  
1. Tap [Application Drawer > Settings > Security](#).  
2. Tap [Set up SIM card lock](#).  
3. Select [Lock SIM card](#) to require PIN to use the device.  
4. Enter the current PIN code.  
5. To change the PIN code, tap [Change SIM PIN](#).  
6. Enter the old PIN code.  
7. Enter the new PIN code and confirm.

RESETTING THE DEVICE

You can reset your phone to its factory defaults.  
1. Tap [Application Drawer > Settings > Backup & reset](#).  
2. Tap [Factory data reset](#).  
3. Tap [Reset phone](#) to erase all data on your device.



## APPENDIX

## SAFETY INFORMATION

Please read before proceed

1. Use only the batteries and power adapter provided by the manufacturer. Use of unauthorized accessories may void your warranty.
2. Do not remove the battery while the phone is charging.
3. Avoid using the phone near electromagnetic sources such as TVs, radios, and microwave ovens.
4. Unplug the power adapter from the wall outlet during lightning storms to avoid electric shock or fire.
5. Do not expose the phone or the battery to direct sunlight.
6. Do not store your phone in temperatures higher than 47°C.
7. Do not use harsh chemicals or detergents to clean your phone.

8. Do not handle the phone with wet hands while it is being charged. This may cause an electric shock or serious damage to the phone.
9. The operating temperature for this device is from 0°C to 47°C.

## Safety Precautions for battery use

1. Use only approved battery.
2. Keep the battery dry and away from any liquid since this may cause a short circuit.
3. Keep the battery away from metal objects since this may cause a short circuit.
4. Do not use damaged or deformed batteries.
5. If the battery emits a foul odor, discontinue use.
6. Keep the battery away from babies and small children.
7. If the battery leaks:
  - a. Do not allow the leaking fluid to come in contact with your skin, eyes or clothing. If already in contact, rinse with clean water immediately and seek medical advice.
  - b. Keep the battery away from fire since this may cause the battery to explode.

8. Do not attempt to open or service the battery yourself.
9. Do not dispose battery in fire or water.
10. Recycle or dispose used batteries according to the local regulations.

## Road and environmental safety

1. Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
2. Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

## Safety in aircraft

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is against the law in most countries to use the phone on board an aircraft.

## FCC Statement:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone

transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network.

In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.351W/Kg** and when worn on the body, as described in this user guide, is **0.786W/Kg** (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **1.154W/Kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: **2AAIWBLESS** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.