


Video Walkie Talkie

CONTENTS: 2 Video Walkie Talkie 1 Instruction Guide

HOW TO OPERATE:


- Move the power switch to 'On' position of both units.
- Images of the other unit will be displayed on the LCD.
- Press and hold the Press to talk (PPT) button on the left hand side of your unit to transmit your voice. You shall hear the voice transmitted from the other unit by the speaker.
- Press the "volume up" / "volume down" button to adjust the voice volume.
- Press the "mode" button to switch between you as the big image to display or the other unit as the big image to display.
- Insert an earphone into the earphone jack (earphone not included) on the right hand side to enter the full duplex mode. You will not need to press and hold the PPT button to transmit your voice. Just talk like you are on a phone. You will hear the voice from the other unit via the earphone, but not the speaker.

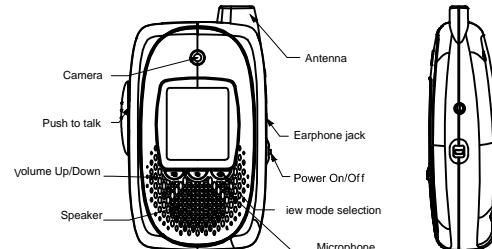

HOW TO REPLACE/INSTALL BATTERIES

- One unit of the product requires 3 x 1.5V AAA/LR03 type batteries (6 batteries in total for a pair)
- Open the battery door at the back of the unit with a screwdriver.
- Remove the old batteries if exist.
- Please ensure the polarity of the battery is correct. The polarity is printed on the bottom of each battery slot.
- Insert fresh batteries.
- Close the battery door and tighten the screw.

** Please note changing battery shall be performed by adult and shall not be performed by children.

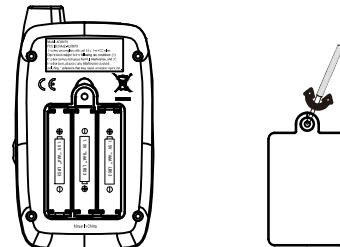**IMPORTANT SAFETY INSTRUCTIONS**

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

Please retain the packaging for future reference since it contains important information.

WARNING

For ages 6 and up.

Warning ! not suitable for children under 3 years , small parts.

Use this unit only for its intended use as described in this manual.

You can plug headphones into the HEADPHONE JACK to listen more stealthily. This will turn off the speaker on the VIDEO WALKIE TALKIE™. Head phone not included. Choose a headphone that complies with EN60065:2002+A12:2011

Special Note to Adults: Parental guidance is recommended when installing or replacing batteries. Regularly examine the toy for damage. In the event of any damage, the toy must not be used until the damage has been repaired. This toy is not intended for children under 3 years old.

NOTE: Your VIDEO WALKIE TALKIE™ will automatically turn off after 15 minutes. There will be a beeping noise at 14 minutes of inactivity to warn you about auto shut off. Press any button to keep using your VIDEO WALKIE TALKIE™.

NOTE: If you plug headphones into both units you no longer have to press the TRANSMIT BUTTON to transmit sound to each other. Both units will continuously stream audio.

NOTE: If normal function of the product is disturbed or interrupted, strong electromagnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the product to another location and try again. To ensure normal performance, change the batteries, as low batteries may not allow full function.

Care and Maintenance: Always remove batteries from the toy when it is not being used for a long period of time. Wipe the toy gently with a clean damp cloth. Keep the toy away from direct heat. Do not submerge the toy in water. This can damage the electronic assemblies.

Warnings concerning the use of the battery**Battery safety information**

Requires 3 x 1.5V AAA/LR03 alkaline batteries (not included). Batteries are small objects.

- Replacement of batteries must be done by adults. - Follow the polarity (+/-) diagram in the battery compartment.

- Promptly remove dead batteries from the toy.

- Dispose of used batteries properly.

- Remove batteries for prolonged storage.

- Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.

- DO NOT dispose of this product in fire, as batteries inside may explode or leak.

- DO NOT dispose of batteries in fire, as batteries may explode or leak.

- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/ standard).

- DO NOT use rechargeable batteries.

- DO NOT recharge non-rechargeable batteries.

- DO NOT short-circuit the supply terminals.

Battery disposal

Requires 3 x 1.5V AAA/LR03 alkaline batteries (not included). Batteries or battery packs must be recycled or disposed of properly. When this product has reached the end of its useful life it should not be disposed of with other household waste. The Waste Electrical and Electronic Equipment Regulations require it to be separately collected so that it can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheelie bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Modifications to this product will void the user's authority to operate this equipment.

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device."

IC Déclaration

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Remarque: Toute modification de ce produit annule l'autorité de l'utilisateur à utiliser cet équipement.



Product Name: Video Walkie Talkie

Model Number: AC00079

Manufactured by Actron Company Limited

<http://www.actron.net.cn>