

SoundFlex™

WATER RESISTANT BLUETOOTH SPEAKER



Pairing device with your SoundFlex:

Before using the SoundFlex, please pair it with your smartphone, MP3 player, computer or any Bluetooth-enabled device.

1. Long press the button for 2-3 seconds to turn on SoundFlex. There is a warning tone and the blue indicator light will flash quickly, this is indicating "pairing mode".
2. When your bluetooth-enabled device discovers the SoundFlex, Blue indicator light will switch to slow blinking to indicate pairing is successful.
3. If your SoundFlex has connected to your bluetooth device before, then when you turn on the speaker it will automatically connect with your last paired bluetooth device.

Included:

1. SoundFlex Speaker
2. Charging Cable
3. User Manual

Charging your SoundFlex:

Your SoundFlex uses a rechargeable battery. Fully charge battery before using. Please turn OFF before charging.

1. Use the USB cable provided to connect to any computer or power adapter. When charging, the red indicator light will appear.
2. When fully charged, the red indicator light will turn off. Charging time: Approximately 2hrs. Turn SoundFlex off when not in use to save battery life.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Note: Modifications to this product will void the user's authority to operate this equipment.



Remark: Product is in IPX4 Water Splash level.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Playing music:

After pairing is established, you can play music from your Bluetooth-enabled device. Music and volume can be controlled by your device. While playing music the LED light will stay blue and slowly blink when paused. Short press the button for answer phone call, and short press to hang up the call. Indicator light will stay blue during the call.

Recycling Lithium batteries:

Lithium batteries are recyclable. When the lifespan of this product is complete, you can help preserve our environment by returning this product to the collection and recycling location nearest you. For more information call toll free 1-800-822-8837 or visit <http://www.call2recycle.org/>

Troubleshooting:
If your Bluetooth-enabled device fails to locate the SoundFlex, check that the speaker is ON. Ensure that your device is within range (within 30 feet/10 meters). Restart your SoundFlex to reactivate Bluetooth pairing mode. Ensure that your speaker is not connected or paired to any other Bluetooth device as the SoundFlex can only be paired to one device at a time.

WARNING
DEVICE IS WATER RESISTANT NOT WATER PROOF