


BoConcept

Occa 5620

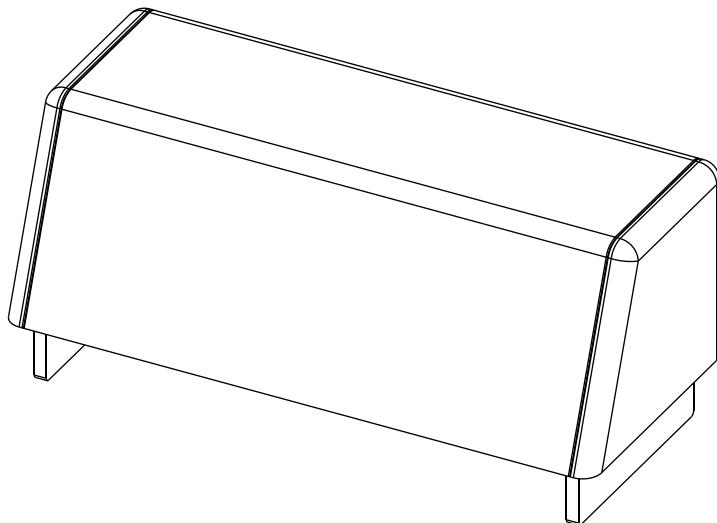

USER MANUAL

Contents

02 CONTENTS

03 SAFETY PRECAUTIONS

04 FCC WARNING STATEMENT

INTRODUCTION OF REAR PANEL FUNCTIONS

05 CONNECTING YOUR SPEAKERS

BLUETOOTH FUNCTION

06 USE WITH IPOD/MP3 PLAYER

07 CONNECT TV, DVD, CONSOLE, PC

08 LIMITED WARRANTY

Safety

Safety Instructions



- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 16) An appliance inlet coupler is used as the disconnect device, the disconnect device shall remain readily operable.

FCC Warning Statement


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Introduction of Rear Panel Functions

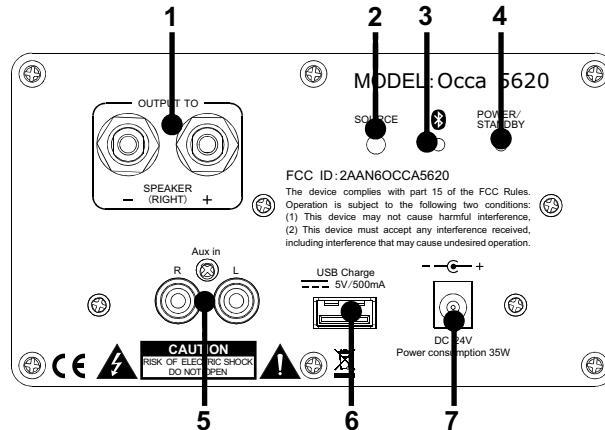

01 RIGHT CHANNEL OUTPUT

Signal output, for connecting the passive BoConcept speaker.

Green LED - AUX signal input.
Blue LED - blue signal input.

02 INPUT MODE SELECTOR

03 BLUE LED INDICATOR LIGHT (Bluetooth mode)

04 POWER/STANDBY LED

Red LED - the unit is in standby.


05 AUX IN

For right/left RCA stereo plugs, from CD/DVD player.

06 IPOD CHARGE SOCKET

07 POWER SUPPLY INPUT

Connecting your speakers

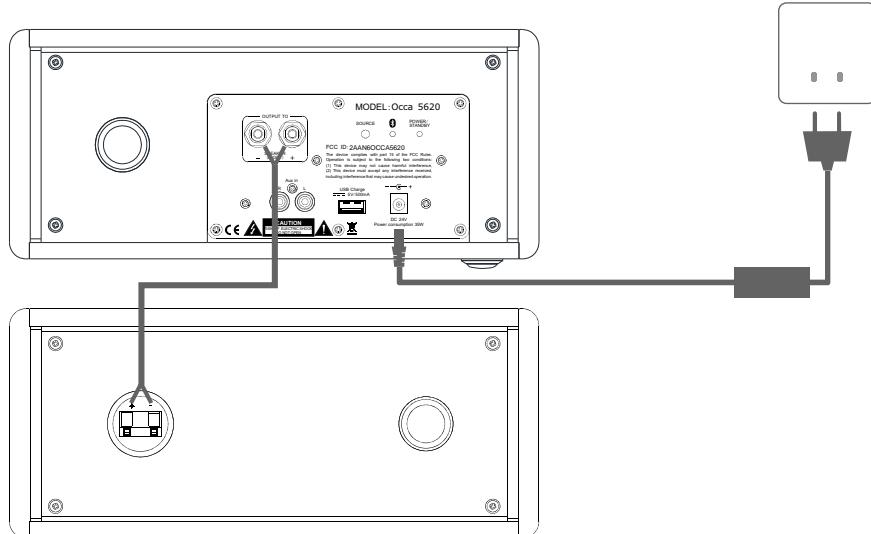

STEP 1

Connect the RED (+) and BLACK (-) terminals from the left speaker to the corresponding terminals on the right speaker using the included speaker cable. Insulation on cable must be stripped on all ends.

Note: Because this system is self-powered, do not connect the speaker terminals to the speaker outputs of a stereo receiver.

STEP 2

Connect the power cord into the left speaker and the other end into the wall outlet.

Bluetooth function

Pair Bluetooth device with Occa 5620:

If you have a Bluetooth function audio device, such as phone, music player, computer and connect it with BoConcept at the first time, you should pair them as below.

1, Power on BoConcept and select Bluetooth settings/function on the audio device. Wait a few seconds, to let devices go into normal working condition.

2, Press the input button "SOURCE" on rear panel and switch to Bluetooth input mode. Then the blue indicator will be flashing. If not, please check whether there is any other Bluetooth device already connected with BoConcept, and turn off other Bluetooth device.

3,Please use your Bluetooth device to search the new Bluetooth device named "BoConcept". If pairing code is needed, please enter "0000".

4,If pairing is successful and the BoConcept is connected, the blue indicator will be long on. Pairing is now finished.

5,Once paired the same Bluetooth device works again, no need of pairing one more time, BoConcept will auto connect with device pairing last time.

Bluetooth function operation


1,If your Bluetooth audio device was connected with BoConcept (if not, please read the pairing Bluetooth device with BoConcept).

2,To select Bluetooth input mode, you can press the input select button "SOURCE" on rear panel and switch to Bluetooth input mode.



3,If your Bluetooth audio device supports AVRCP agreement, you can use your phone, music player and computer etc. to select "PLAY/PAUSE/PREV/NEXT".

Use with iPod/MP3 player

A

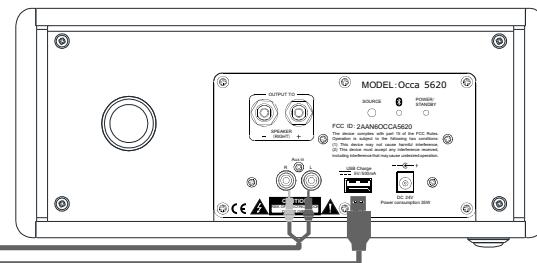

B

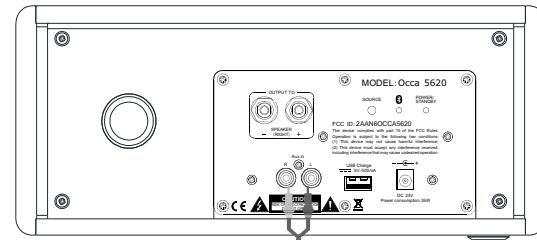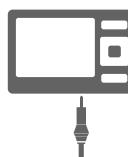

CONFIGURATION A (For use with iPod) :

For charging your iPod while playing, connect the 30-pin cable from the iPod to USB jack on the rear panel.

Connect the 3.5mm minijack audio cable from iPod headphone jack to the AUDIO IN connector on the rear panel of BoConcept Active.


CONFIGURATION B (All products with 3. 5mm minijack outputs) :

Connect the STEREO INPUT L/R from any audio source with PCA L/R audio outputs. Connect the 3. 5mm minijack audio cable from 3. 5 minijack output to the AUDIO IN connector on the rear panel.


Attention: When connecting audio cables the power switch must be turned OFF. After connecting alle cables the power can be turned ON and the system is now ready to use.

Connect TV, DVD, console, PC

A

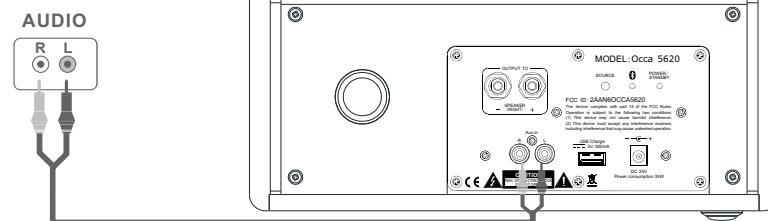

B

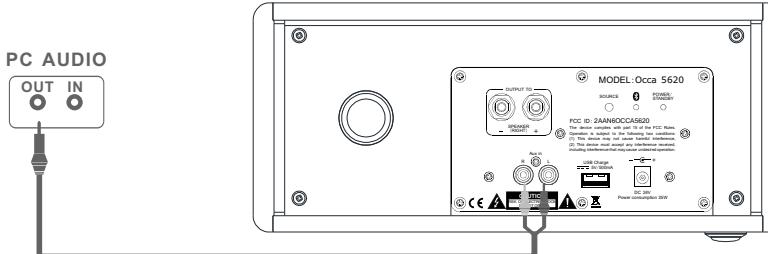

CONFIGURATION A (TV, DVD, CD-RCA stereo plugs) :

Connect the RCA L/R to your TV, DVD etc. And the RCA L/R to the AUDIO IN on the rear panel of the BoConcept speaker.

Note that most newer TV remotes can control the BoConcept active speaker volume if connected to variable TV audio out.

CONFIGURATION B (PC) :

Connect the minijack to your PC and the RCA L/R to the AUDIO IN on the rear panel of the BoConcept speaker.

Limited Warranty

Dear Customer,

This product has been designed and manufactured to the highest quality standards, however if something goes wrong with this product, and the country distributor warrants free replacement parts or repair by the official distributor.

This limited warranty is valid for the original owner for a period of two years from the date of purchase, it is not transferable.

What is covered by the limited warranty:

The limited warranty covers all production and material defects of the product, except for the damages stated below.

What is not covered by the limited warranty:

Damages caused by packing and transport

Defects caused by accidents, misuse, normal wear and tear, mis-maintenance, voltage variation and overloading.

Damages caused by incorrect installation or operation Damages caused by modification or repair by a nonauthorised service centre and use of non-original spare parts

Other damages due to conditions beyond the supplier's control such as fire, rain, stroke of lightning, war and other force majeure events

How to claim parts or repair under warranty:

To have your product serviced under warranty, you must contact the dealer from where you bought the product.

You will need to produce this warranty booklet completed and stamped by your dealer on the date of purchase. Alternatively, you will need the original sales invoice or other proof of ownership and date of purchase.

The supplier is liable only to repair or replace defective parts of products and the supplier is not responsible for indirect losses or damages arising from the use of the product.

Transportation costs for servicing are not covered by the warranty.

A service repair or replacement cannot exceed the value of the product under warranty, in no event shall the supplier be responsible or liable for special, incidental, consequential or indirect damages.

Dealer name and stamp:

Date of purchase: