 




QUICKSTART | 136mm\_69mm | 2mm zalewki OKLADKA PANT



Play together

**QUICK START**





## STEP 1

Go to [www.poweredboardgames.com](http://www.poweredboardgames.com) and download  
**POWEREDBOARDGAMES** application.

Available operating systems:



Available on the  
**App Store**



ANDROID APP ON  
**Google play**

## STEP 2

Go to Settings on your device and enable **Bluetooth** connectivity.



**Bluetooth**®



 


## STEP 3

Find downloaded **POWEREDBOARDGAMES** application icon on your home screen and tap it to launch it.



**Board Games!**





## STEP 4

Turn on **DICE+** by flipping it upside down. It will connect automatically.



After waking up **DICE+** glows blue, which indicates it is searching for a compatible game.



When flashing changes from blue to green it means **DICE+** has connected.





## STEP 5

Choose a game from the **POWEREDBOARDGAMES** application and **have fun playing together!**

 




## CHARGING

**DICE+** flashing red indicates a low battery level. If **DICE+** does not react, the battery may be discharged.

To recharge, push and slide the face marked with dots and plug in the micro USB cable. A full charging cycle takes up to **2 hours**.



PUSH AND SLIDE

You can check the battery level anytime in My Profile in **POWEREDBOARDGAMES** application or by plugging **DICE+** into your device using the micro USB cable.



low battery level



medium battery level




high battery level





## TURNING OFF

 DICE+ switches off automatically after **1 minute** once you exit the **POWEREDBOARDGAMES** application.



Need more info?  
Go to [www.dicepl.us/FAQ](http://www.dicepl.us/FAQ)





QUICKSTART | 136mm\_69mm | 2mm zalewki OKLADKA PANT



POWEREDBOARDGAMES.COM

