

Beneworld International(HK) Co., Limited
www.beneworld.cn

Tablet PC



User Manual

Contents

Tablet PC.....	1
User Manual.....	1
Contents	2
1 Introduction.....	4
1.1 Acknowledgements	4
1.2 Precautions	4
1.3 Safety Instructions.....	4
1.4 Abbreviations/Terms	5
2 Quick Look at MID.....	6
2.1 MID Usage and Preparation.....	6
2.2 MID Status and Notification	6
3 Quick Start	8
3.1 Functions of Keys	8
3.2 Power On & Power Off.....	8
3.3 Switch On/Off Screen	9
3.4 Application of Touch Screen.....	9
3.5 Home Screen.....	11
3.6 Access Application	15
3.7 USB Connection	16
3.8 Input Text.....	17
3.9 Tips and Tricks	18
4 Basic Setting	19
4.1 SIM card management	19
4.2 WI-FI & WLAN.....	21
4.3 Bluetooth.....	23
4.4 Data usage.....	27
4.5 More.....	27
4.6 Audio Profiles	33
4.7 Display	35
4.8 Storage	39
4.9 Battery.....	41
4.10 Application	41
4.11 Location access	43
4.12 Security	44
Note: Only when activating unknown sources can realize successful manual installation of APK file	46
4.13 Language and Input Method	46
4.14 Backup and reset	48
4.15 Account and sync	49
4.16 Date and time	50

Beneworld International(HK) Co., Limited

www.beneworld.cn

4.17 Scheduled power on and off.....	51
4.18 Accessibility	52
4.19 Developer Selection	52
4.20 About tablet.....	53
5 Multi-Media	54
5.1 Music player.....	54
2. Operations of music player keys are as shown in Picture 5.25.2 Video.....	55
5.2 Video	55
5.3 Gallery.....	56
5.4 Camera	57
5.5	59
6 Communication Function.....	60
6.1 Call.....	60
6.2 Messaging	61
6.3 Contact	61
7 Internet	63
7.1 Browser.....	63
7.2 Email	63
8 GPS Function	66
9 Other Apps	68
9.1 Clock.....	68
9.2 Calculator.....	68
9.3 File Manager	69
9.4 Sound Recorder.....	71
10.1 Installation.....	72
10.2 Uninstallation Uninstall Apps	72
11 Troubleshooting.....	73

1 Introduction

1.1 Acknowledgements

Thank you very much for purchasing our Tablet PC! BW9 is a high-definition tablet PC. It features the master chipset of MT8312 with Dual-core Cortex-A7 processor and basic frequency of 1.2GHz. The product is based on the Android 4.2 operating system. All these features make it easily compatible with the third-party applications (“apps”).

The product’s built-in functions of Wi-Fi, BT, GPS, 2G and 3G offer easy connection to wireless network to freely surf the Internet whenever and wherever possible. The built-in high-precision GPS module can realize navigation function by installing a map app. In addition, the built-in kinds of sensors provide you brand-new operation and entertainment experience. The built-in camera, shooting and other functions lead e-consumer to a completely new age of handheld Internet entertainment.

The Manual systematically introduces multi-functions, application skills and precautions of the mobile Internet device (MID). Please read the Manual carefully before using the MID.

1.2 Precautions

Maintenance

- Please keep the device dry. Do not expose the device, battery and charger to water or moisture, or use wet hand to operate the device/charger to avoid short circuit of device, failure arising from corrosion and electric shock.
- Do not let the device, battery and charger be subjected to strong shock or shake to avoid failure of the device, battery and charger.
- Do not place the device, battery and charger at places with too low or too high temperatures. Otherwise, it may cause failure of the device, battery or charger.
- Do not strike, throw or prick the MID to avoid unintentional fall, crush or bend.
- Do not dismantle the device and its accessories arbitrarily. Otherwise, the device and its accessories will be deprived of warranty.
-

1.3 Safety Instructions

Please peruse the instructions in the section prior to using the MID, and make sure your children understand all these instructions. For more details, please refer to the Safety Instructions

Beneworld International(HK) Co., Limited

www.beneworld.cn

and Precautions.

- Do not use the MID when driving for safety concerns.
- Please conform to the relevant rules and regulations in medical premises. Please shut down the MID when staying around medical facilities.
- Please shut down the MID or activate the airplane mode when boarding an airplane to prevent wireless signals from interfering in the airplane's control signal.
- Please shut down the MID when a high-precision electronic device is working nearby. Otherwise, it may cause failure of the electronic device.
- Do not dismantle the MID and its accessories arbitrarily. Only the authorized agencies are able to repair the MID.
- Please keep the MID away from any magnetic equipment. Otherwise, the radiation emitted by the MID will clear the information stored in the magnetic equipment.
- Do not use the MID at places with high temperature or inflammable gas, e.g. around a gas station.
- Please keep the MID and its accessories out of reach of children. Do not let children use the MID without supervision.
- Please comply with the relevant laws and regulations, and respect others' privacy and legal rights when operating the MID.
- Please strictly follow the relevant instructions contained in the Manual when using a USB data line so as to avoid damaging the MID or PC.
- Do not use the MID in bathroom or any other moist circumstances. Always avoid soaking or flushing the MID.

1.4 Abbreviations/Terms

Abbreviation/ Term	Full Name	Description
MID	Mobile Internet Device	Mobile Internet Terminal
Wi-Fi	Wireless Fidelity	WLAN based on IEEE 802.11b standard
TF	TransFlash	Also named Micro SD, a super-mini memory card

2 Quick Look at MID

2.1 MID Usage and Preparation

Charge Battery

Please charge the battery prior to initial use of the MID.

1. Charge the MID with a power adapter.
2. Check the power indicator.

2.2 MID Status and Notification

Notification Icons

When a prompt message is displayed on your notification panel, click the column box and slide to open the notification list,. Click the option to be checked to view details. And then it's available to click and slide the message box upward to close the message window. The status bar icons are explained below.

	New Mail		Airplane Mode
	USB Connected		USB Debugging Connected
	Back		Downloading
	Display Recent Apps		Home
	Battery Level		Connected to Wi-Fi

Picture 2.1

Beneworld International(HK) Co., Limited

www.beneworld.cn

Notification Panel

The notification bar will report new mails, Wi-Fi activation and ongoing operations. You can open the notification panel to view details.

Open Notification Panel

When a new notification icon is displayed on the notification bar, please click the notification bar to open the notification panel.

3 Quick Start

3.1 Functions of Keys

Introduction to Functions:

Power	Short-press to activate sleep/wake mode, long-press to activate Power On & Power Off functions
Volume Up	Increase volume
Volume Down	Lower volume
HOME 	Make a click in any interfaces to go back to main interface
Back 	Make a click in any interfaces to go back to parent directory
Menu 	The key will be displayed in apps of the Menu key
Recent Apps 	Record the user's browsing history

3.2 Power On & Power Off

Power On

The startup screen will be displayed after you hold the POWER key for three seconds. The system will turn to the screen-lock mode after activation. Then you need to unlock the screen.

Power Off

1. Power-off options will pop up after you hold the POWER key.
2. Power-off options include Mute Mode, Reboot, Airplane Mode and Power Off.
3. Just click on the Power Off option.


3.3 Switch On/Off Screen

Screen will be switched off automatically in idle condition

1. After idling awhile, the screen will be switched off automatically to save power.
2. Press the POWER key when the screen is in Switched On mode and it will be switched off immediately.

Switch on the screen under Switched Off mode

Press the POWER key to switch on the screen in Switched Off mode. The screen will proceed to the Lock mode after being switched on. Then click the Mini Lock icon on the screen to display the picture as shown in Picture 3.1. Slide to unlock the screen.

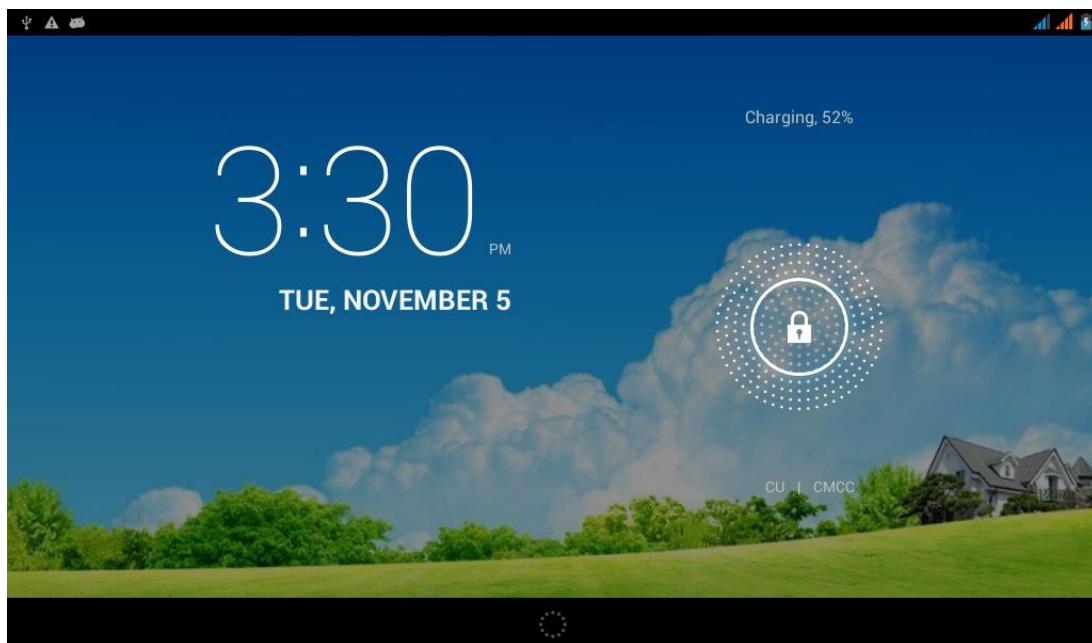

Picture 3.1

3.4 Application of Touch Screen

Operating Modes in MID

There are a variety of modes to browse the Home screen, Menu and apps on your MID.

Click

When you want to input information through screen keyboard or select apps and other items on the main UI, just touch and click the target on the screen.

Beneworld International(HK) Co., Limited

www.beneworld.cn

Hold

If you want to activate available options of an item, e.g. textbox or website links, or shortcut on main UI and shift main program menu, just hold the icon of the item.

Quick Slide or Slide

Quick Slide or Slide indicates the quick action of vertical or horizontal drag-and-drop by a finger on the screen.

Drag-and-drop


Before you start a drag-and-drop action, you must hold the item hard with your finger and do not release your finger until the specific item is dragged to the right place.

Rotation

For most of pictures, lateral rotation of the MID during operations like text input and music entertainment will automatically turn the screen to a vertical position from being horizontal,

View Notification Bar

Drag downward after making a click in the upper right-hand corner of the MID, you can view the system task notification, as shown in Picture 3.2.

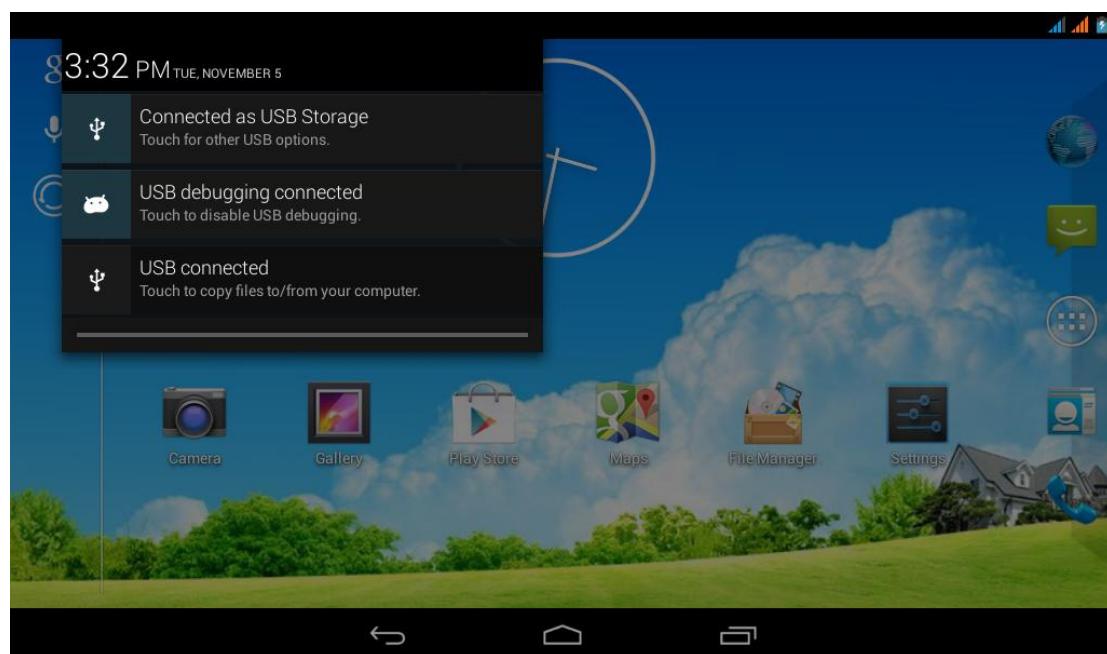


Picture 3.2

Beneworld International(HK) Co., Limited

www.beneworld.cn

View Basic System Infomation

Drag downward after making a click on the upper left-hand corner of the MID. Then you can view basic system infomation. You can view or revise information as required through all these shortcuts, as shown in Picture 3.3.

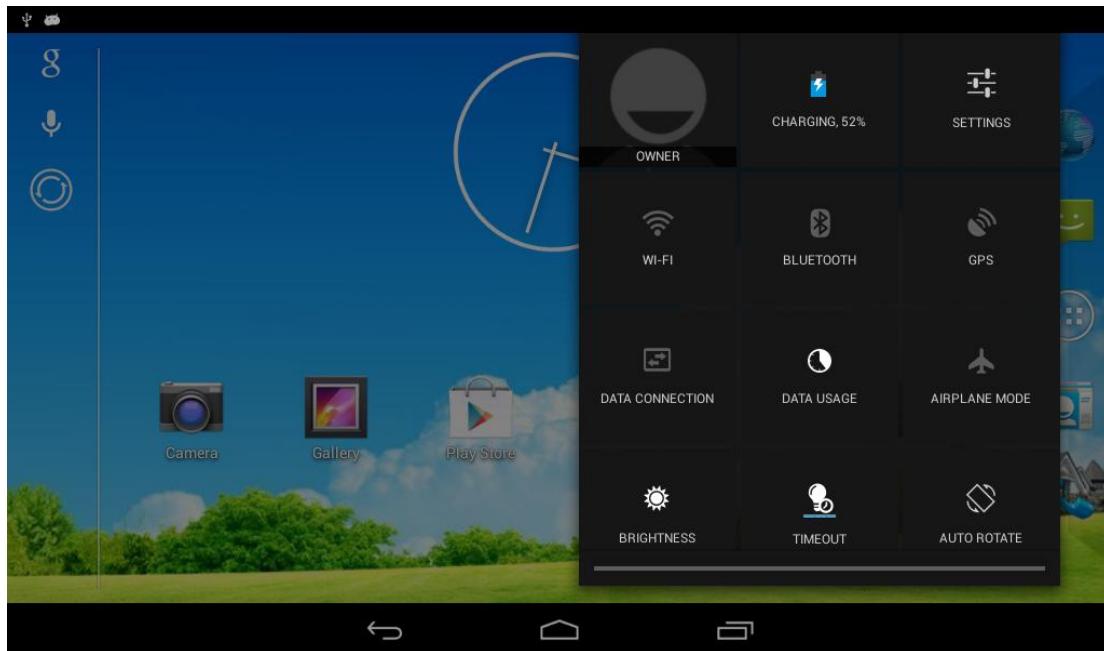


Picture 3.3

3.5 Home Screen

The Home screen is as shown in Picture 3.4. You can use apps and shortcuts, and customize the wallpaper of the main UI (user interface) by holding any blank space of the screen.

Beneworld International(HK) Co., Limited


www.beneworld.cn

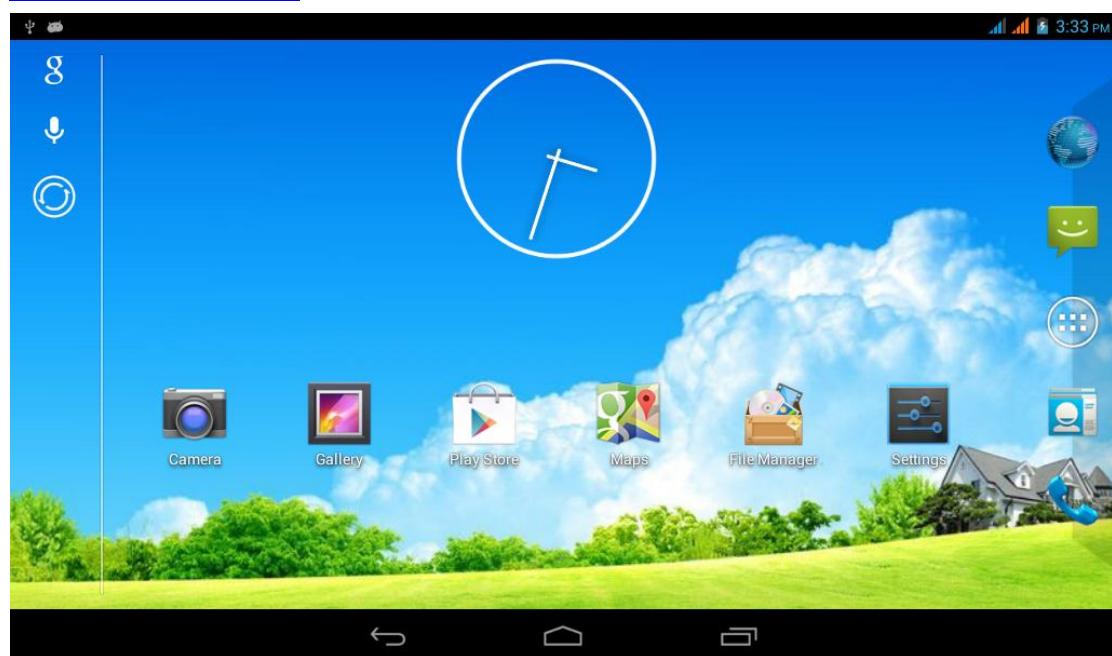

Picture 3.4

Extensible Home Screen

The Home screen or main UI can be extended beyond the screen itself, so as to provide more space for you to accommodate additional shortcuts, widgets, etc. Press at any blank space of the main UI and fastly slide to right or left. Then you can reach the left or right side of the Home screen. As shown in Picture 3.5, there are more than two (2) extensible pictures on the main UI.

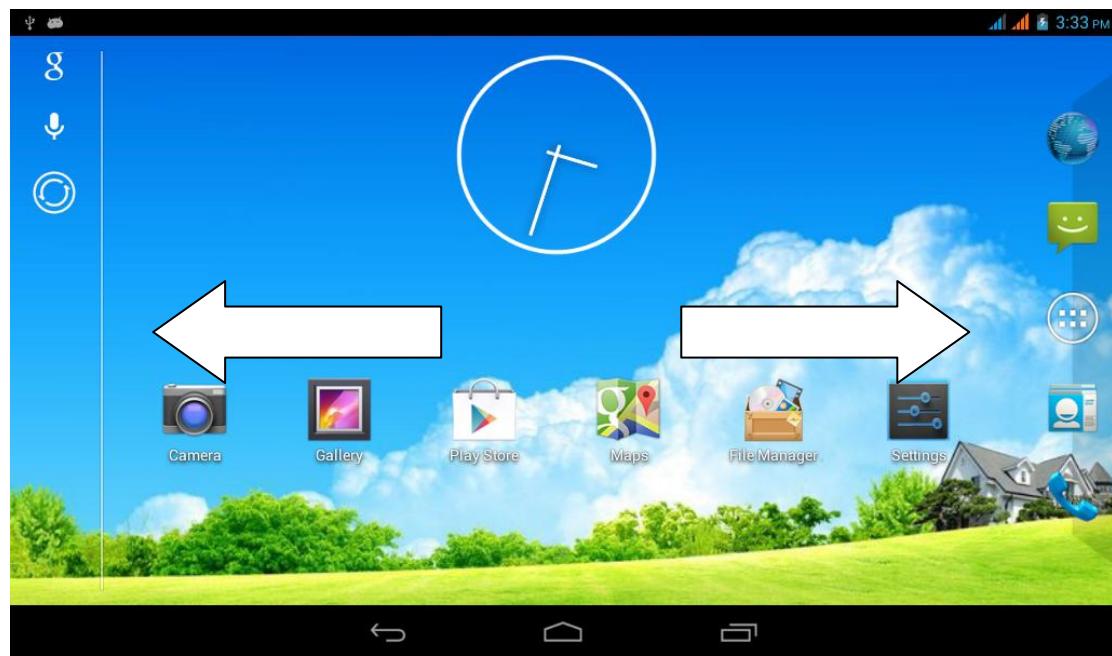

Beneworld International(HK) Co., Limited

www.beneworld.cn


Picture 3.5

Manage Shortcut Icons of Apps on Desktop

Create Folder Icon on Desktop

1. Drag all icons together to stack on a master icon (or converge them different icons), as shown in Picture 3.6.
2. Then click the master icon where many shorcuts are overlayed and unfold all the app icons, as shown in Picture 3.7.

Click the lower edge of the black box to display the position of "Unnamed Folder". The hidden keyboard will pop up for you to rename the folder (as with Apple's IOS system). In addition, you can hold the app icons to adjust their positions.

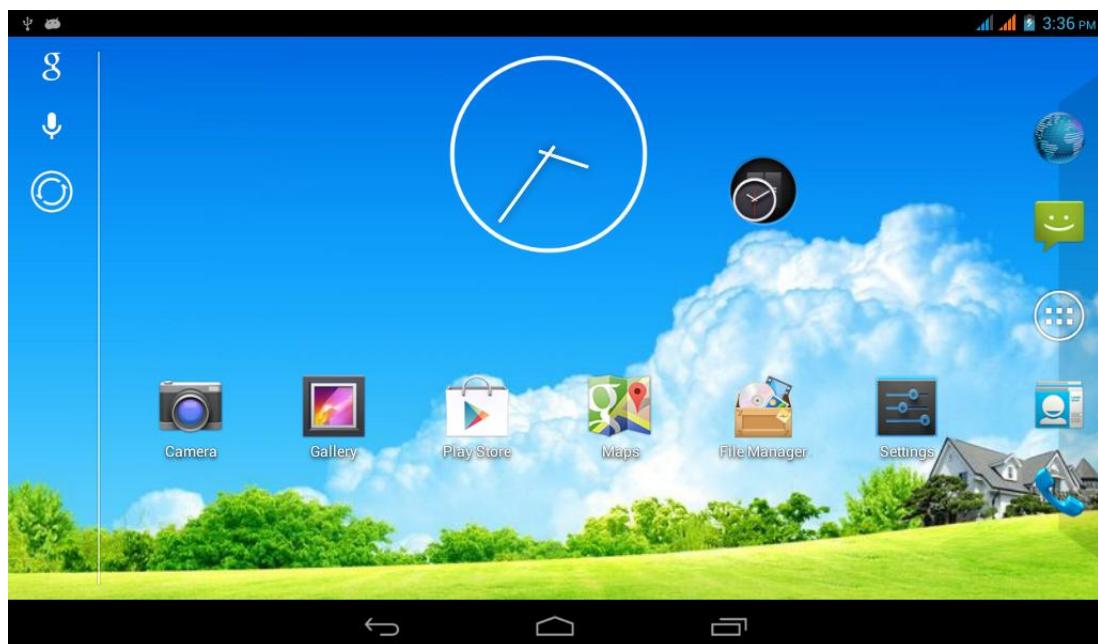

Picture 3.6

Beneworld International(HK) Co., Limited

www.beneworld.cn



Picture 3.7

Delete Icon on Desktop

1. Hold the icon to be deleted until the icon  will be displayed at the top of the screen.
2. Drag the icon  to the top of the icon to be deleted. After the icon  turns red, release your finger to delete it.

Replace Desktop Wallpaper

1. On the main UI, keep touching the blank space of the Home screen. Then a window will pop up to allow you to set wallpaper.
2. Click gallery or wallpaper gallery to select a picture.

Voice Search

1. Touch the MIC icon .
2. Select from the pop-up Google options as required.
3. Set a language in the pop-up voice search box as prompted. Click “OK”.
4. Speak to the MIC what you want to search, and the browser will open search results list.

Note: Please make sure your MID is connected to the Internet before making a voice search.


Set Scene

1. Touch the icon  in the upper left-hand corner of picture 3.6

Beneworld International(HK) Co., Limited

www.beneworld.cn

2. Proceed to scene selection interface to find two available scenes. Slide to the scene you prefer and then click “Set Scene” at the bottom to complete scene replacement, as shown in Picture 3.8.

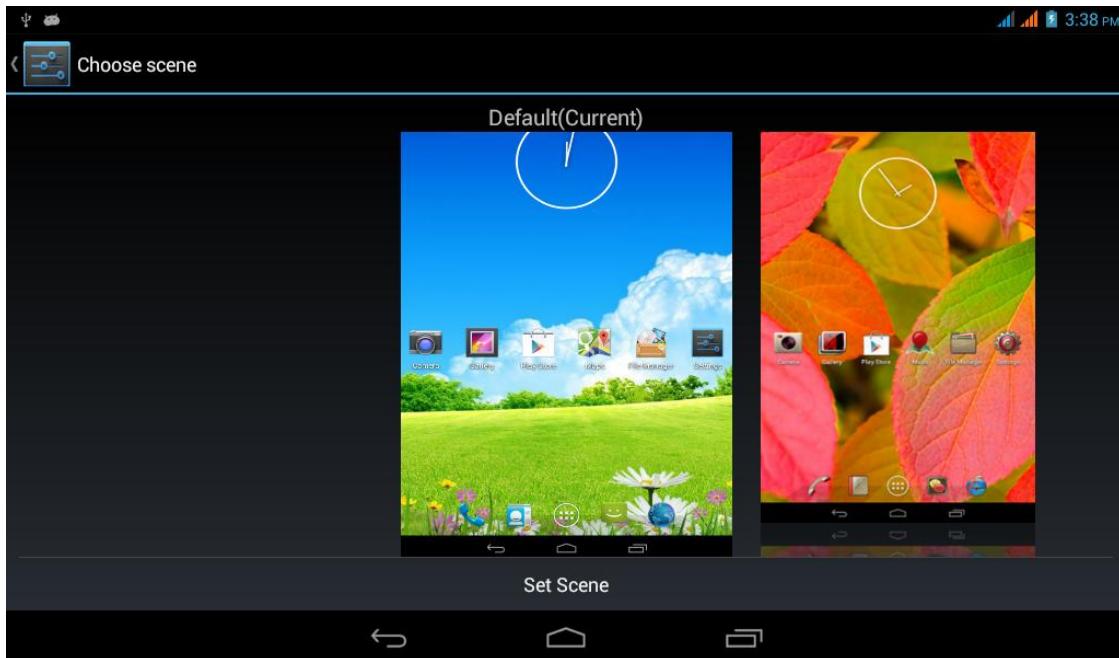


Picture 3.8

3.6 Access Application

Click the key  at right of Picture 3.4 to proceed to main menu interface, as shown in Picture 3.9. Select the app to be accessed.

Beneworld International(HK) Co., Limited

www.beneworld.cn

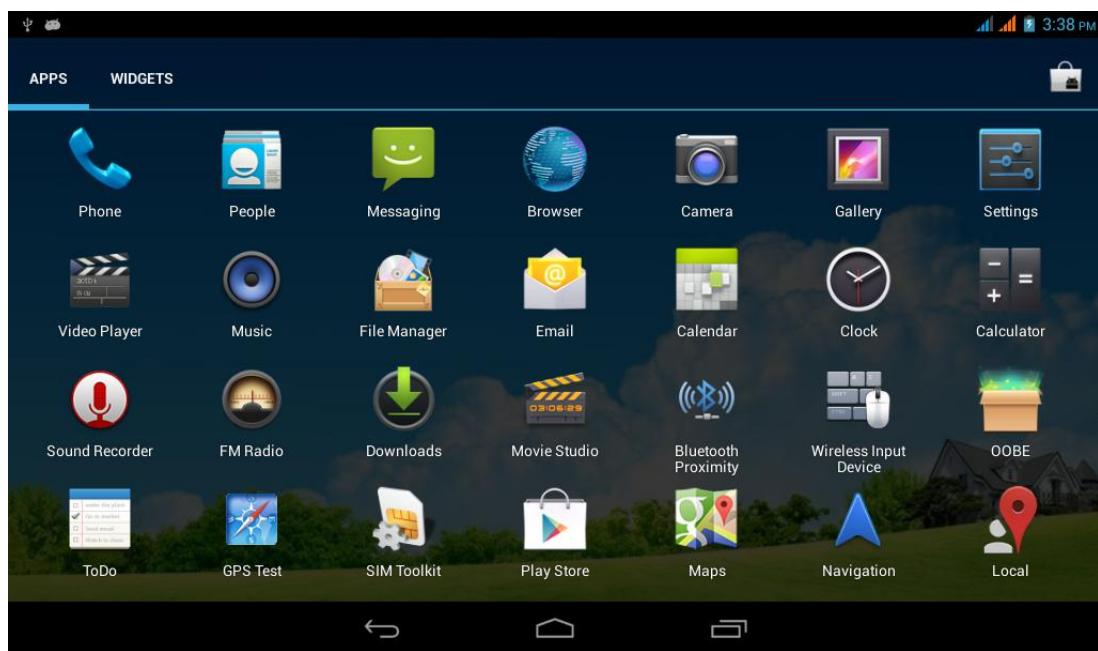

Picture 3.9

3.7 USB Connection


MID Storage Settings

You must set storage mode of the MID before transfer files:

1. Connect the MID with PC by USB cable. Prompt will be displayed in notification bar.
2. Open notification panel; please refer to Article 2.2 –MID Status and Notification for details of how to open panel.
3. In the notification panel, click “USB Connected” and then click “Open USB Storage Device”, as shown in Picture 3.10.
4. Then, the USB connection is completed.

Beneworld International(HK) Co., Limited

www.beneworld.cn

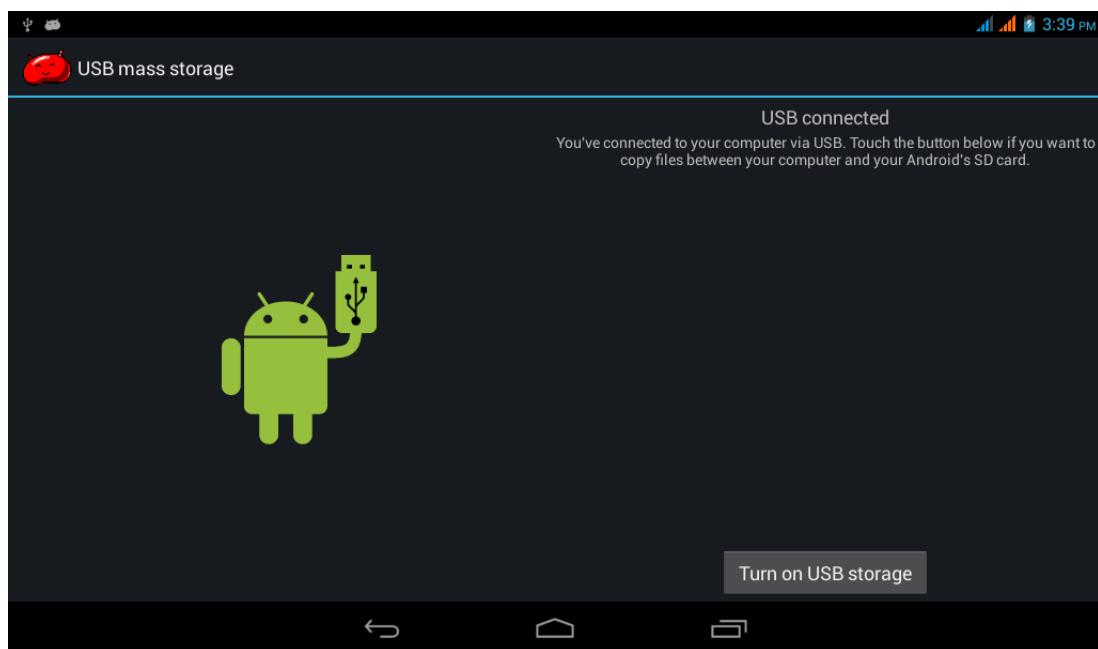

Picture 3.10

Copy Files to Memory Card

1. Connect the MID with PC by USB cable.
2. Realize successful connection to PC in line with “MID Storage Settings”.
3. Turn on your PC and check the information contained in “Removable Disk (x)” from “My Computer”.
4. Find the files to be copied and then copy them to “Removable Disk (x)”.
5. After copy completes, just click “Close USB Storage Device” to uninstall the MID.

Note: When your MID is connecting with USB cable, if you want to open USB storage device, you won't be able to read memory card through the MID; just disconnect with USB to access memory card in the MID.

3.8 Input Text


Use Screen Keyboard

When you activate application or select the edit box to be input with characters or numbers , the Android keyboard will be displayed.

Select Input Method

1. Click “Settings”.
2. Click “Language & Input Method”.
3. All input methods installed on your MID will be listed at text setting area.
4. Check at the end of preferred input method.

Use and Switch Input Method

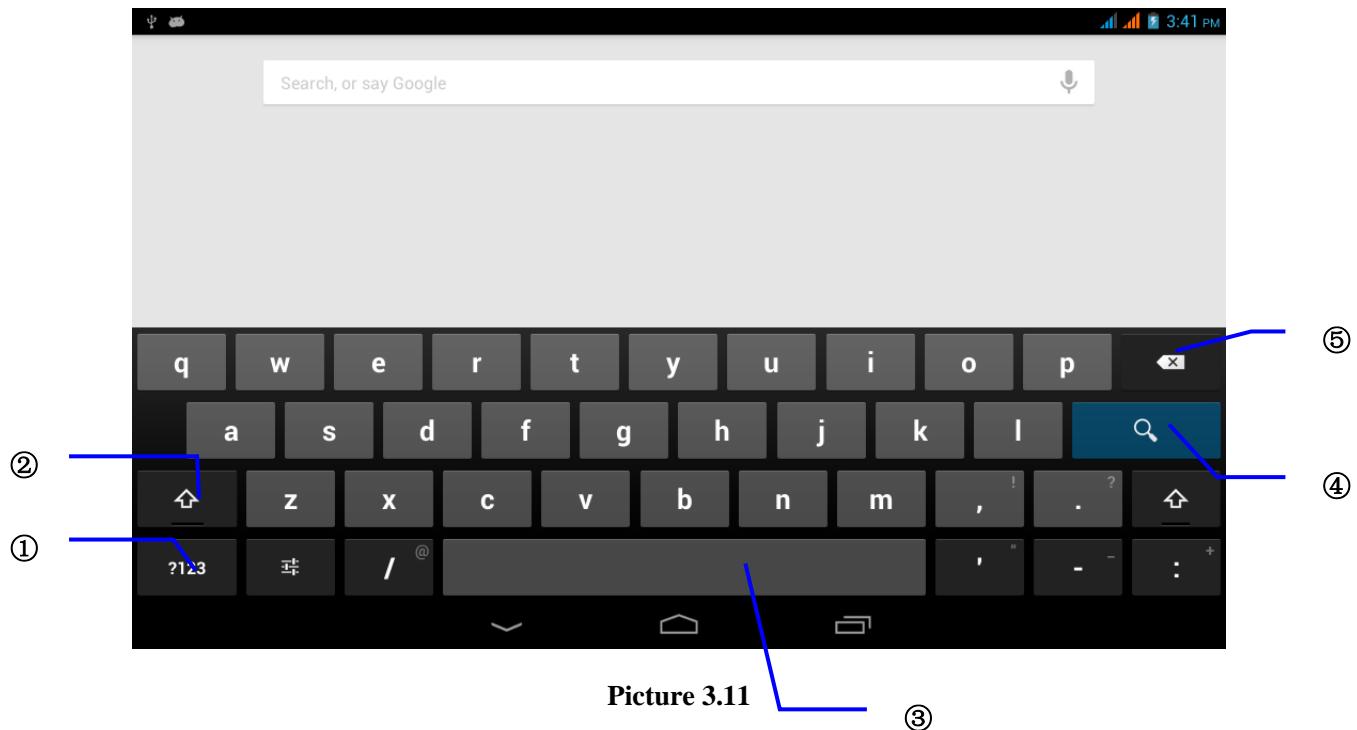

1	Caps lock
2	switch to number input mode
3	click to input white space
4	click to perform input operation
5	Delete the character at left side of cursor. Click and hold to delete all characters at left side of cursor.

3.9 Tips and Tricks

Access Widgets Interface

Click on “Widgets” at the top of application interface and go to Widgets interface. Keep holding any widget to create its shortcut on the desktop. Click the shortcut on the desktop and access the corresponding app fast.

Create Shortcut Icon of Apps on Desktop

In apps or widgets interface, keep touching any icon will lead you to the desktop automatically. By dragging and holding the icon, you can put it at any position on the

Beneworld International(HK) Co., Limited

www.beneworld.cn

desktop.


Note: If the target position of drag-and-drop has no space, the widget will fail to be added to the Home screen.

4 Basic Setting

4.1 SIM card management

4.1-1 Voice call

In main interface choose setting; choose **SIM card management**, as Picture 4.1

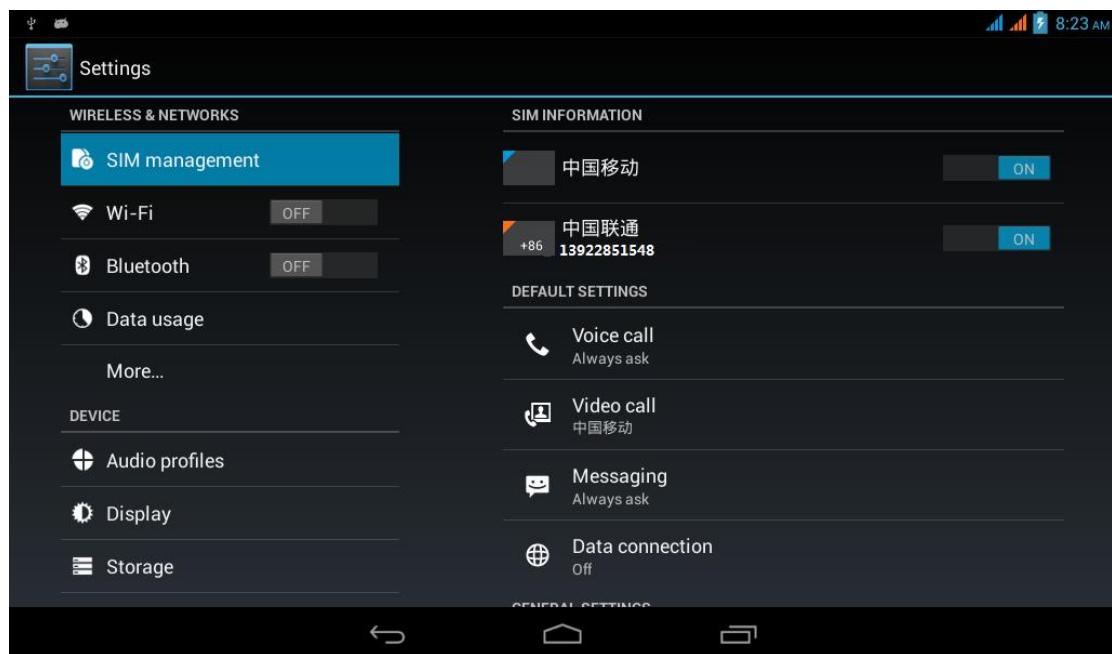


Picture 4.1

Click voice call, choose default SIM card, as Picture 4.2

Beneworld International(HK) Co., Limited


www.beneworld.cn

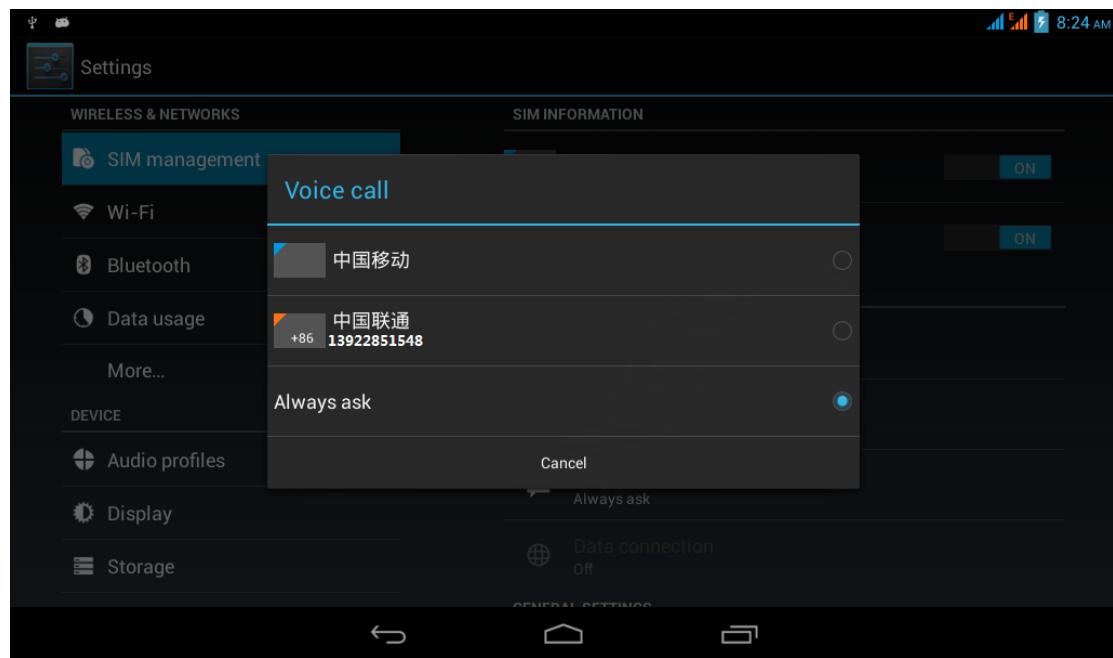

Picture 4.2

4.1-2 Video call

Choose setting in main menu, choose SIM management, click video call, and choose SIM information, as Picture 4.3

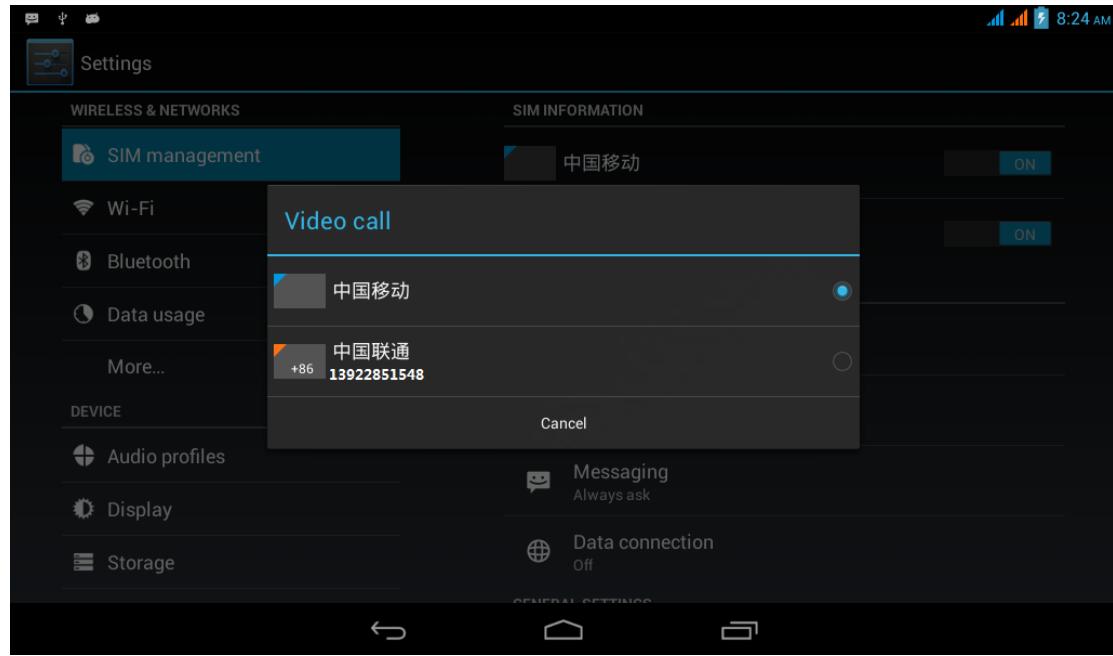


Picture 4.3

4.1-3 Messaging

Choose **setting** application in main menu, choose **SIM card management**, click **messaging**, choose default SIM card fro messaging, as Picture 4.4

Beneworld International(HK) Co., Limited


www.beneworld.cn

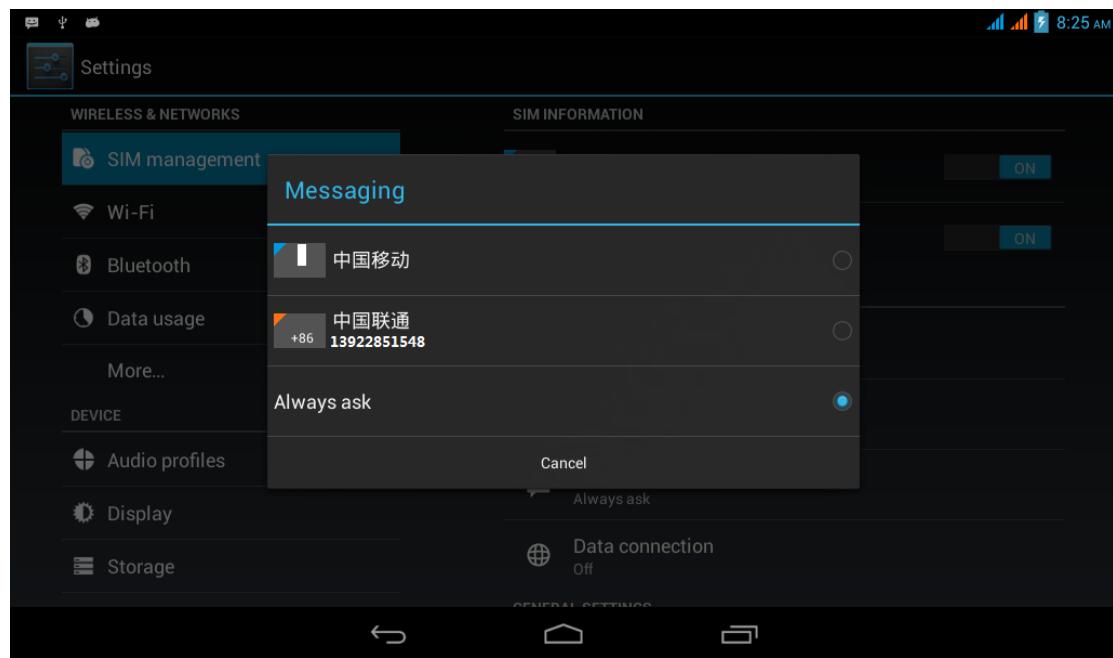

Picture 4.4

4.1-4 Data Connection

Click **setting** application in main menu, choose **SIM card management**, click **data connection**, choose the default SIM card, as Picture 4.5

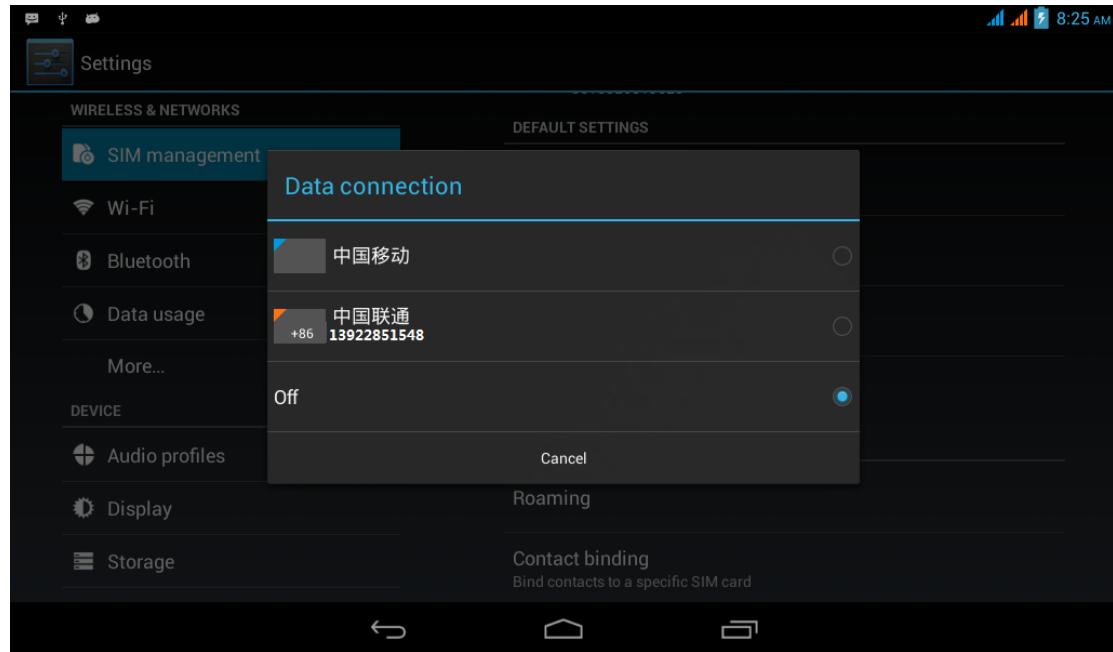

Picture 4.5


4.2 WI-FI & WLAN

Build wifi connection

Beneworld International(HK) Co., Limited

www.beneworld.cn


1. Click setting application in main menu.
2. Open WIFI will scan available wireless internet, as **picture 4.6**
3. Choose WIFI internet you want, if there is password, please enter password and connect.

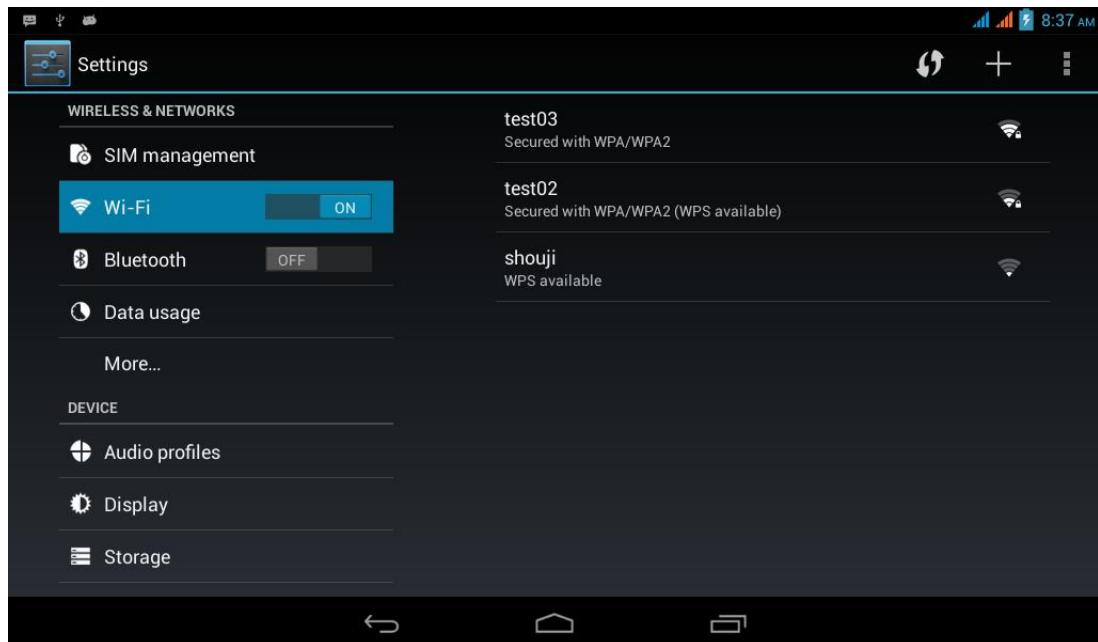

Picture 4.6

2. Add network

1. Click right top  icon in Picture 4.6, as **Picture 4.7**

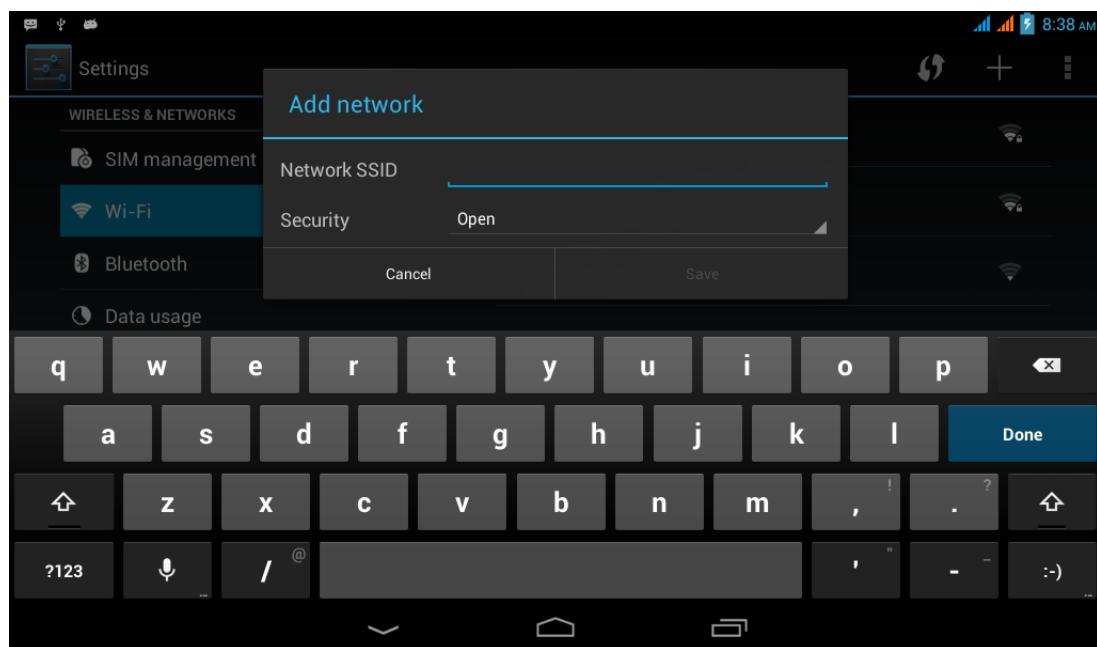

Picture 4.7

2. Input SSID, wireless internet, choose save.

3. Network notification

Beneworld International(HK) Co., Limited


www.beneworld.cn

If open network notification, when WIFI signal become appear, the left top will remind you available WLAN network.

4. Keep WLAN connection during sleep

1. Click right top  icon in picture 4.6, choose advanced.

2. Click keep WLAN connection during sleep. As Picture 4.8

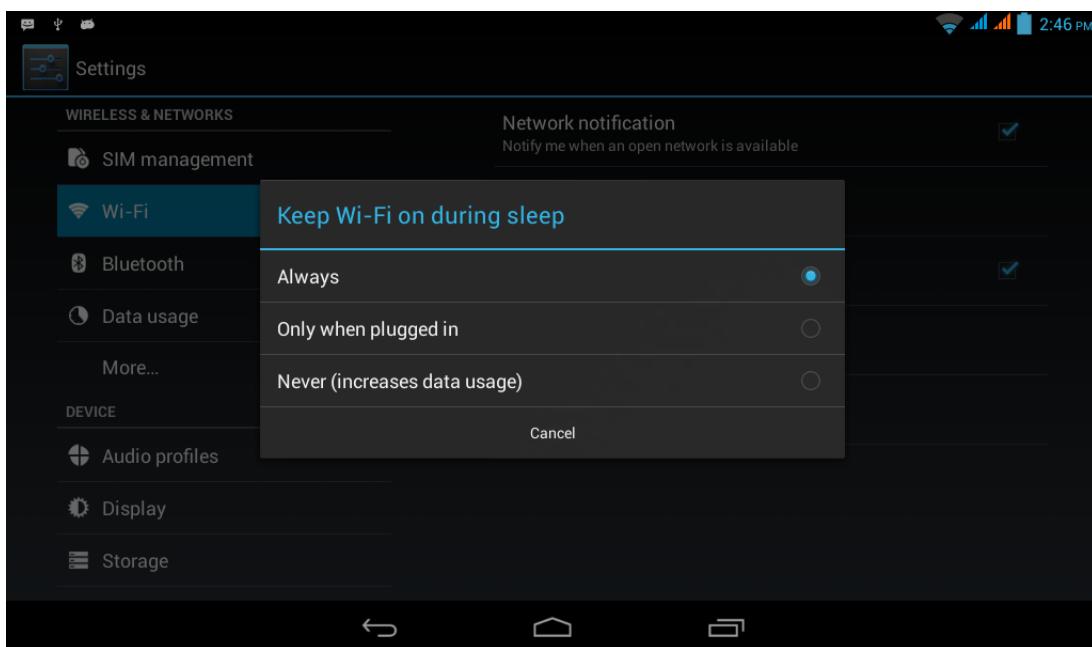

Picture 4.8


4.3 Bluetooth

Bluetooth function

1. Click setting in main menu
2. Click Bluetooth, open Bluetooth
3. Click search device, MID will search nearby Bluetooth device. **As picture 4.9**


Beneworld International(HK) Co., Limited

www.beneworld.cn

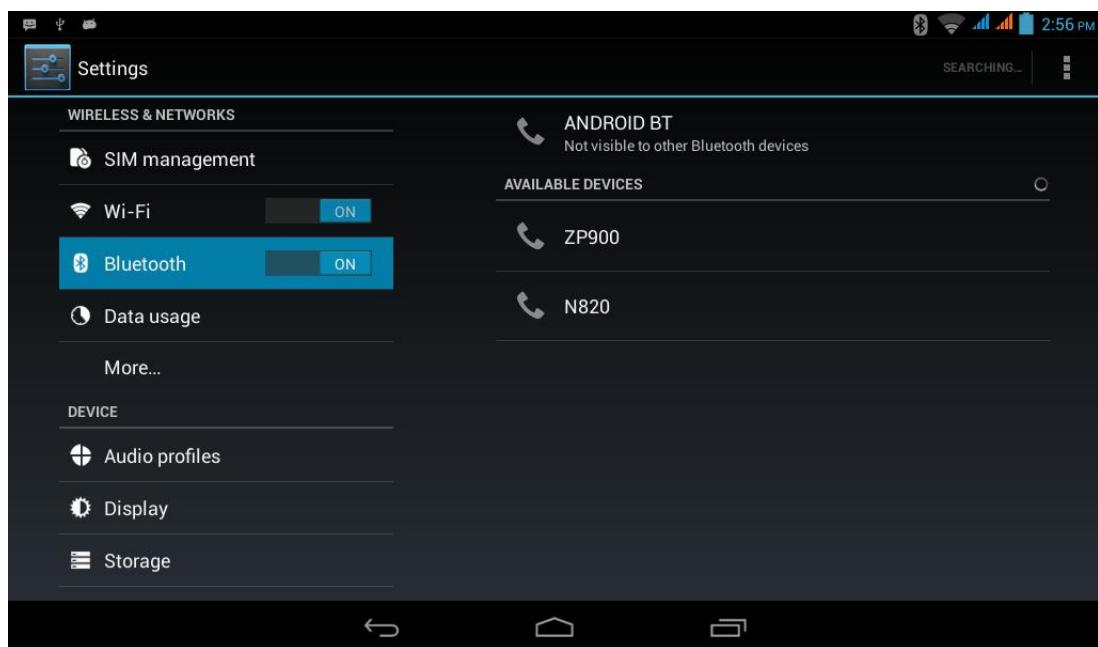

Picture 4.9

5. Click the device searched, it will popup Bluetooth pairing request, click pair. As Picture 4.10

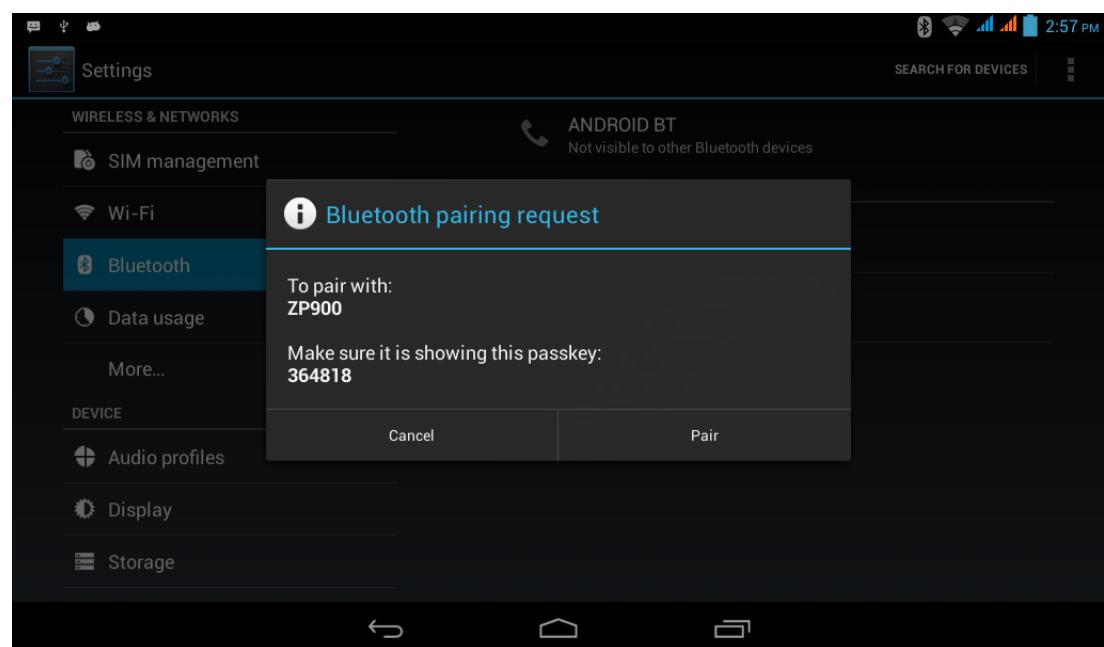


Picture 4.10

5. After pairing successfully, click icon, enter into below interface as Picture 4.11

Beneworld International(HK) Co., Limited

www.beneworld.cn

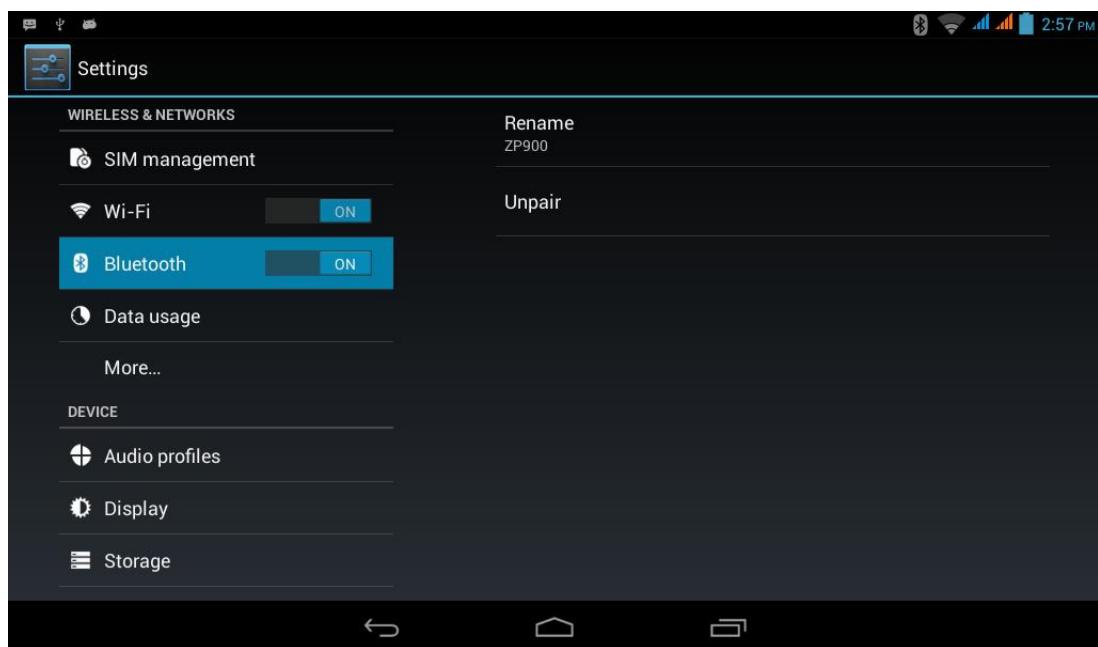


Picture 4.11

Bluetooth setting

1. Rename tablet

Click  in right top of picture 4.9, as picture 4.12 shown, choose rename tablet, you can rename it as you want.

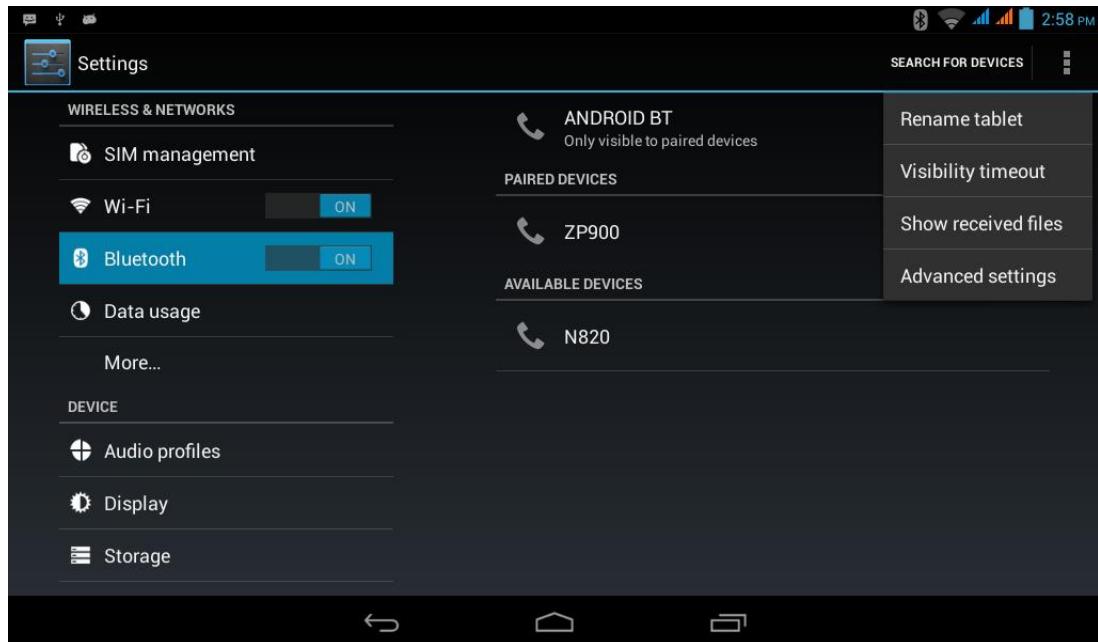


Picture 4.12

2. Visibility timeout

Choose visibility timeout in picture 4.12; choose the time you want, as Picture 4.13

Beneworld International(HK) Co., Limited

www.beneworld.cn

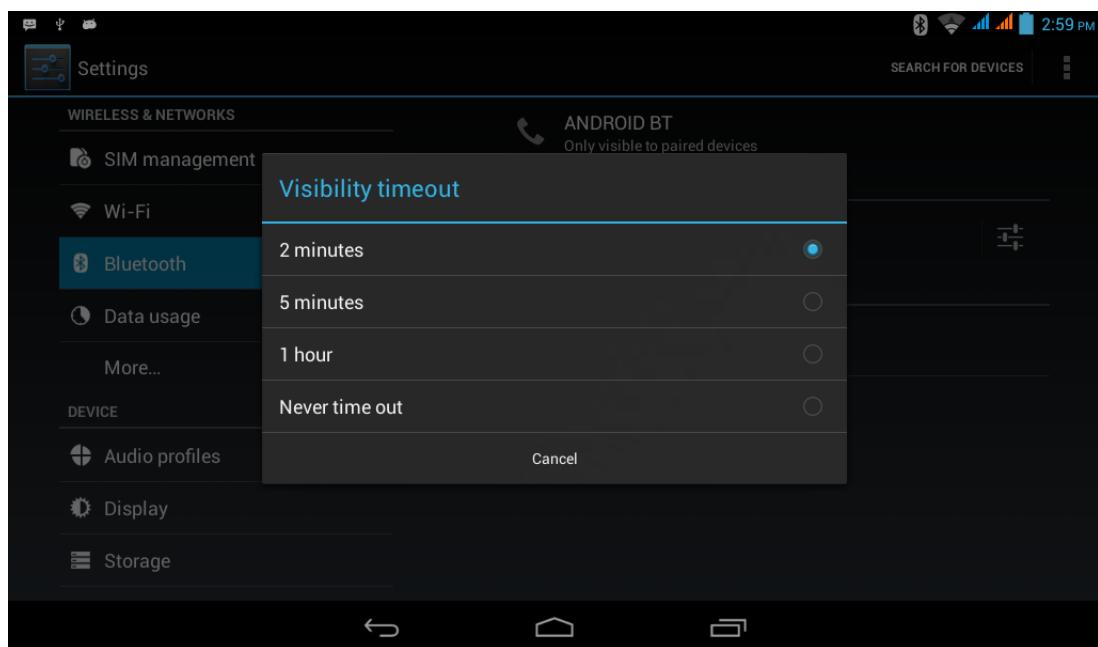


Picture 4.13

3. Display the files received

Click received files in Picture 4.12 to view the download and upload files record.

4. Bluetooth advanced setting

Choose Bluetooth advanced setting in picture 4.12, as picture 4.14

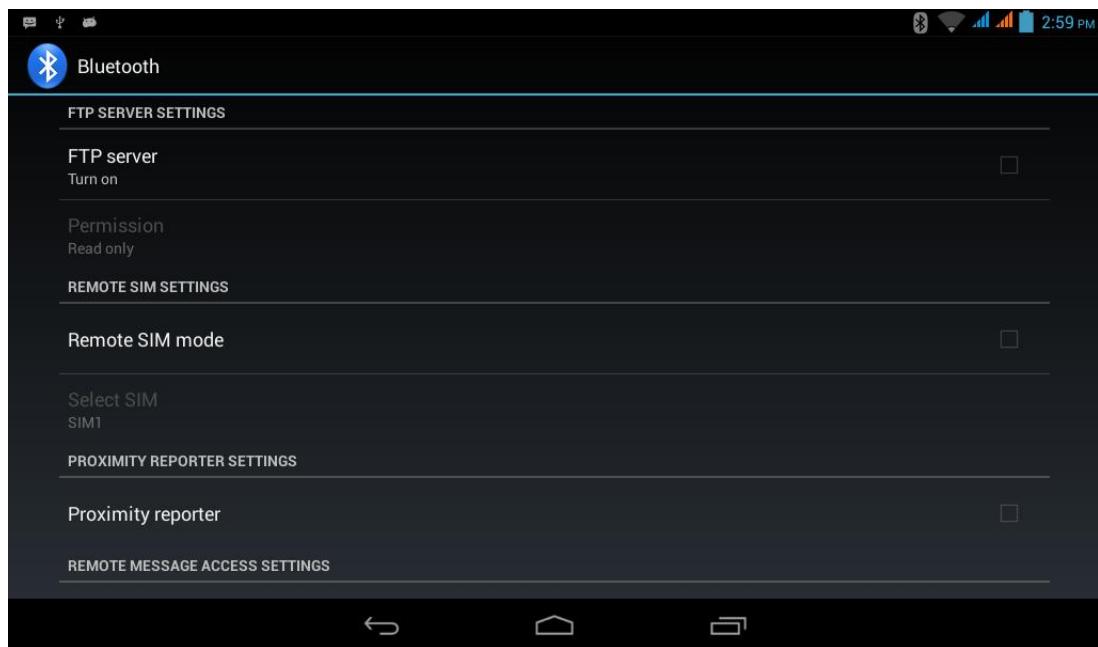

Picture 4.14

1. File transmission service

Open file transmission, allow Bluetooth to support Bluetooth FTP customer Bluetooth device.

2. Bluetooth distance induction system

Open Bluetooth distance induction system, when distance between two

Beneworld International(HK) Co., Limited

www.beneworld.cn

Bluetooth devices is too far or connection is broken, Bluetooth will remind with sound.

4.4 Data usage

Check SIM card and WIFI data usage, as Picture 4.15



Picture 4.15

4.5 More...

4.5-1 Airplane mode


Airplane mode is through closing WIFI, BT and SIM card module, when open airplane mode, WIFI, BT and SIM card can't get signal, when this mode is turned off, WIFI, BT and SIM card will return to normal status.

4.5-2 VPN

Open VPN, click key in right top, as picture 4.16, input name and address, then save.


Beneworld International(HK) Co., Limited

www.beneworld.cn

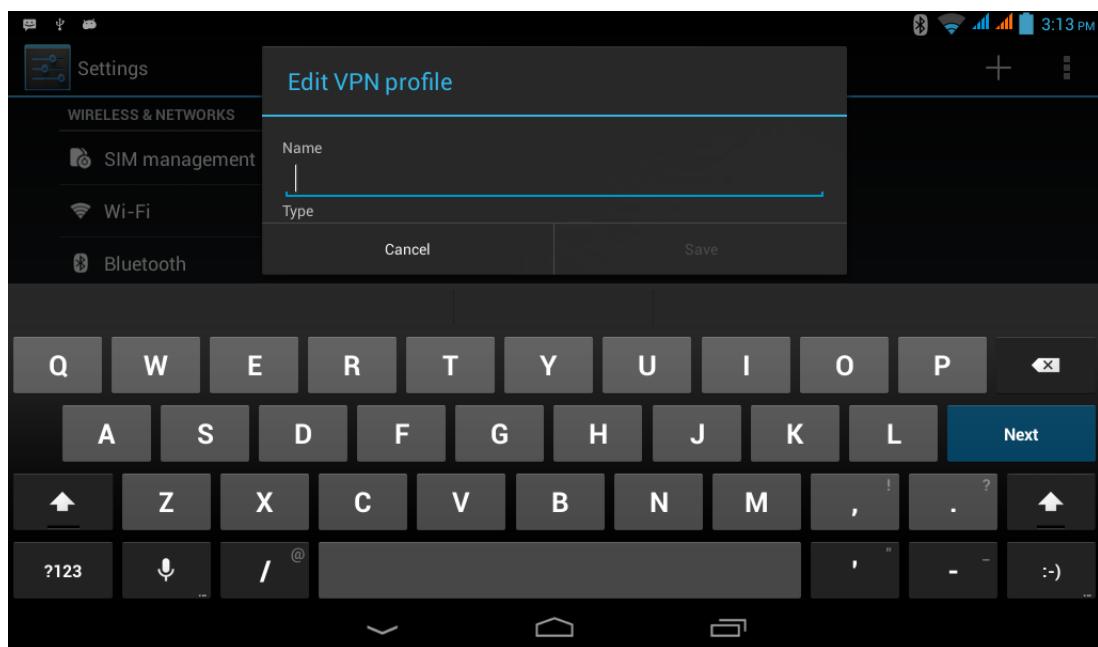

Picture 4.16

Click VPN, as picture 4.17. Input VPN account and password, click connect

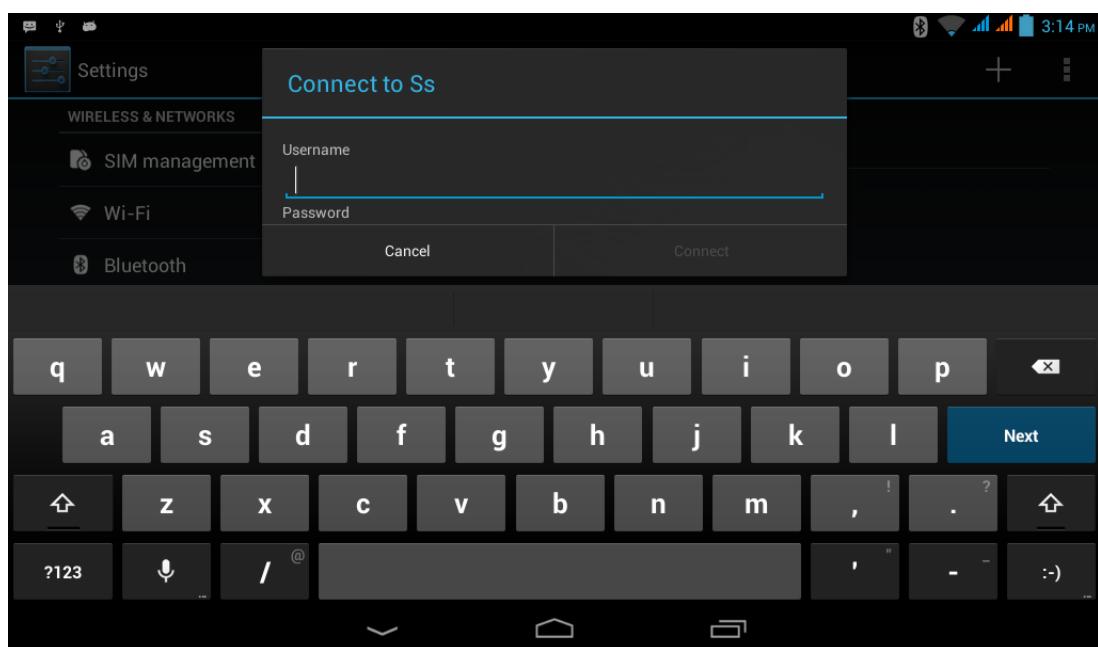

Picture 4.17


4.5-3 Network share and portable hotspot

1. WLAN hotspot


1. Choose setting application in main menu.
2. After confirm device is connected with wifi, click more..., open tethering and portable hotspot

Beneworld International(HK) Co., Limited

www.beneworld.cn

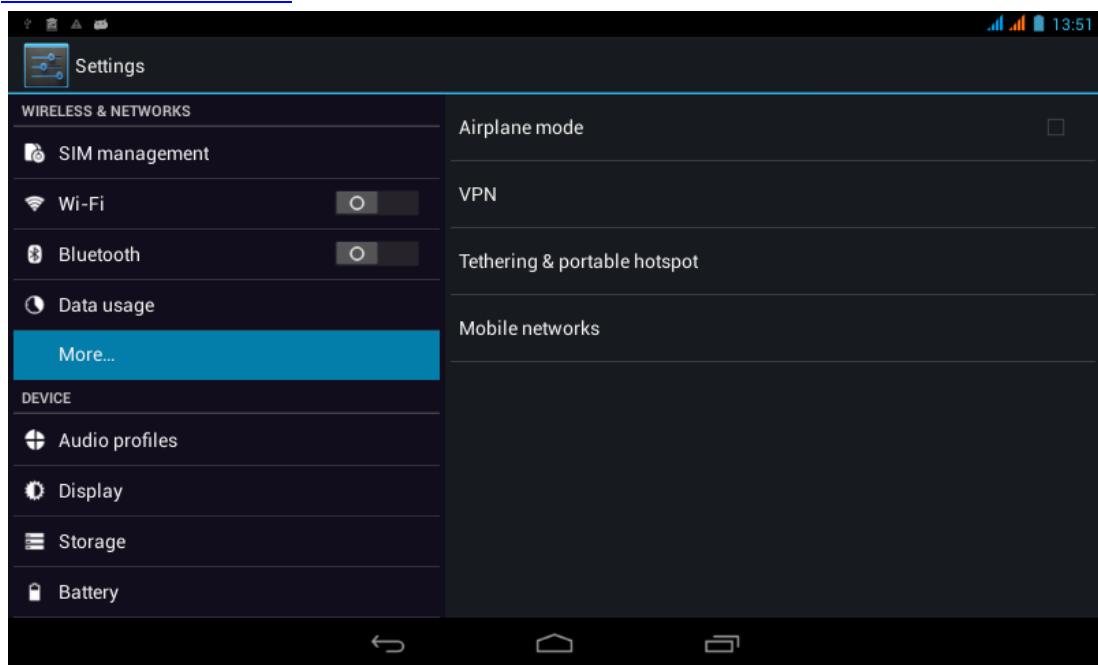

Picture 4.18

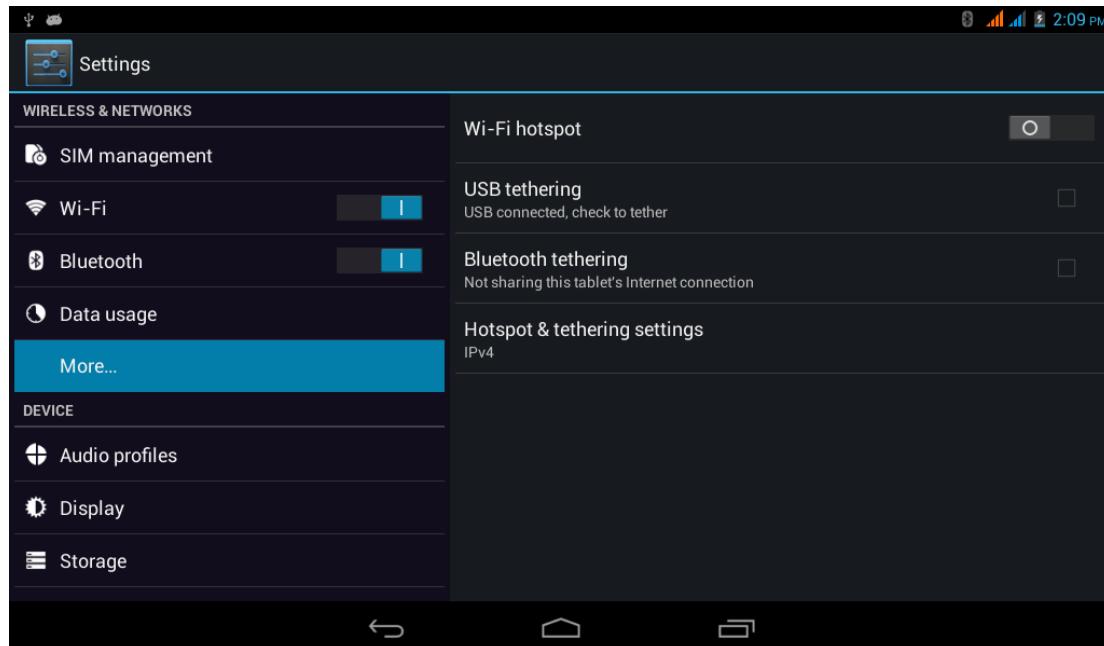


Picture 4.19

3. Click WLAN hotspot open, other customer can share wifi, as Picture 4.20


Beneworld International(HK) Co., Limited

www.beneworld.cn

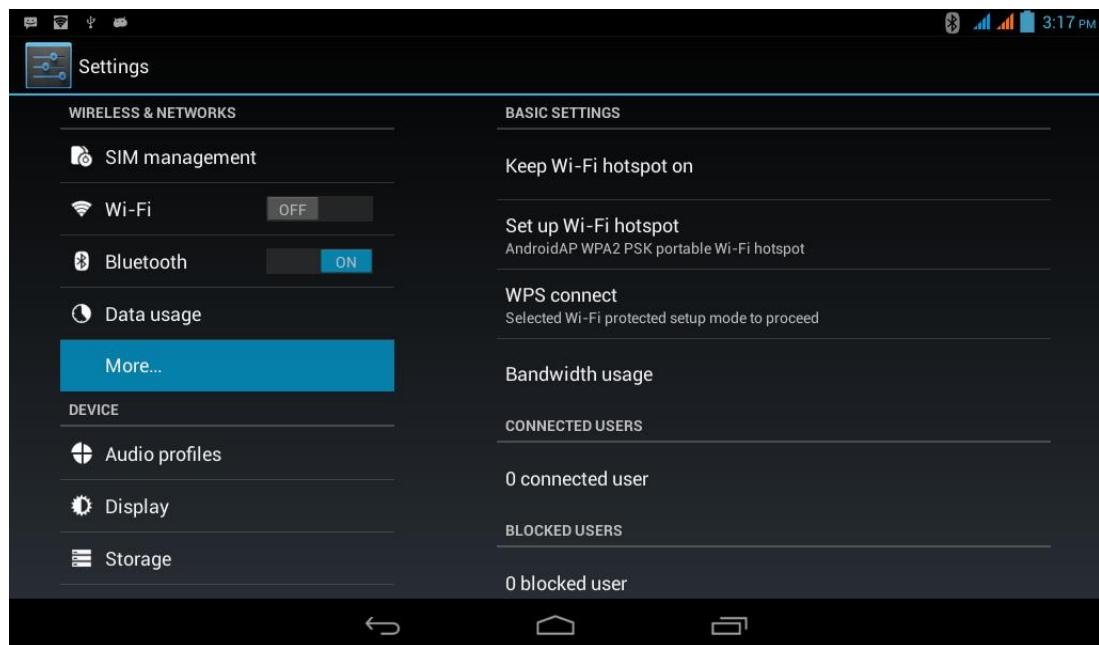

Picture 4.20

4. Click keep WLAN hotspot on, you can set time, as Picture 4.21

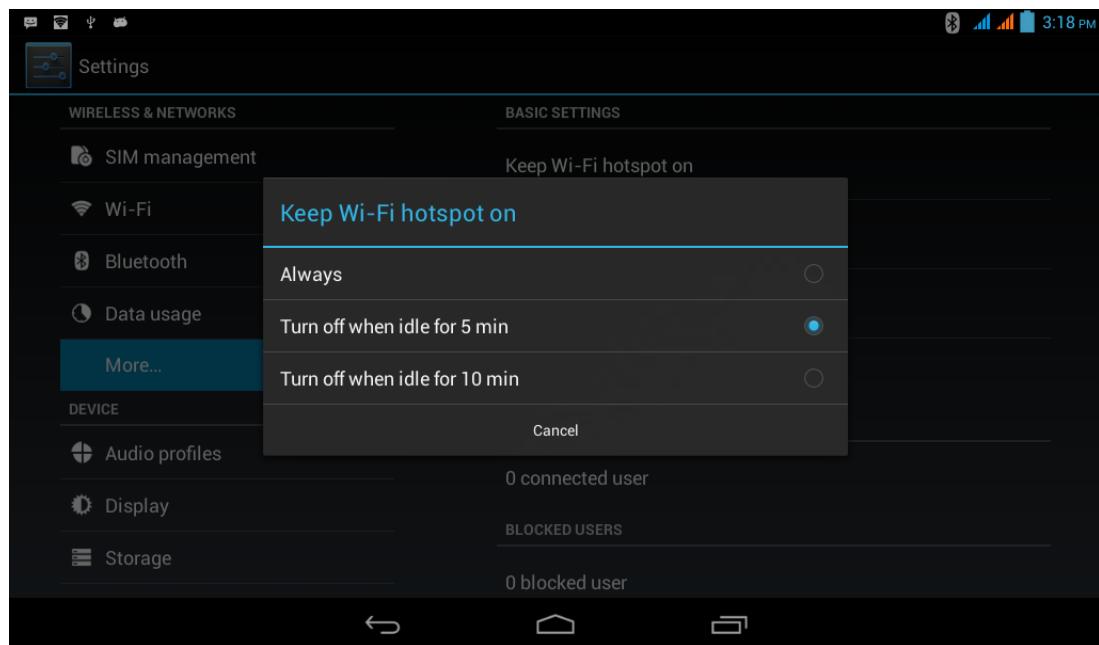


Picture 4.21

5. Click set WLAN hotspot; you can change the wifi hotspots passwords, as Picture 4.22

Beneworld International(HK) Co., Limited

www.beneworld.cn

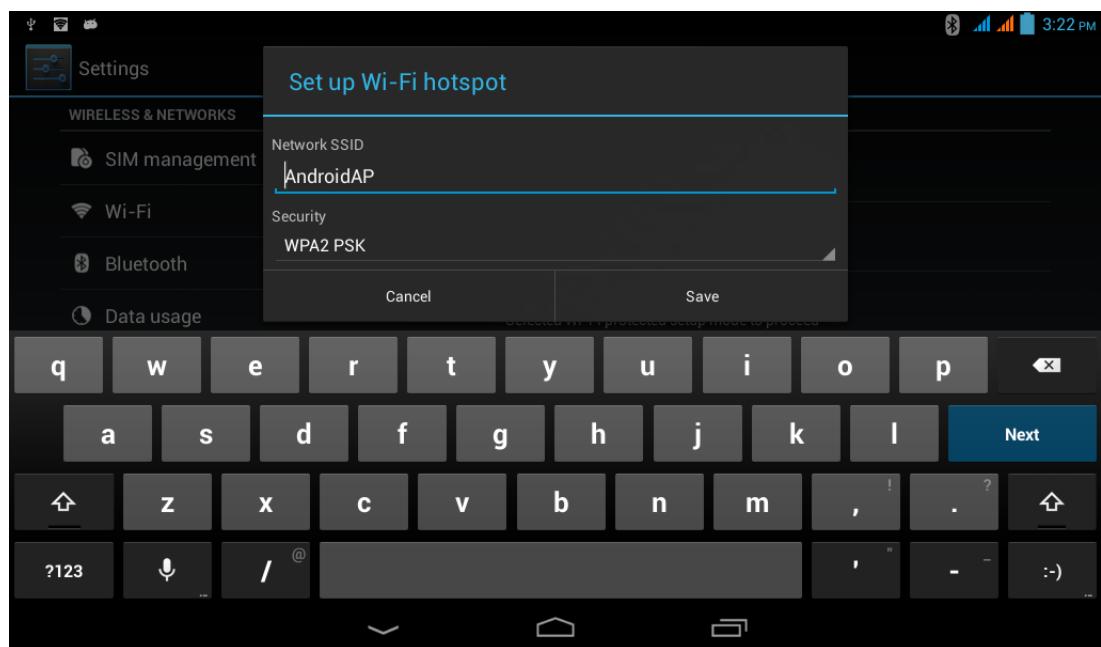

Picture 4.22


4.5-4 Mobile network

- Data connection
 - After opening data, you can visit through SIM card.
- 3G service
 - Click 3G service to visit 3G network SIM card and switch network mode
- Preferred networks
 - Change SIM card network environment as you preference.
- Access point names (APN)

Click mobile network, as picture 4.23

Beneworld International(HK) Co., Limited


www.beneworld.cn

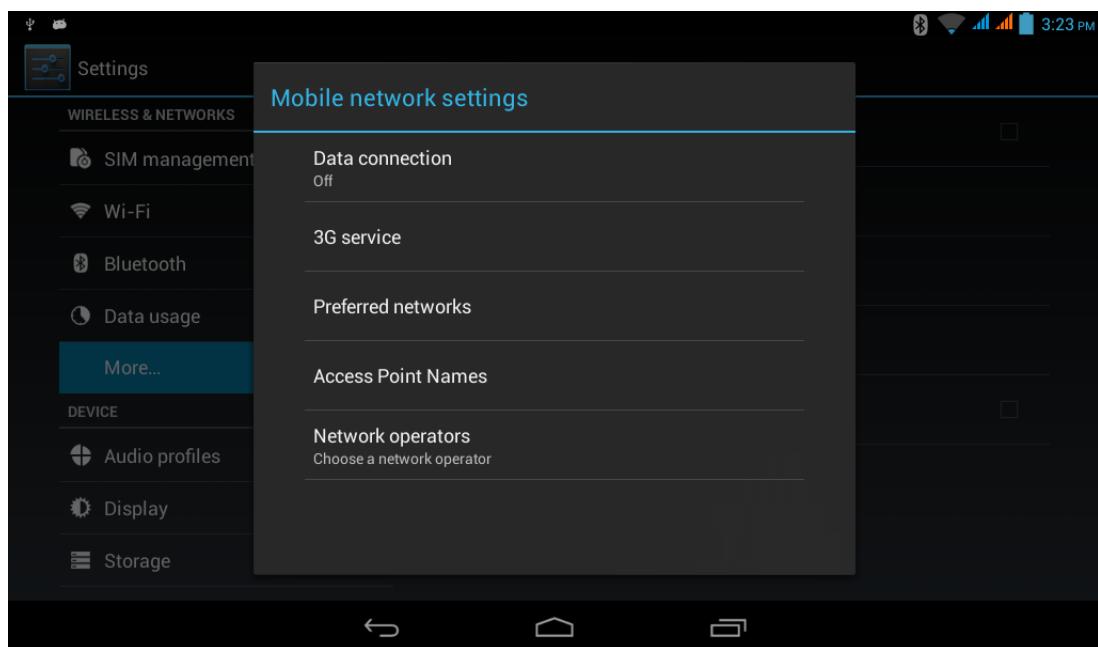

Picture 4.23

Choose access point name (APN)

Choose related connect method, as picture 4.24

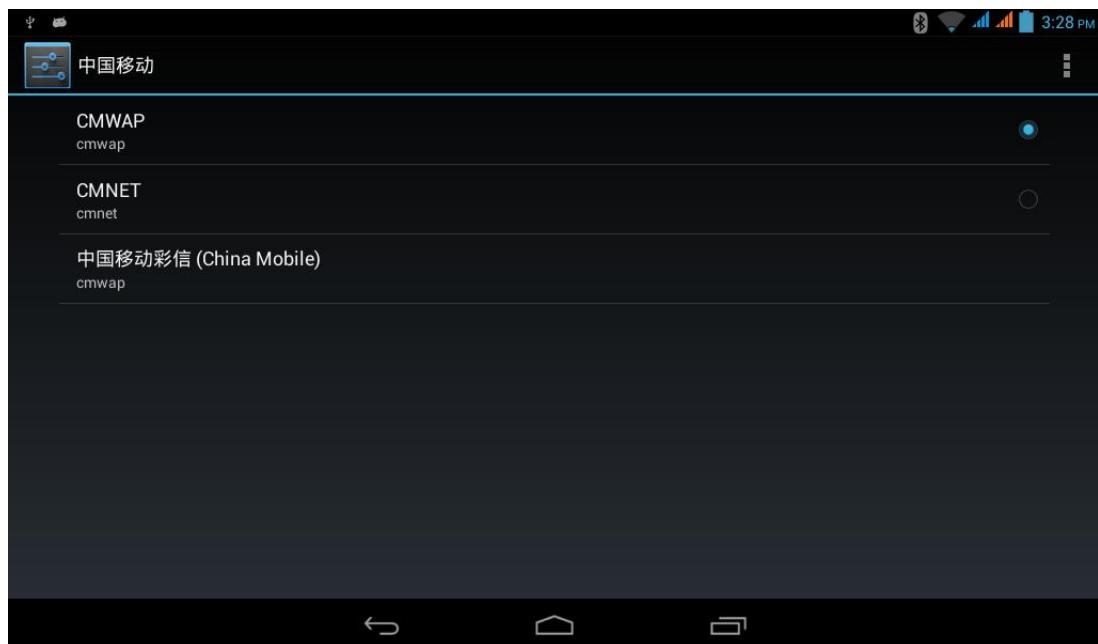


Picture 4.24

- Network operator

Click network operator, choose available mode, choose select manually or choose automatically, as picture 4.25

Beneworld International(HK) Co., Limited

www.beneworld.cn

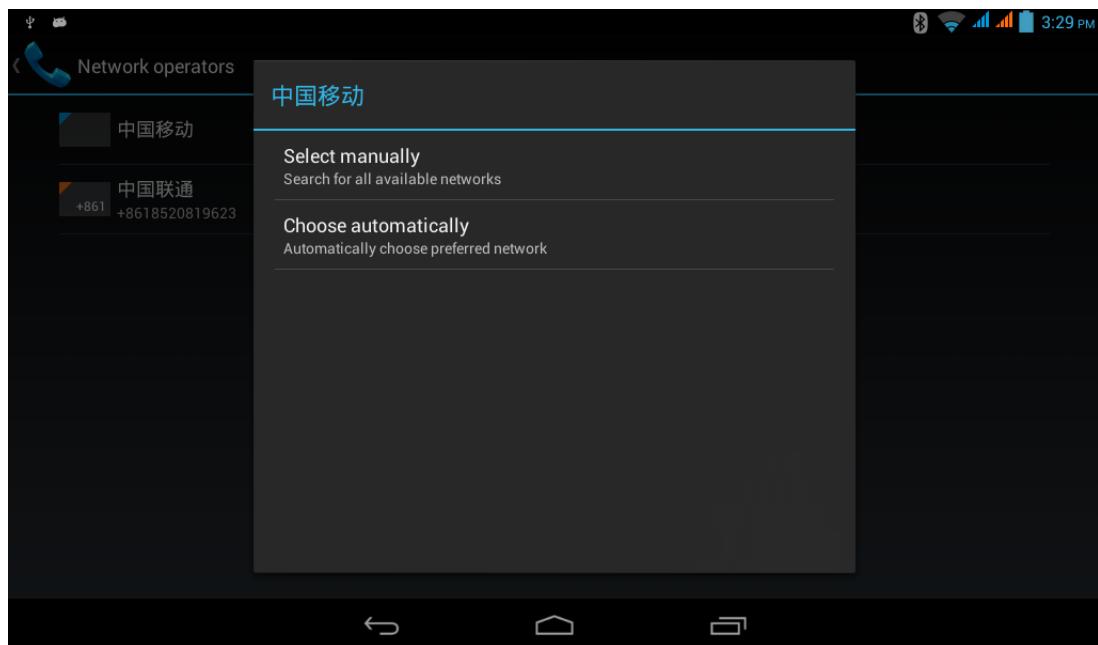

Picture 4.25

4.6 Audio Profiles

1 Open setting, click **audio profiles**, as Picture 4.26 to choose different standard




Picture 4.26

2 Click **General** to enter into below interface, as Picture 4.27


Beneworld International(HK) Co., Limited

www.beneworld.cn

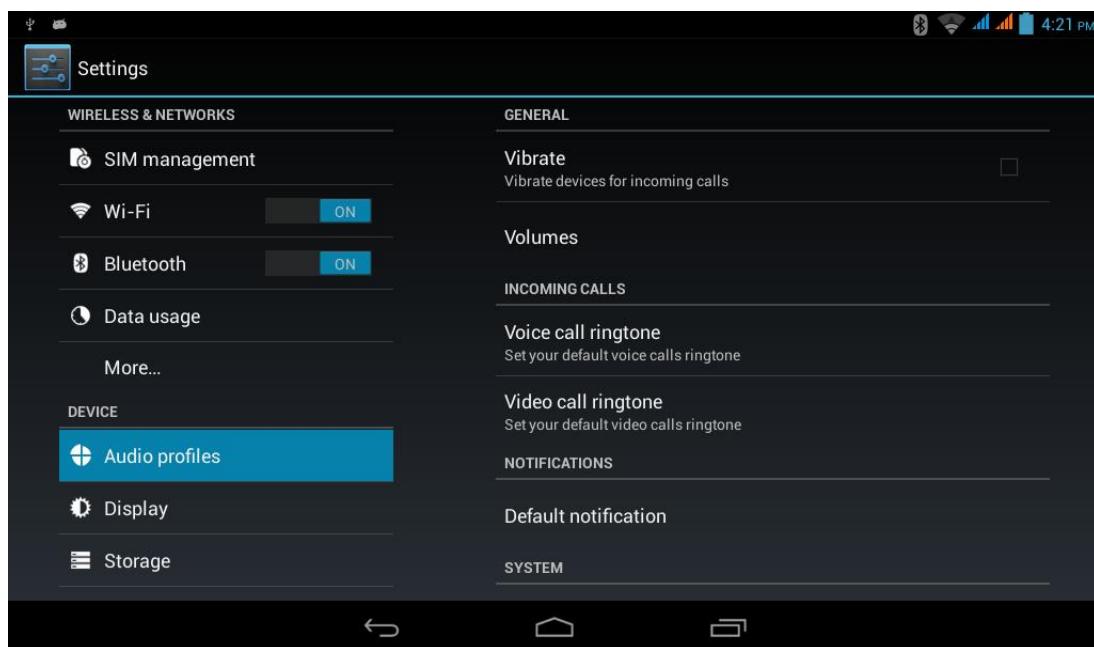

Picture 4.27

- **Vibrate**
 - In picture 4.27, click vibrate, when calls come, MID will vibrate.
- **Volume**
 - In picture 4.27, click volume to adjust ring, notification and alarm volume, as picture 4.28

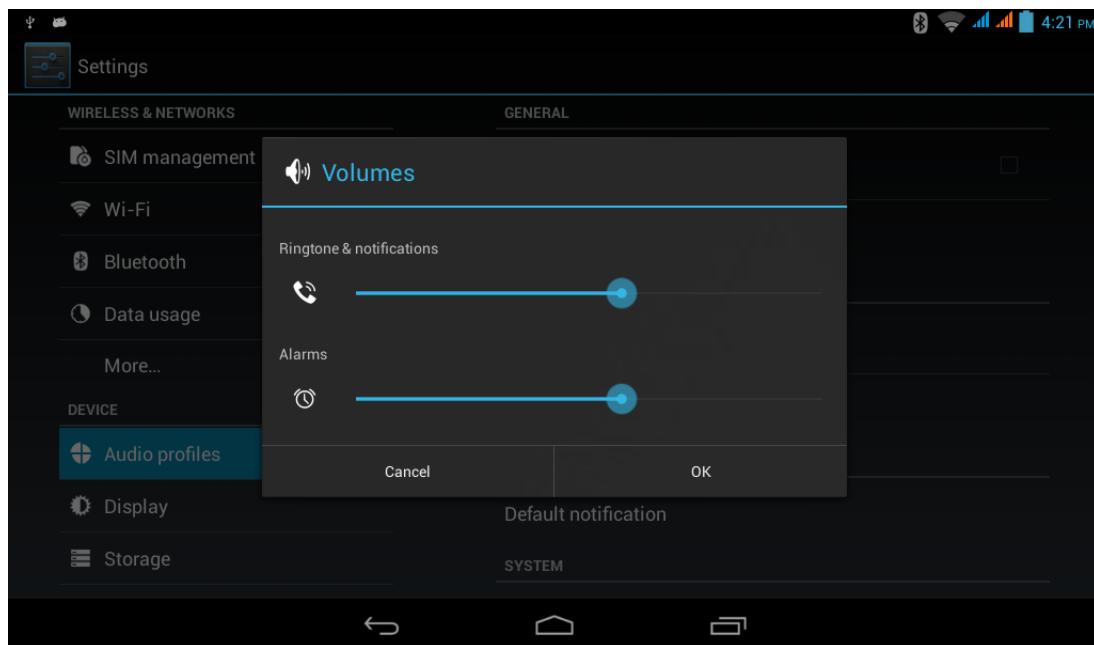


Picture 4.28

- **Voice call ringtone**
 - In picture 4.27, click voice call ringtone, as Picture 4.29

Beneworld International(HK) Co., Limited


www.beneworld.cn

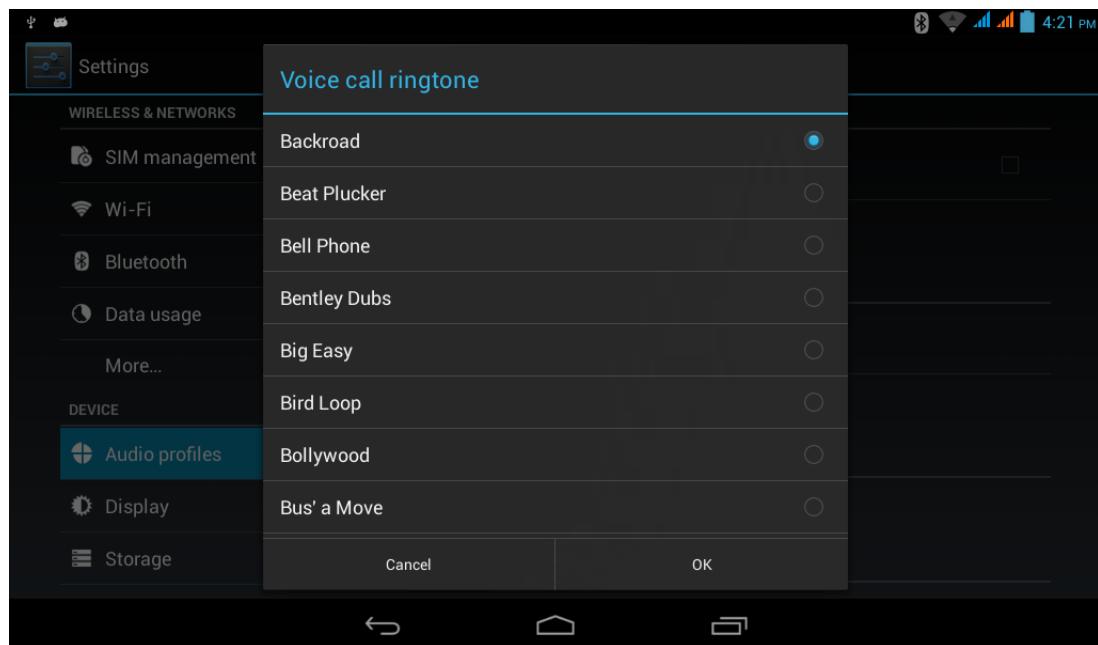

Picture 4.29

- **Voice call ringtone**

- In picture 4.27, click voice call ringtone to choose ringtone, as Picture 4.30

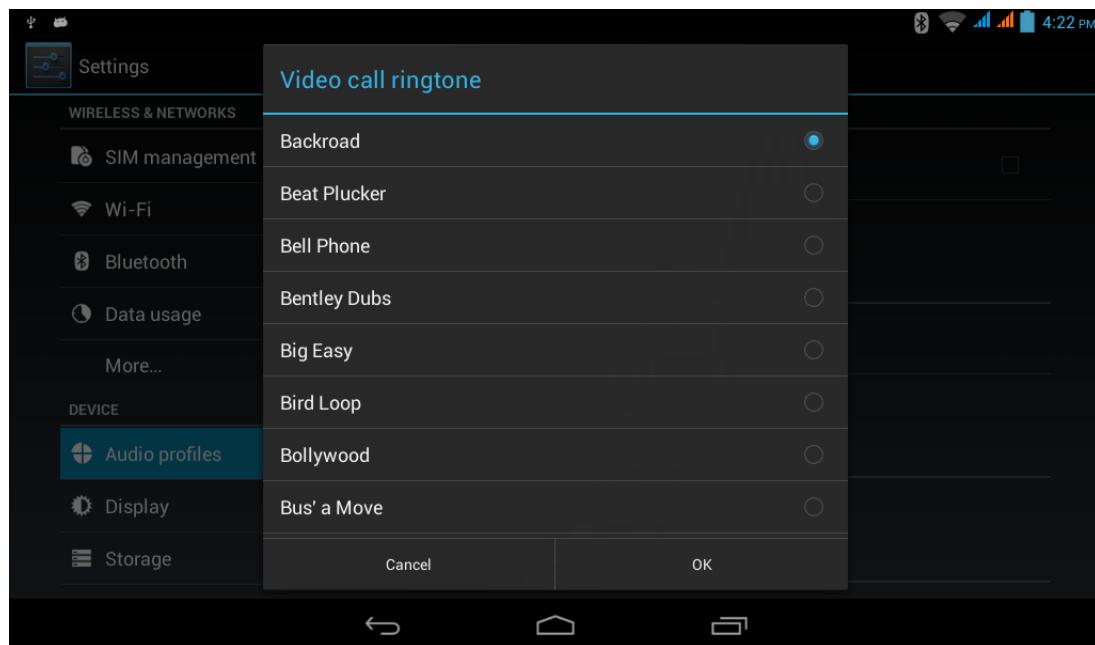

Picture 4.30

Note: Mute, meeting, outer mode can only be chosen, but can't be adjusted except standard.


4.7 Display

4.7-1 Theme

Beneworld International(HK) Co., Limited

www.beneworld.cn


1. Click **setting** application.
2. Click **display**, click **theme**, there are four styles for option, as picture 4.31

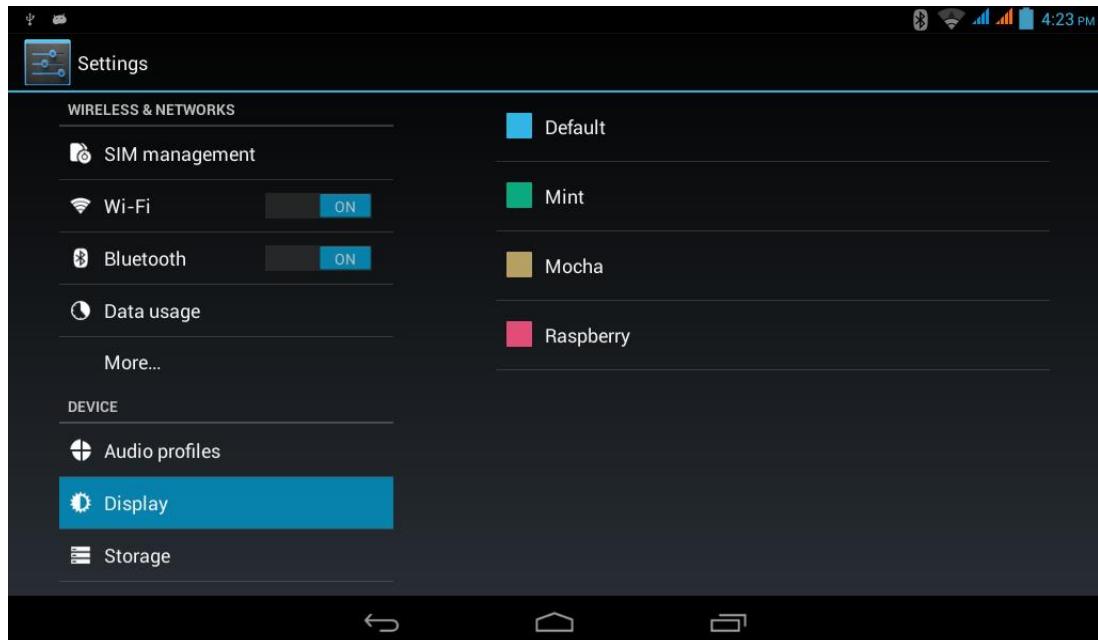

Picture 4.31

4.7-2 Wallpapers

1. Click setting application
2. Click **display**, click **wallpaper**.
3. You can choose different wallpaper as you like=gallery, live wallpaper, video wallpaper, as picture 4.32

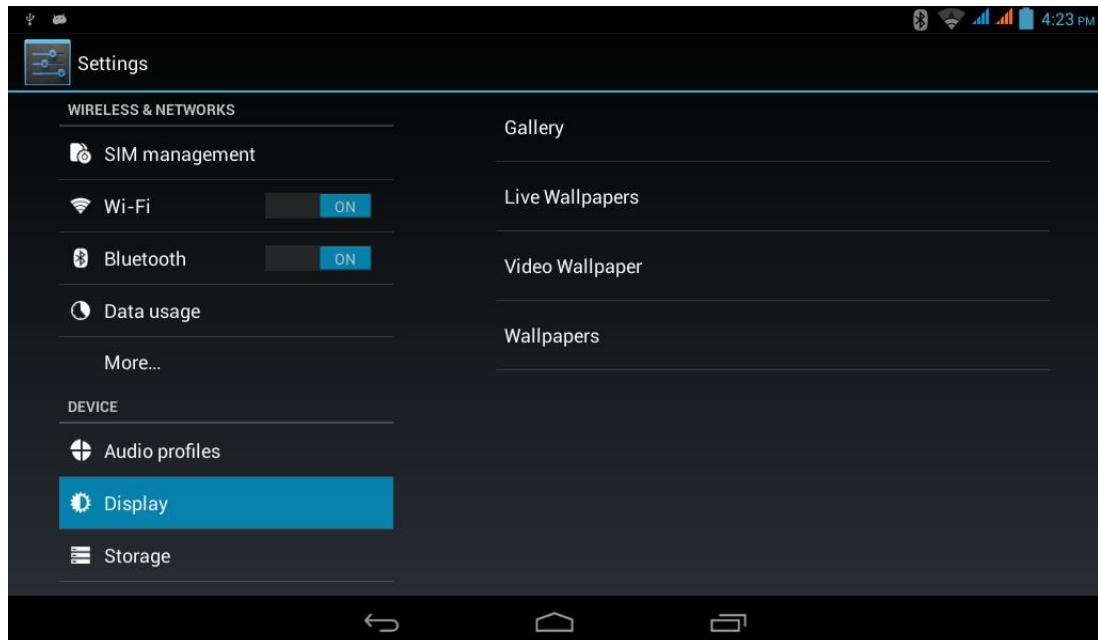


Picture 4.32

Beneworld International(HK) Co., Limited

www.beneworld.cn

4.7-3 Brightness

1. Click setting application.
2. Click display, click brightness.
3. When popup brightness board, drag the slider to adjust brightness, as **picture 4.33**

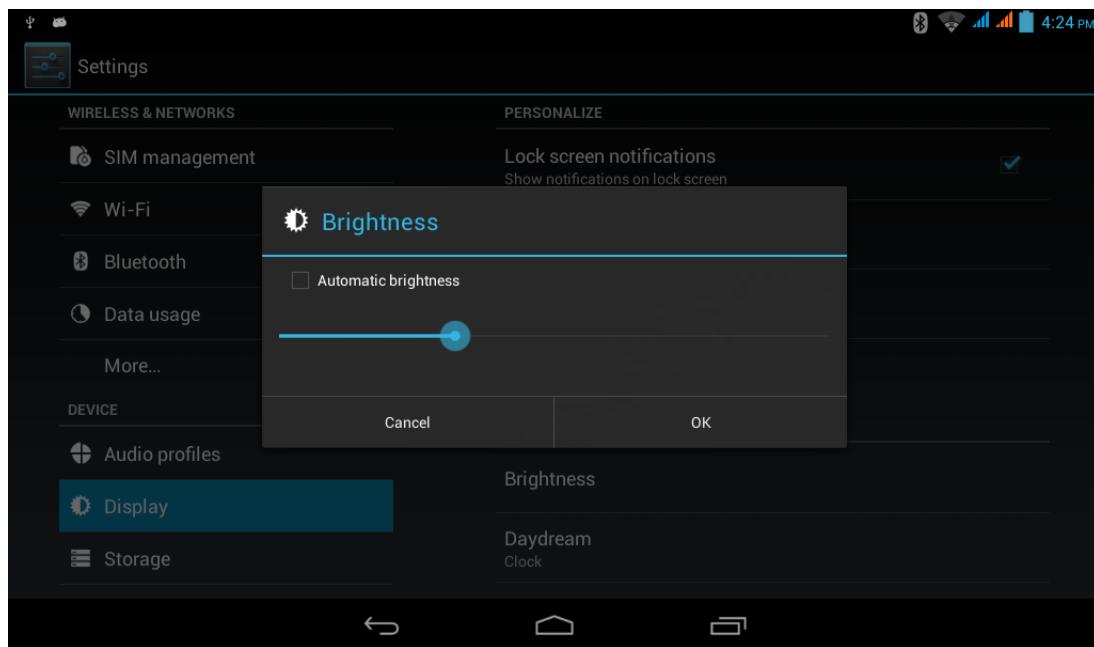

Picture 4.33

4. After adjusting brightness, click ok.

Remark: automatically adjust brightness is light sensation, in different environment, MID can change screen brightness, if you click automatically adjust brightness, you can't adjust brightness manually, unless you close this function.

4.7-4 Font size

Click font size to adjust MID font, as Picture 4.34

Beneworld International(HK) Co., Limited


www.beneworld.cn



Picture 4.34

4.7-6 Sleep

1. Click **setting** application.
2. Click **display**.
3. Click “**sleep**”.
4. Popup standby time, choose the time you want to set, **as picture 4.35**

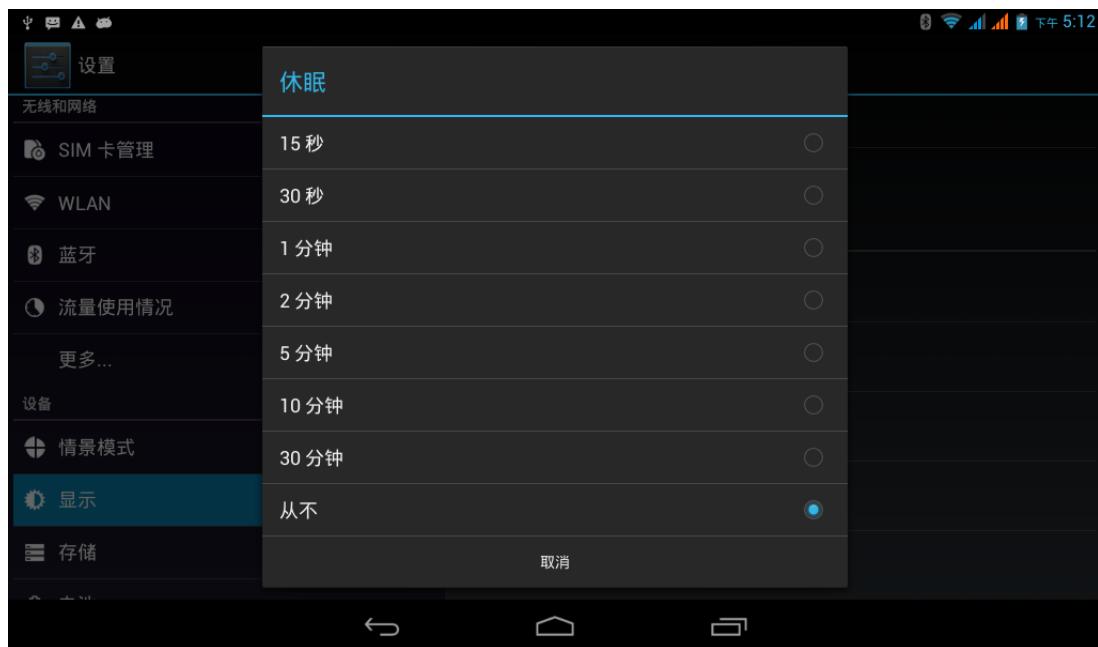

Picture 4.35

4.8 Storage

Open **setting** function, choose **storage** and **Default Write Disk** to choose the default write disk when installing new apps..

Check available storage space of SD card and MID


1. Enter into **setting** application.

2. Click **storage** to check available storage space.

1. Internal storage

(1) . System storage

System storage is the space the MID preserved for system files, as Picture 4.36, the content contained in the space cannot be accessed.

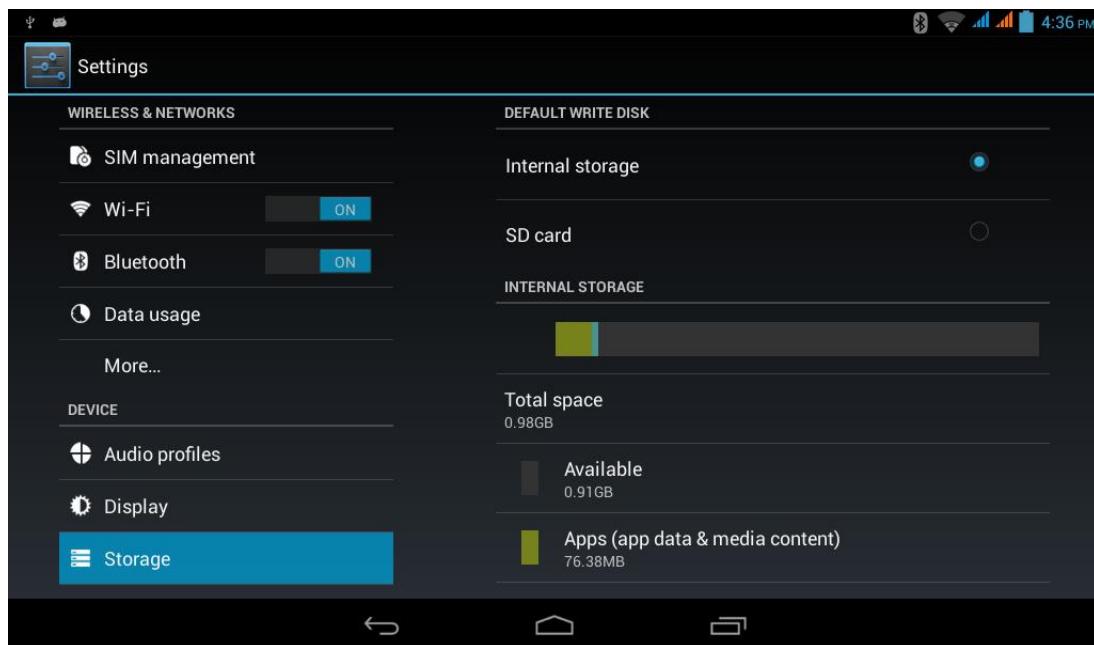


Picture 4.36

(2) . Internal storage

Internal device refers to MID's NAND, as picture 4.37; you can view the space in file management of main menu.

Beneworld International(HK) Co., Limited

www.beneworld.cn

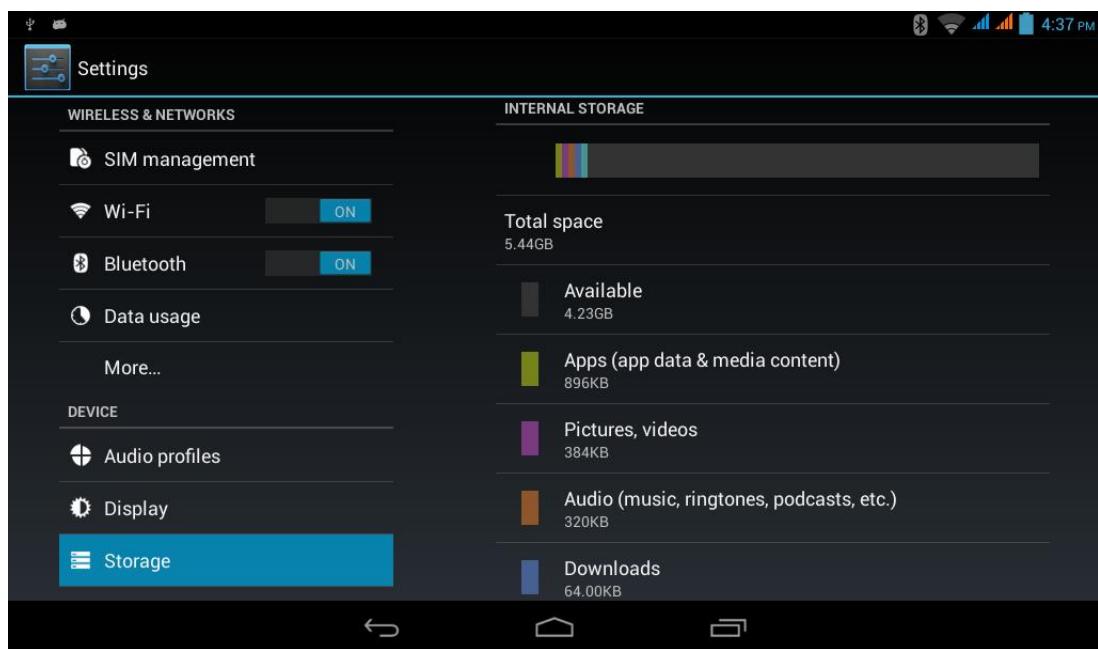

Picture 4.37

2. SD card

In Storage interface, you can check total space and available space of SD card, and perform operations of “Remove SD card” and “Format SD Card”, as shown in Picture 4.38.



Picture 4.38

Safely Remove SD card

1. Click **setting** application.

Beneworld International(HK) Co., Limited


www.beneworld.cn

2. Click **storage**.
3. Click **remove SD card**.
4. Then you can take out SD card safely.

Note: Safely remove SD card can effectively protect SD card and extend the service life of SD card.

4.9 Battery

Click **setting** function; choose **battery** to view the battery electric volume. As Picture 4.39

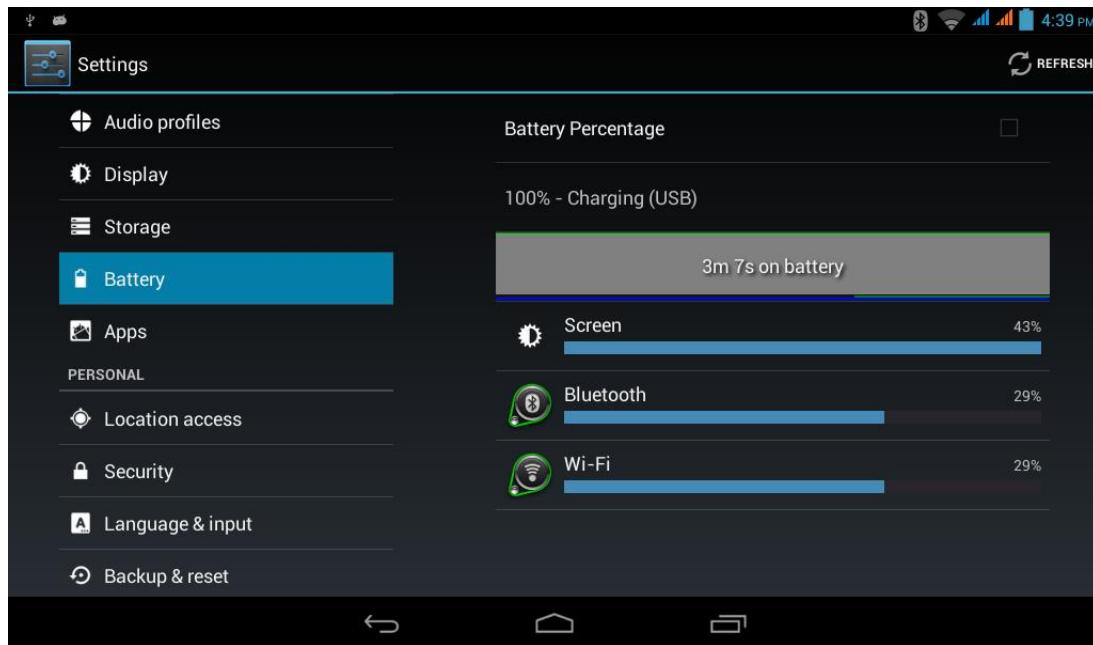


Picture 4.39

4.10 Application

1. Choose **setting** application in apps.
2. Choose application, then you can manage and delete apps and check the used space and available space (as Picture 4.40)


Beneworld International(HK) Co., Limited

www.beneworld.cn

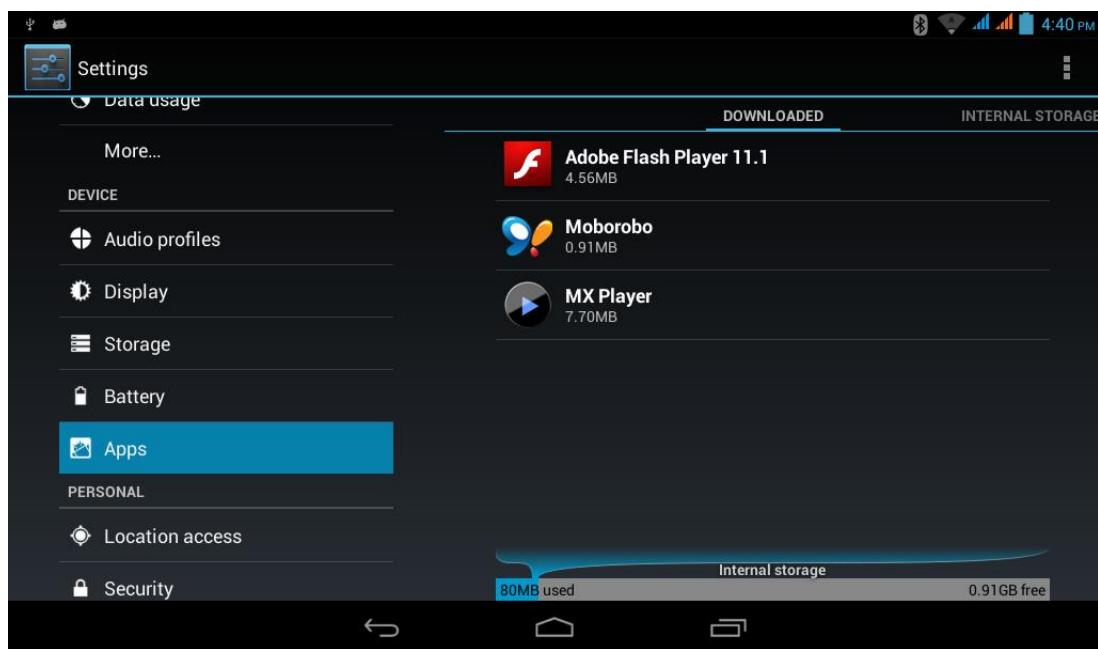

Picture 4.40

3. Check the used space and available space in internal storage, as Picture 4.41

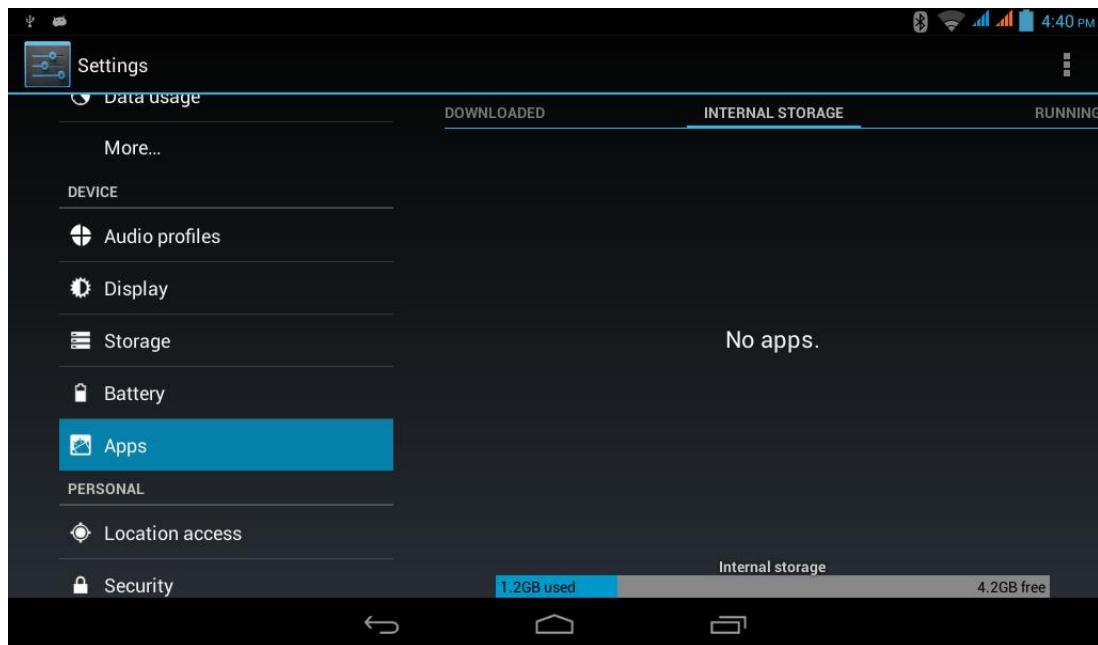

Picture 4.41

4. Check apps running, available space and used space, as Picture 4.42

Beneworld International(HK) Co., Limited


www.beneworld.cn



Picture 4.42

4.11 Location access

Click setting function; choose **Access to My Location**, as Picture 4.43

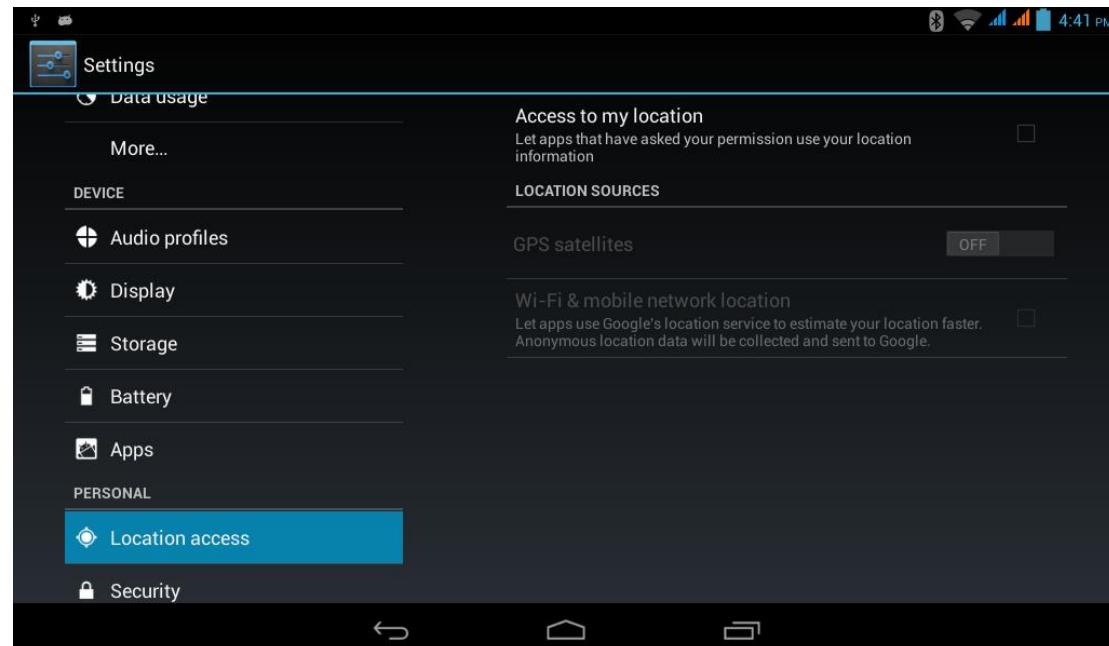

Picture 4.43

1. Access to My Location

Let apps that have asked your permission use your location

2. GPS Satellites

Open GPS satellite, you can use GPS to position MID.

4.12 Security


Set up Screen Lock

It's applicable to use unlock pattern or password to lock screen to protect your MID privacy.

Note: After setting of screen lock, you are required to enter password when startup or unlock screen each time.

Set up unlock pattern

1. Click **setting** application in main menu.
2. Click **Security**.
3. Click **Screen lock**.
4. In the text area, choose **pattern**.
5. Choose next step according to remind.
6. If the device popup pattern, there are nine points, you can connect four of them to set a password pattern, as picture 4.44, then move your finger from the screen, the system will record the pattern you set.
7. Click **continue**.
8. When you see remind, please enter the unlock pattern, click OK.

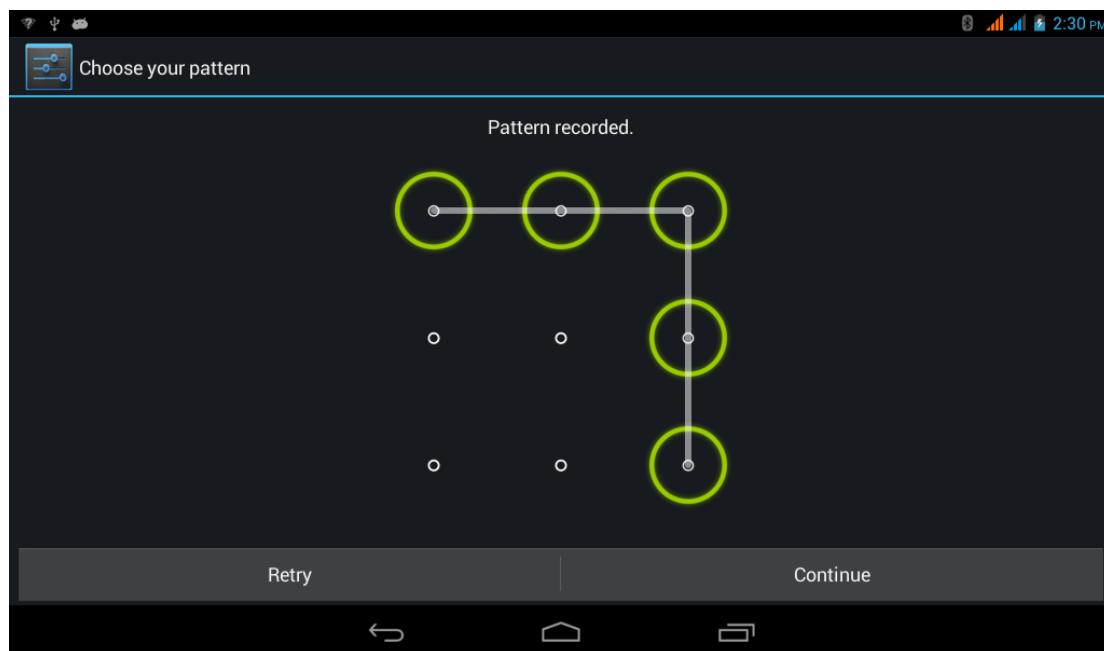

Picture 4.44

Set unlock PIN code

1. In main interface, click **setting** application.

Beneworld International(HK) Co., Limited

www.beneworld.cn


2. Click **Security**.
3. Click **Screen lock**.
4. Choose PIN in the text setting area.
5. Enter new PIN code and choose **Continue**.
6. Enter new PIN code and OK.

Set unlock password

1. Click **setting** application in main menu.
2. Click **Security**.
3. Click **screen lock**.
4. Choose **password** in text area.
5. Set new password(letters and numbers) and **continue**.
6. Enter password and confirm.

Unknown sources

1. Click **setting** application in main menu.
2. Click **security**
3. Click unknown source, as picture 4.45

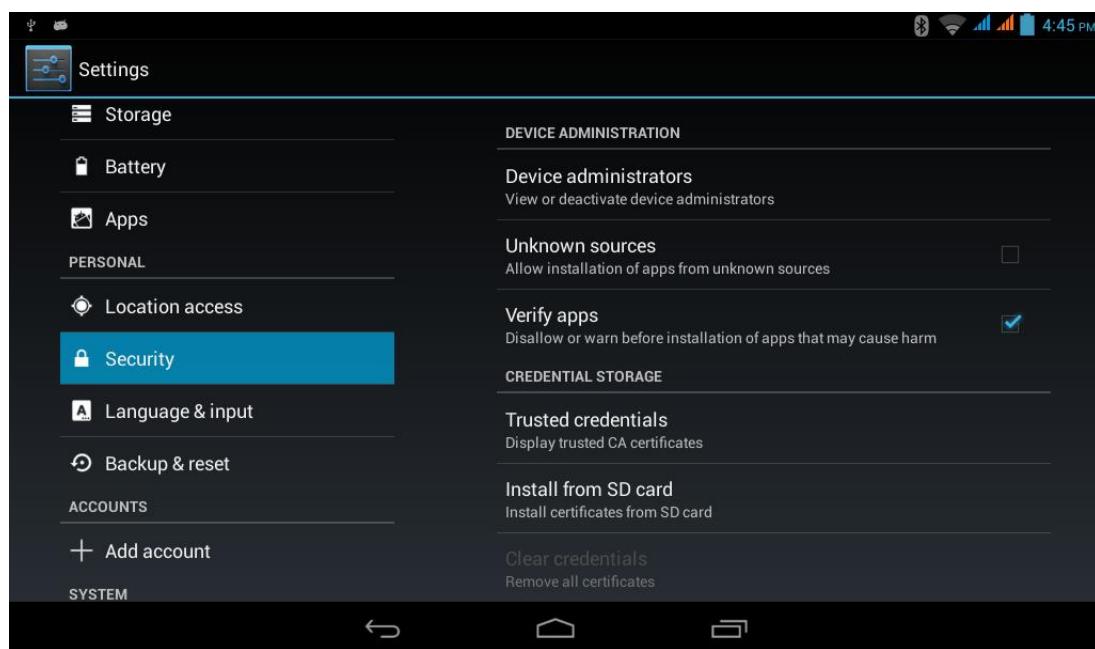

Picture 4.45


Beneworld International(HK) Co., Limited

www.beneworld.cn

Note: Only when activating unknown sources can realize successful manual installation of APK file.

4.13 Language and Input Method

Click **setting**, choose **language and input**, and choose **language** to change system language, as picture 4.46

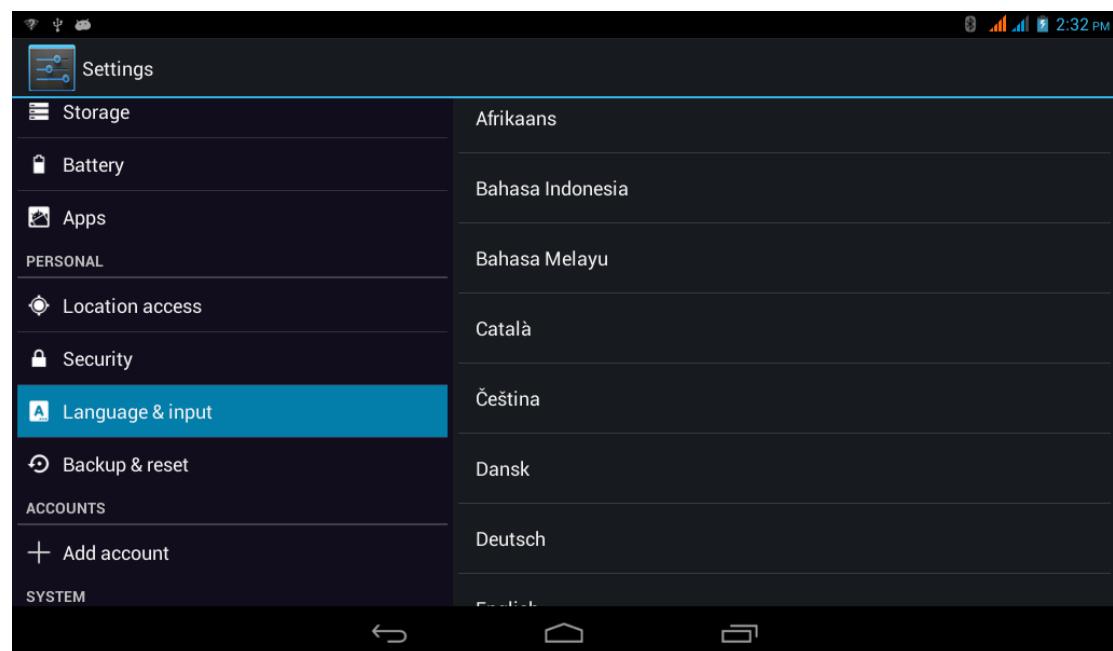


Picture 4.46

Click **setting**, choose **language and input**, choose **Android keyboard setting**, and choose **input language**, as Picture 4.47


Beneworld International(HK) Co., Limited

www.beneworld.cn

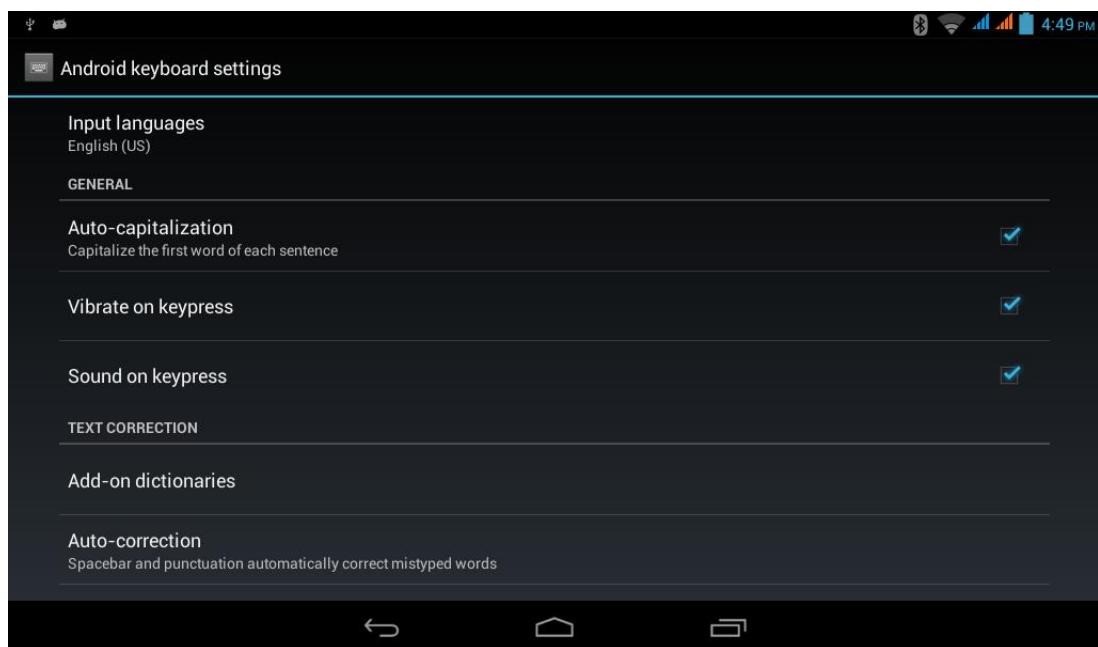

Picture 4.47

Cancel the current system language in input method, and then choose the language you want to set, as Picture 4.48

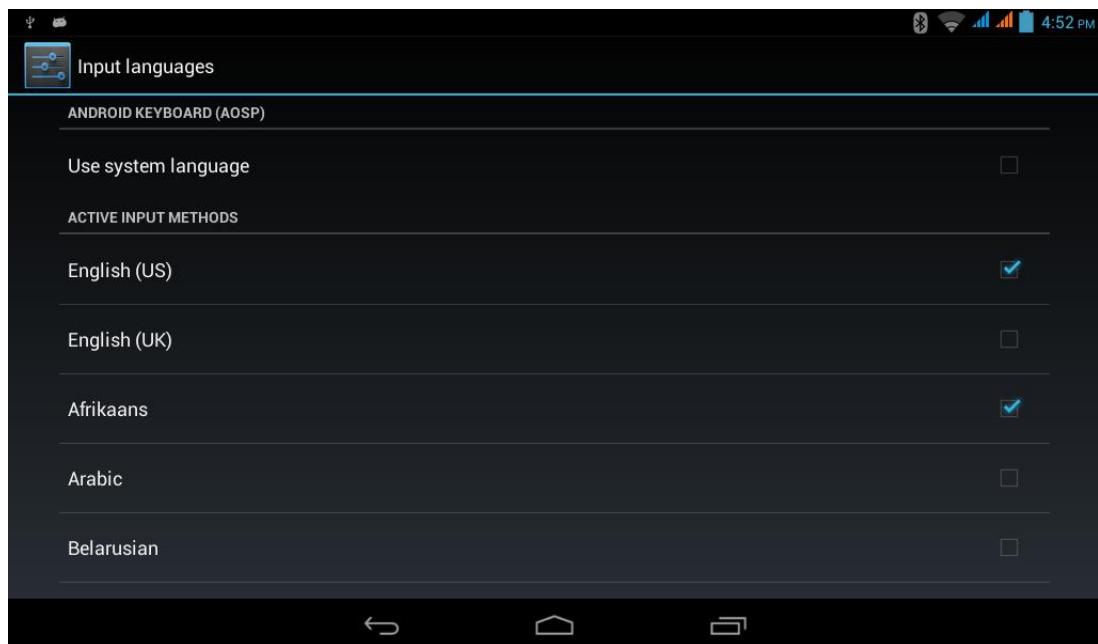


Picture 4.48

Return to **language and input method**, as default, as Picture 4.49, choose the input method you want

Beneworld International(HK) Co., Limited

www.beneworld.cn

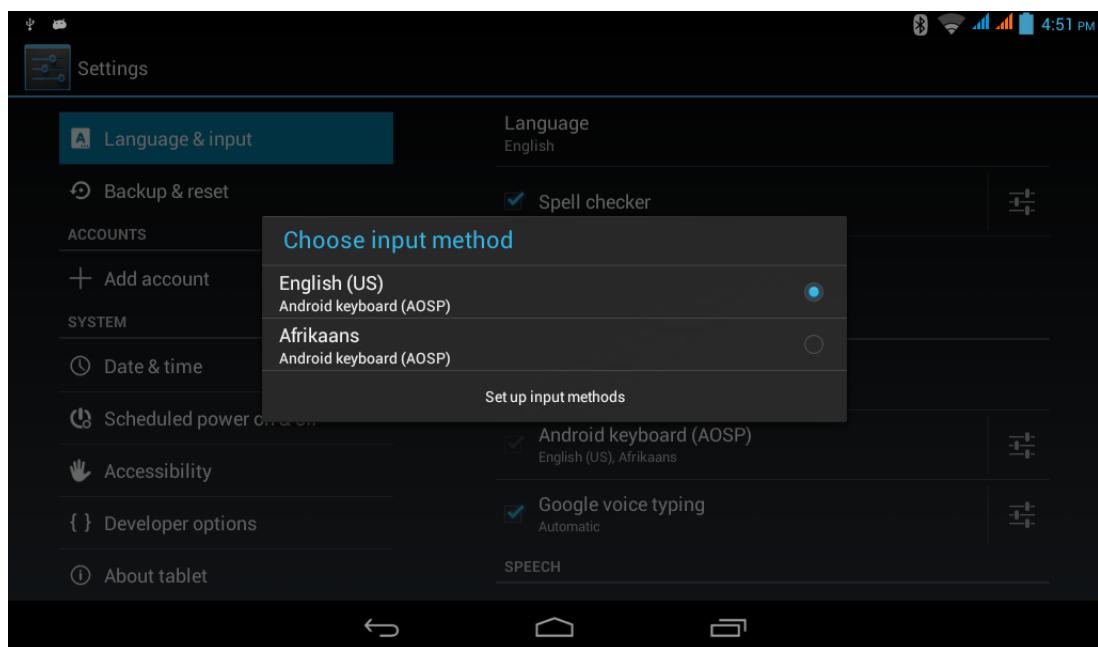


Picture 4.49

4.14 Backup and reset

When your device connect WIFI and login your Google account, choose backup my data, system will back up the data in Google server.

Click “Factory Data Reset” to erase all data from your tablet’s internal storage as shown in Picture 4.50. To format NAND, check “Erase Internal Storage” before resetting to factory data.

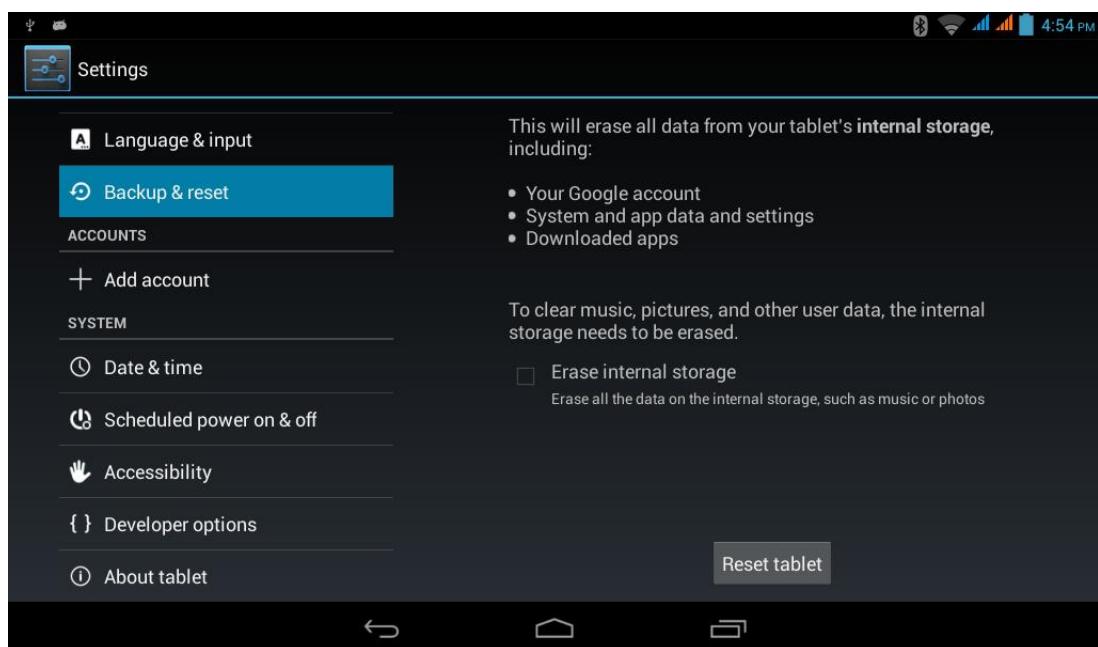


Picture 4.50

Beneworld International(HK) Co., Limited

www.beneworld.cn


4.15 Account and sync

1. Choose setting.
2. Open account and sync, as Picture 4.51

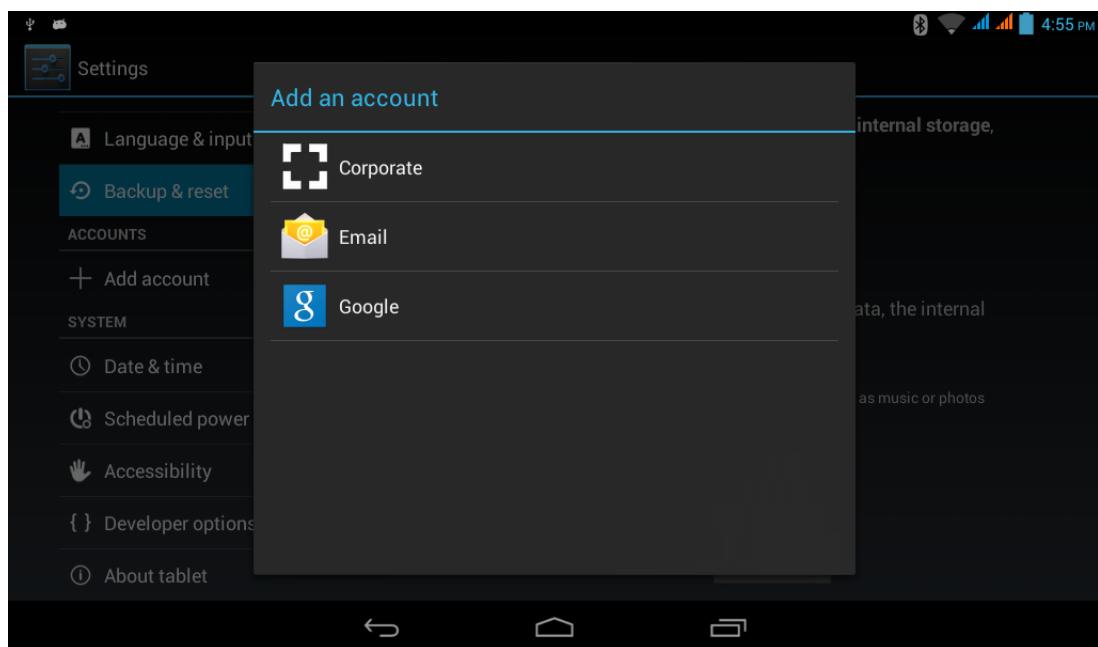

Picture 4.51


3. Choose the account type you want to login.
4. After upload successfully it will open SYN function, as Picture 4.52, 4.53

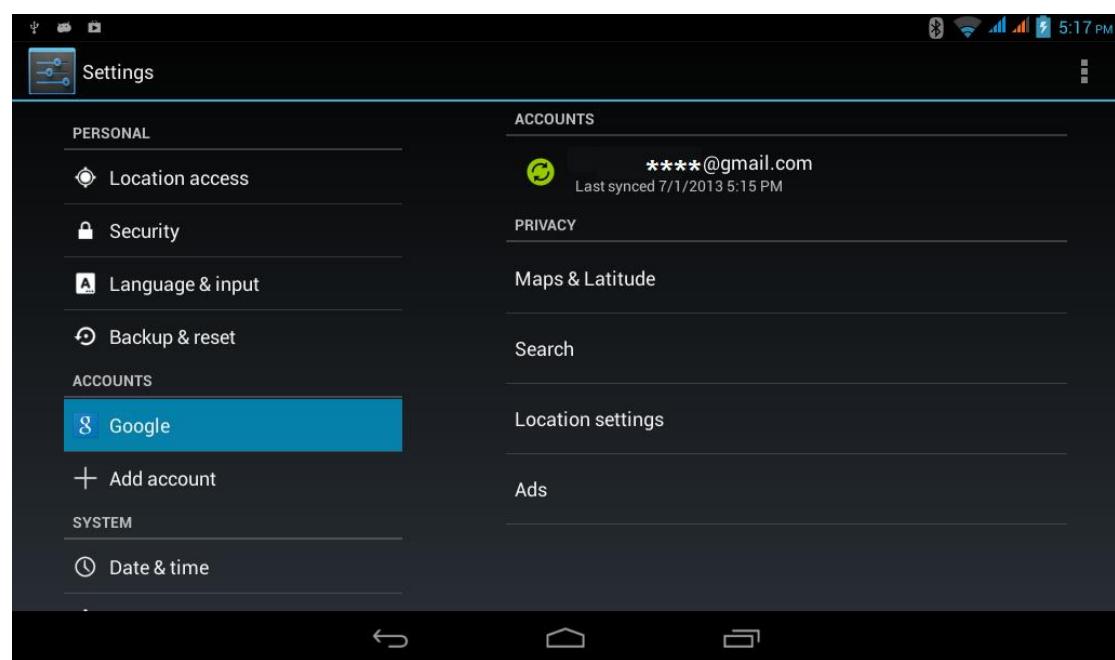

Picture 4.52

Beneworld International(HK) Co., Limited

www.beneworld.cn

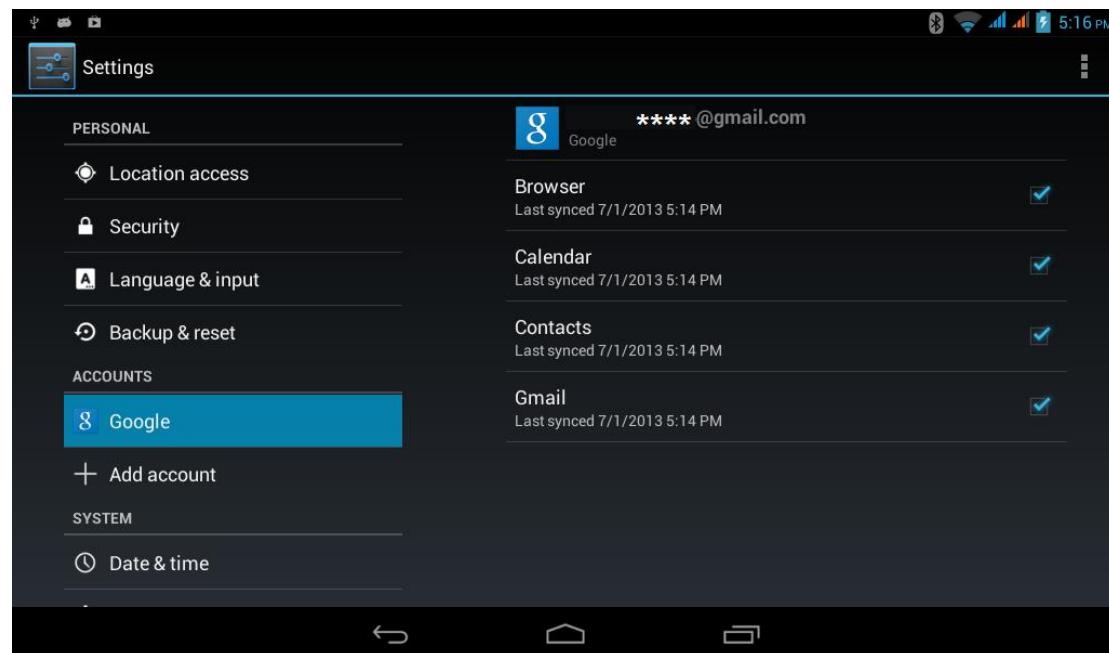

Picture 4.53

4.16 Date and time


According to preset, system will automatically use the date, time and zone which network provides.

Manual adjust date, time and zone

1. Click **setting** application.
2. Slide down screen, click **date and time**.
3. Close **automatically set date and time**.
4. Close **automatically set zone**.
5. Click **choose time zone**, then choose zone in list, down slide list to view more zones.
6. Click **setting date**, then move up or down to adjust date, month and year to finish setting.
7. Click **setting time**, then move up or move down to adjust hour and minute, click AM or PM to change time format.click setting to finish.
8. Choose **24 hour format**, you can switch between 12 and 24 hours, the time format you choose will be also used on alarm format.
9. Click date formats, choose the date format used on MID.

Beneworld International(HK) Co., Limited

www.beneworld.cn

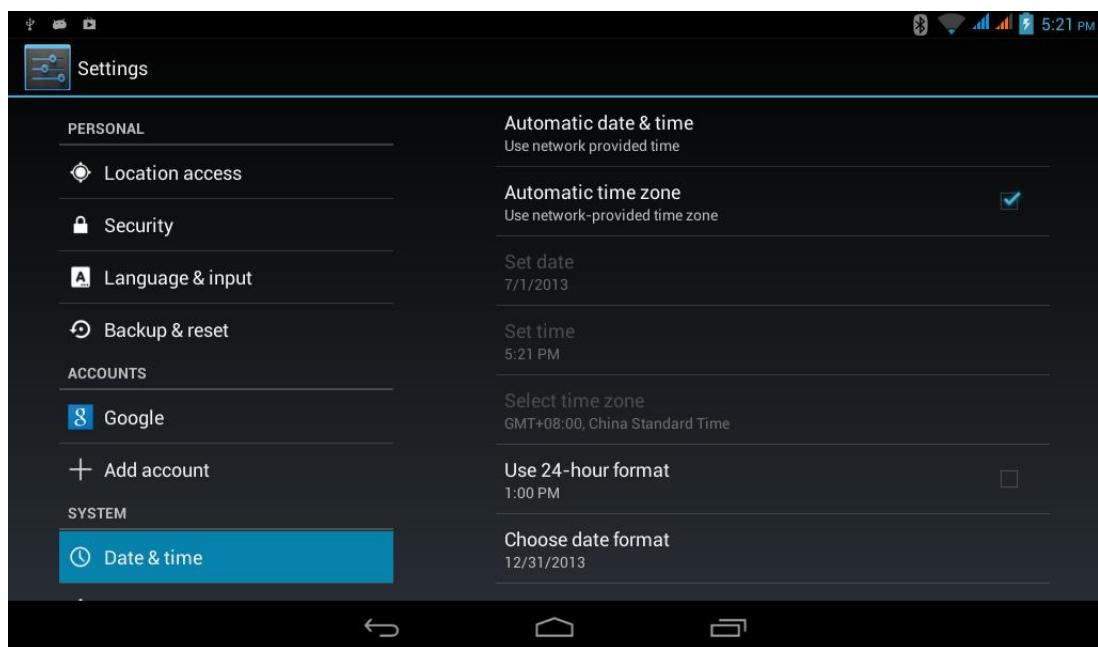


Picture 4.54

Note: If you use the network provides time, you won't set the date, time and zone by yourself.

4.17 Scheduled power on and off

1. Enter into setting application
2. Click scheduled startup and shutdown.
3. Operation as **Picture 4.55**

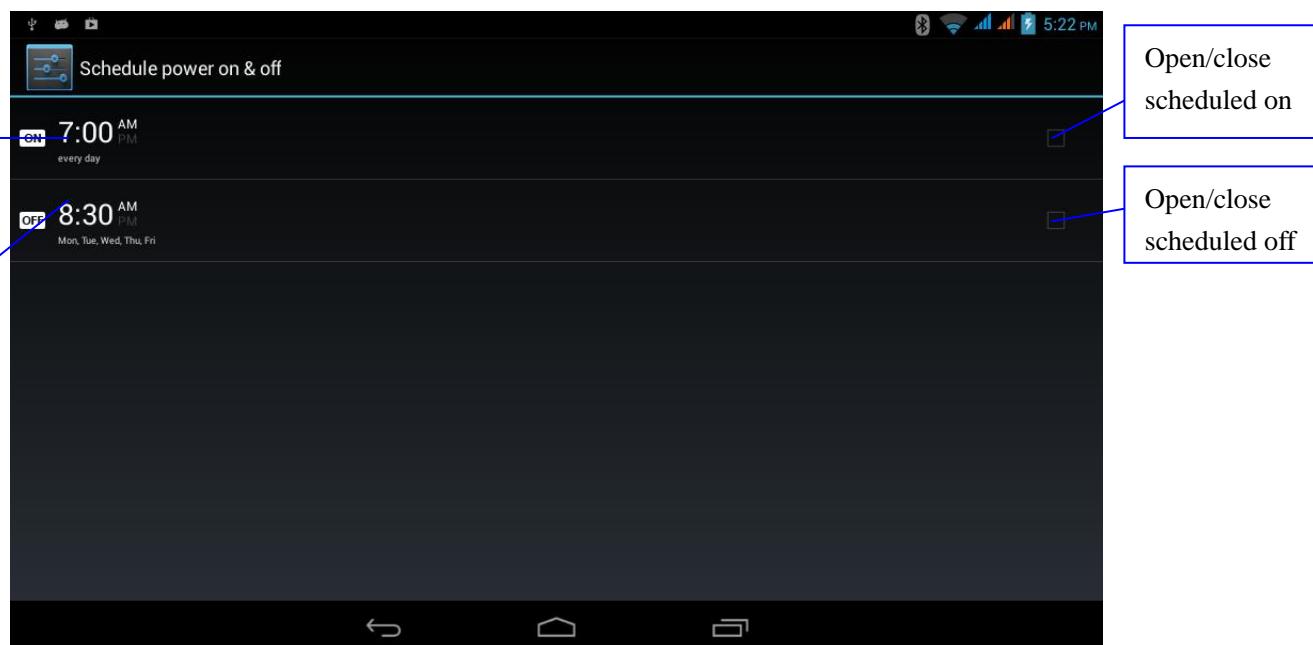

Picture 4.55

4.18 Accessibility

4.18-1. Talkback

This function is designed for blind people, system will feedback with voice for the content you can touch, choose and activate the system

4.18-2. Large Font


Click it to make the system font big size.

4.18-3. Auto-rotate the screen

Click it to rotate the screen according to gravity.

4.18-4. Touch and hold delay

Click touch and hold delay, as **picture 4.56**

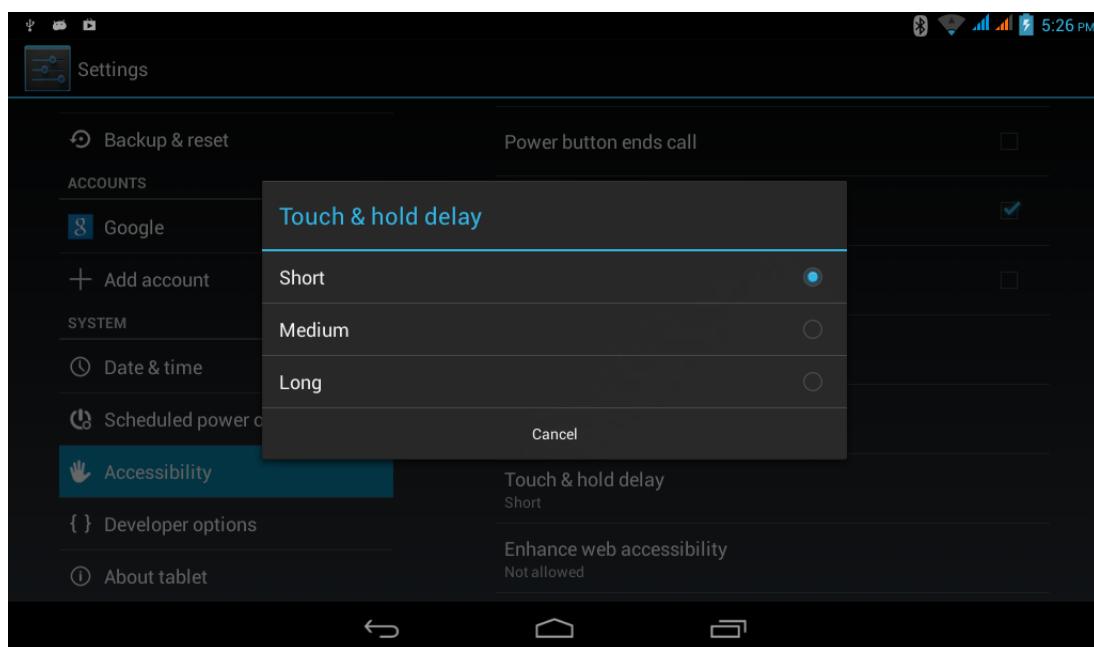

Picture 4.56

4.18-5. Install webpage script

System will allow you install webpage script after install it, but it will increase the safety risk when you browsing webpage.

4.18-6. Quick startup

After quick install, MID won't shut down completely, and it will startup much quicker.

4.19 Developer Selection

Click **developer selection**, Click developer selection, click the icon in right top, and open this function.

1. Unlock screen

After turning on “Unlocked Screen”, the MID will never automatically proceed to

Beneworld International(HK) Co., Limited

www.beneworld.cn

sleep mode when your MID is in charging state.

2. Read-Write Protection to SD Card

Turn on “Read-Write Protection to SD Card” and the SD card will get read-write protection. During protection, apps must request for the relevant permission to read the data of external storage devices.

3. USB adjustment

Open USB adjustment, use some software to read MID, but when USB adjustment is opened, USB storage need to adjust manually.

4. Display touch operation

Turn on “Display Touch Operation”, and the touch area will display on your MID. It is recommended that you also use “Cursor Location” to achieve higher accuracy and definition.


5. Cursor Location

After turning on the “Cursor Location”, it's applicable to read horizontal and vertical axis coordinates of your operations to touch spots on the MID.

4.20 About tablet

Local upgrade

Store update.zip package in the internal storage or root directory of SD card, click “Check Update” to make automatic update, as shown in Picture 4.57.

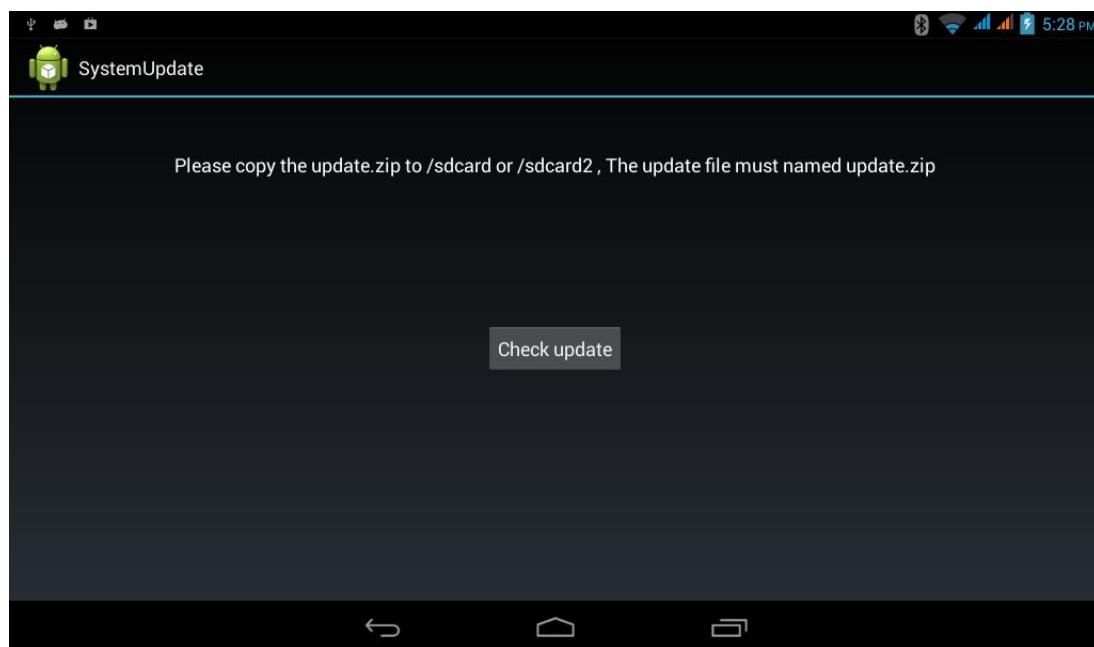

Picture 4.57

Check MID status

Beneworld International(HK) Co., Limited


www.beneworld.cn

1. Click **Setting** application.
2. Click **about tablet**. Check **status, model, Android version and version number**.
3. Click status information to check battery status, battery electric voulem, SIM status and IP address.


5 Multi-Media

5.1 Music player

Enter into music player: in main menu click music  to enter into music player, as picture 5.1 shown, choose the music you like to play.

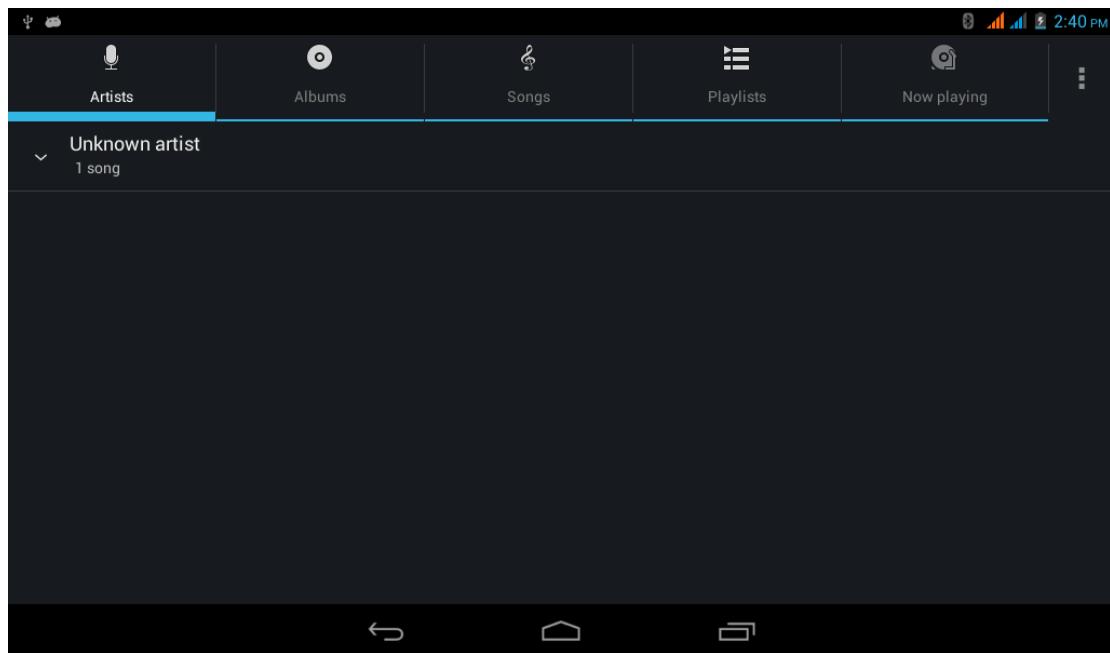

Picture 5.1

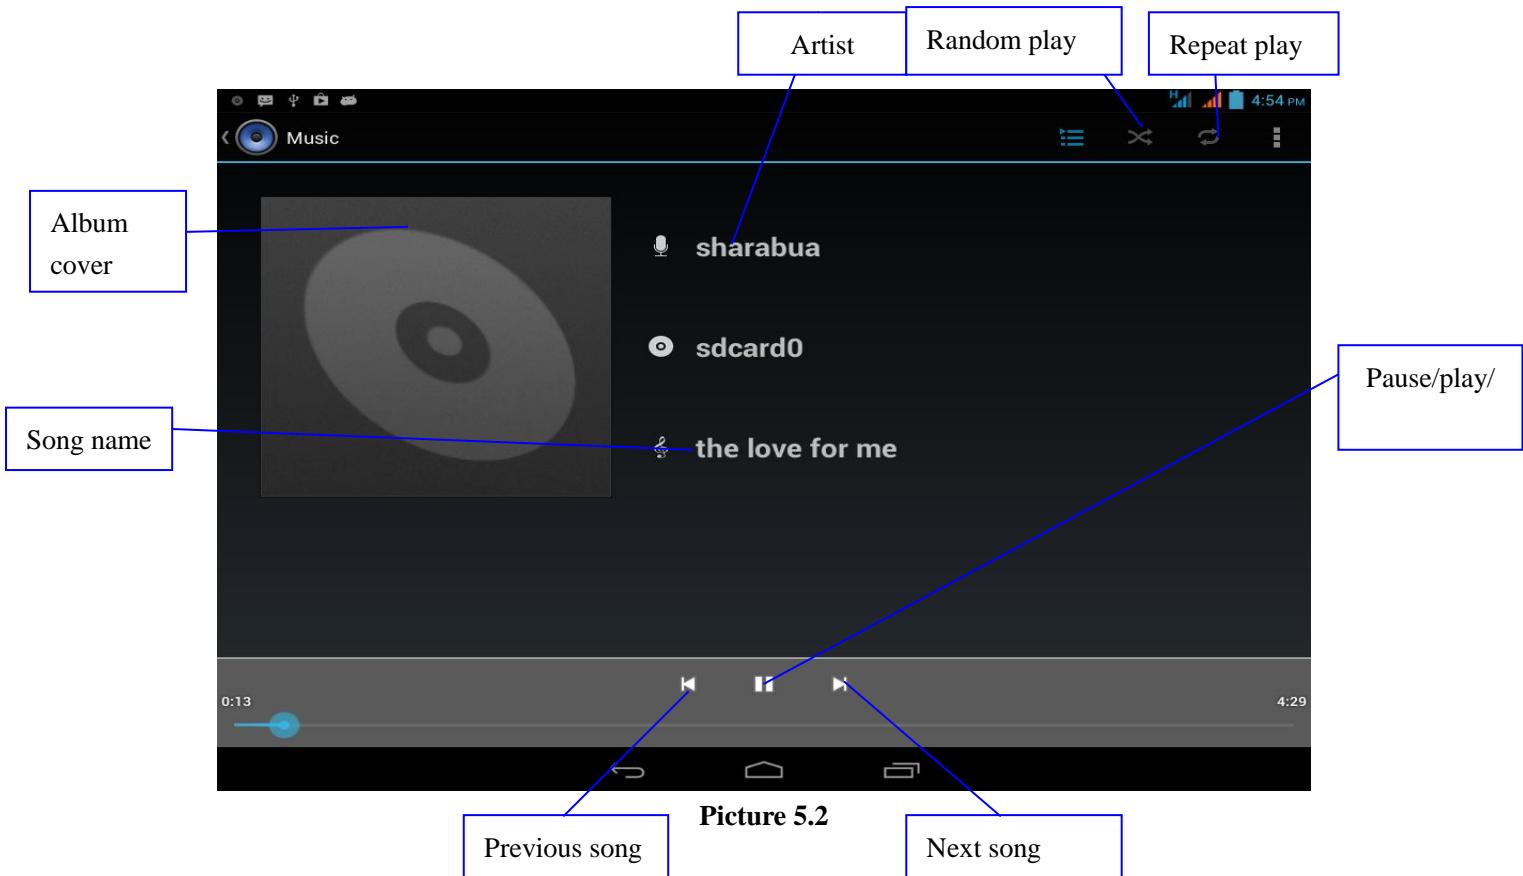

1. Drag progress bar to adjust play progress of audio file.
2. Operations of music player keys are as shown in Picture 5.25.2 Video

5.2 Video

- Enter into video player, choose main menu , and choose the video you want to play.
- Video player button description as Picture 5.3



Picture 5.3

5.3 Gallery

Photo gallery application can automatically search for photos and video files stored in SD card. And the gallery will classify these photos and videos by folders. You can view and edit photos, set photo as wallpaper and view picture through photo gallery application .

View photos

1. In main interface, click **Gallery** application.
2. Access Gallery and click the folder to be viewed to check its contained pictures.
3. Click the picture to be viewed, the system will automatically show picture in full screen mode.
4. When viewing photos, you can put two fingers on the screen, and then separate them or double click the screen to zoom out and pinch them to zoom in.

Tips: when viewing photos, you can also slide left or right to view pictures.

Edit and set picture

When viewing pictures in full screen mode, press menu key to display menu options,

Beneworld International(HK) Co., Limited

www.beneworld.cn

and then you can choose the preferred option to edit and set up pictures.

- **Slide Show**

1. Open a picture, use virtual key to click menu button, display menu selection.

2. Click Start Slideshow or select the  in the picture folder to proceed to automatic loop playback mode

- **Clip**

1. Click **menu** key, display menu selection.
2. And then click “Clip”, click and drag the applicable area to adjust clipper.
3. Click clipper to drag inside and outside to adjust clip size.
4. After adjusting to the proper size, click “Clip”.
5. In need of quitting clipping, click “Cancel” to go back to picture browsing.

- **Edit**


1. Click **menu** key, display menu selection.
2. Click **edit**.
3. Set the **brightness, style, color** and **effect** setting.
4. Click **save**.
5. In need of quitting editing, click the “Back” key, and then click “Back to Picture Browsing” in the pop-up options.

5.4 Camera



In main menu or desktop, click  to enter into application icon, enter into camera.

- Camera operating buttons and switch camera are as shown in Picture 5.4. Drag down the left function bar to expand other functions, as shown in Picture 5.5.

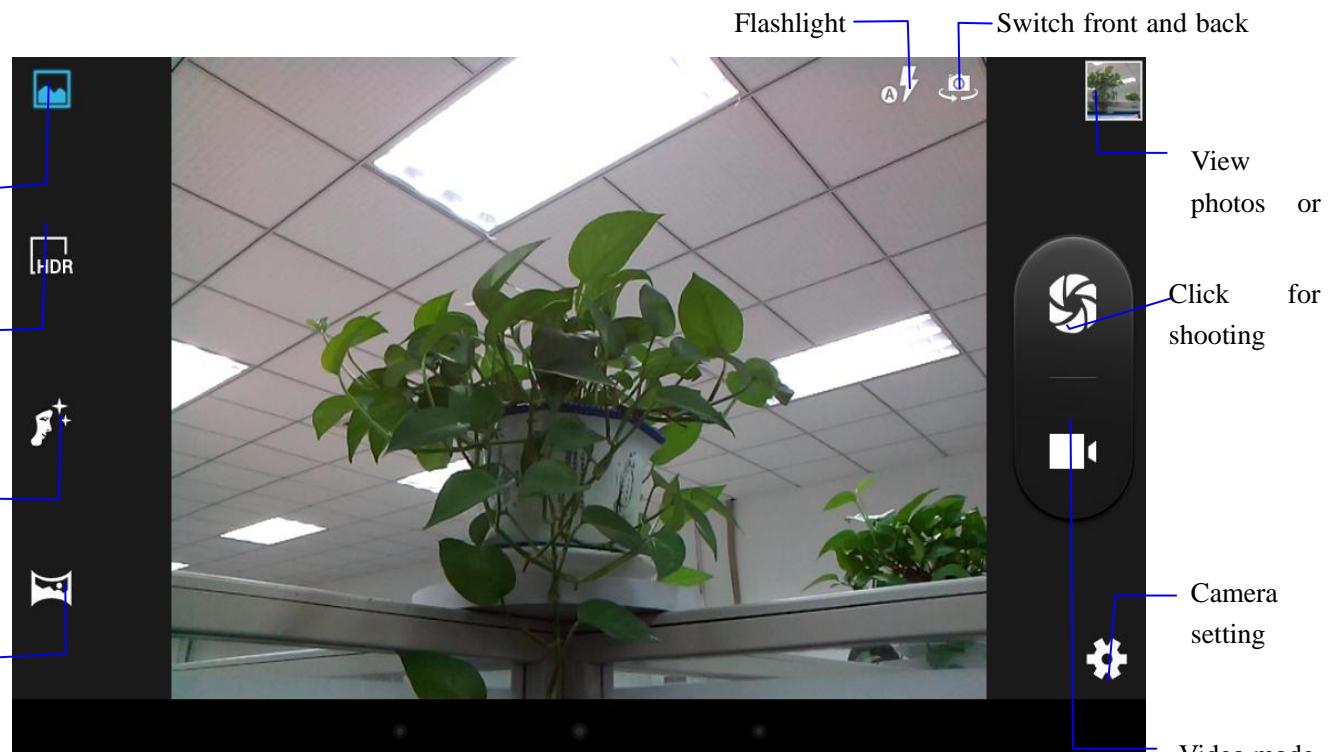

Picture 5.4

Beneworld International(HK) Co., Limited


www.beneworld.cn

Scene automatic
detection

Shutter

Smile shot

exposure

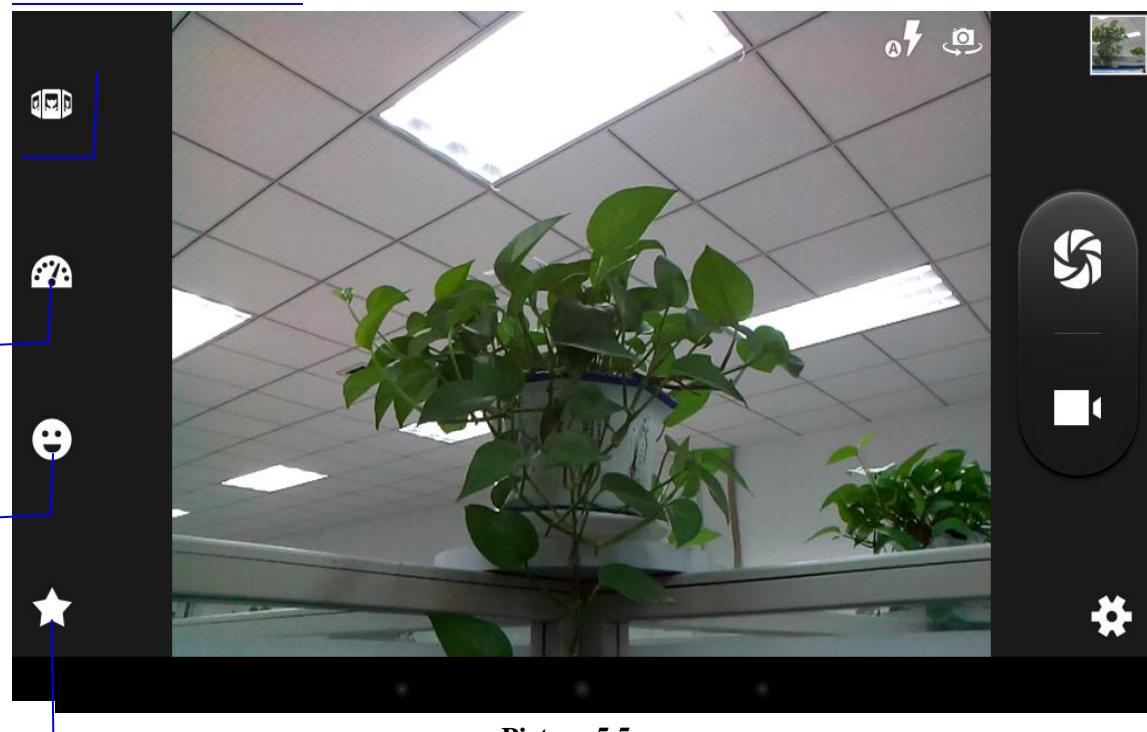


Picture 5.5

5.5

6 Communication Function


6.1 Call

- 1 Choose **dial** application
- 2 Operate as Picture 6.1

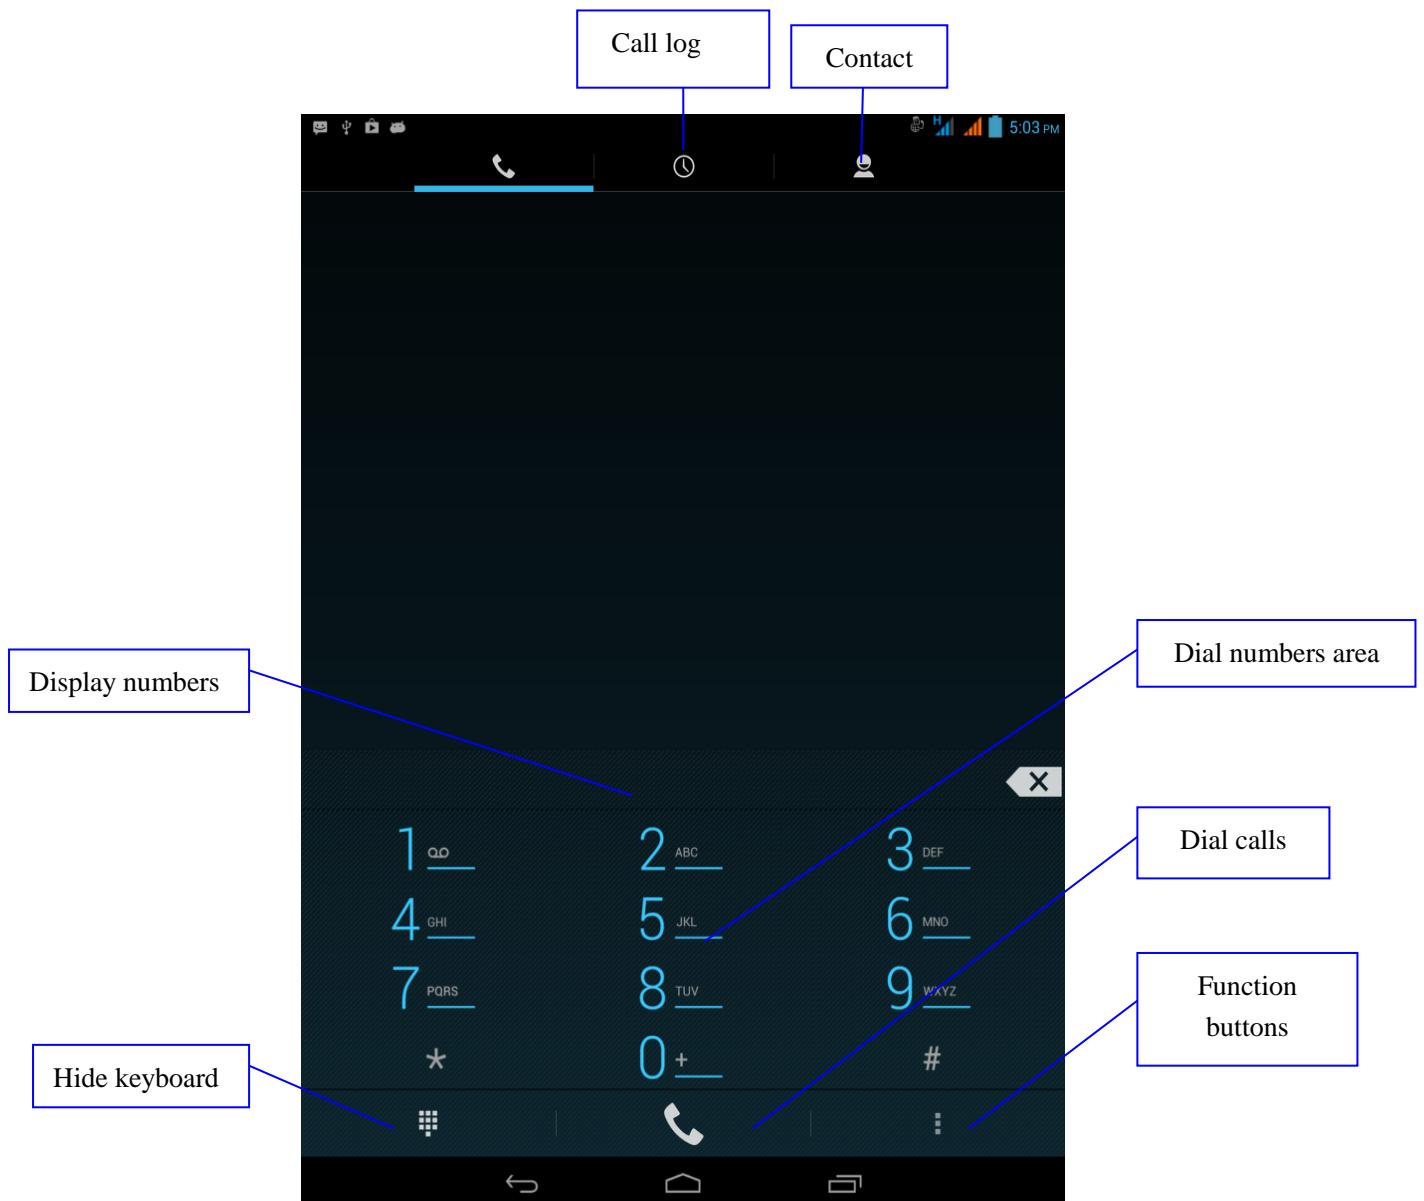

Picture 6.1

6.2 Messaging

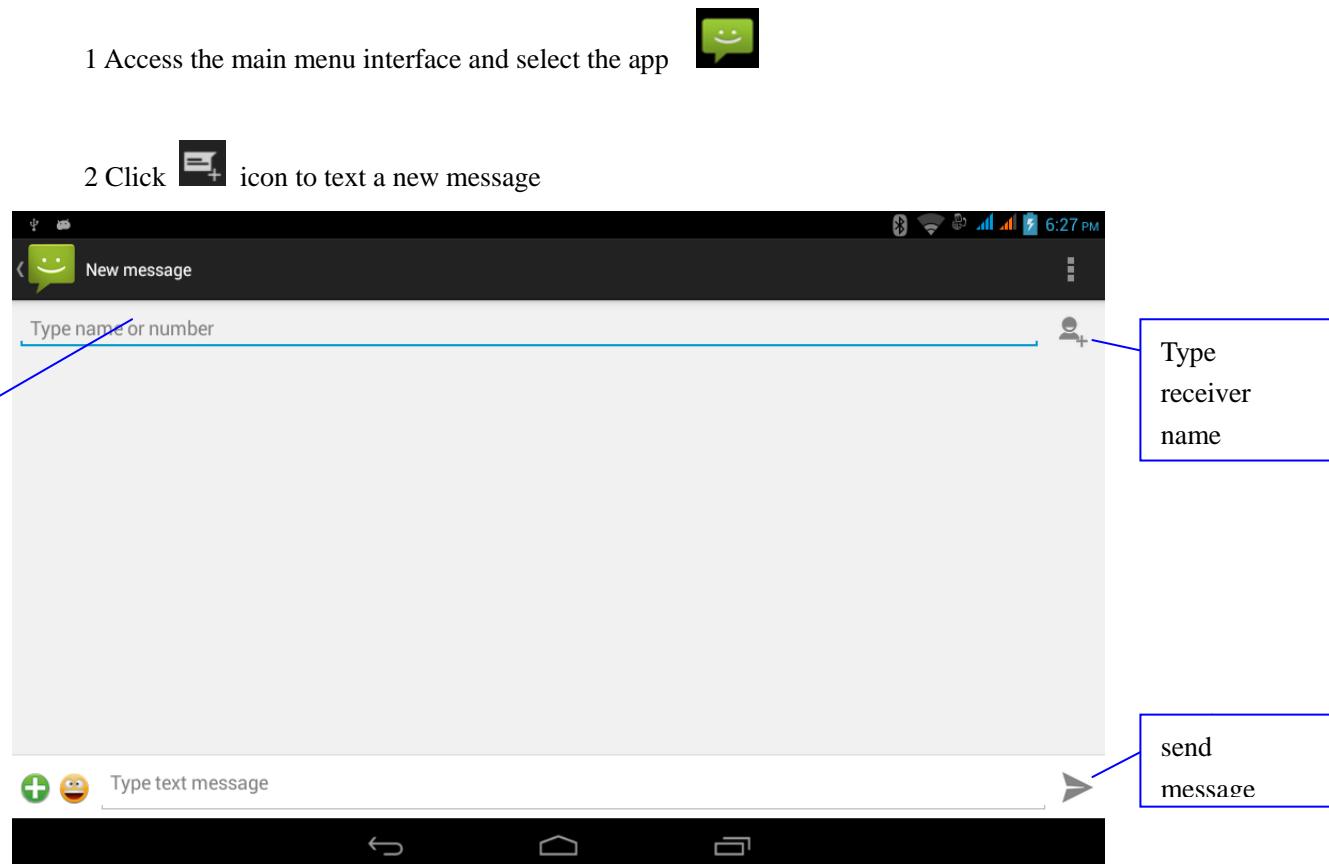


Picture 6.2

6.3 Contact

Choose  application in main interface; enter into contact application, as Picture 6.3

Beneworld International(HK) Co., Limited

www.beneworld.cn

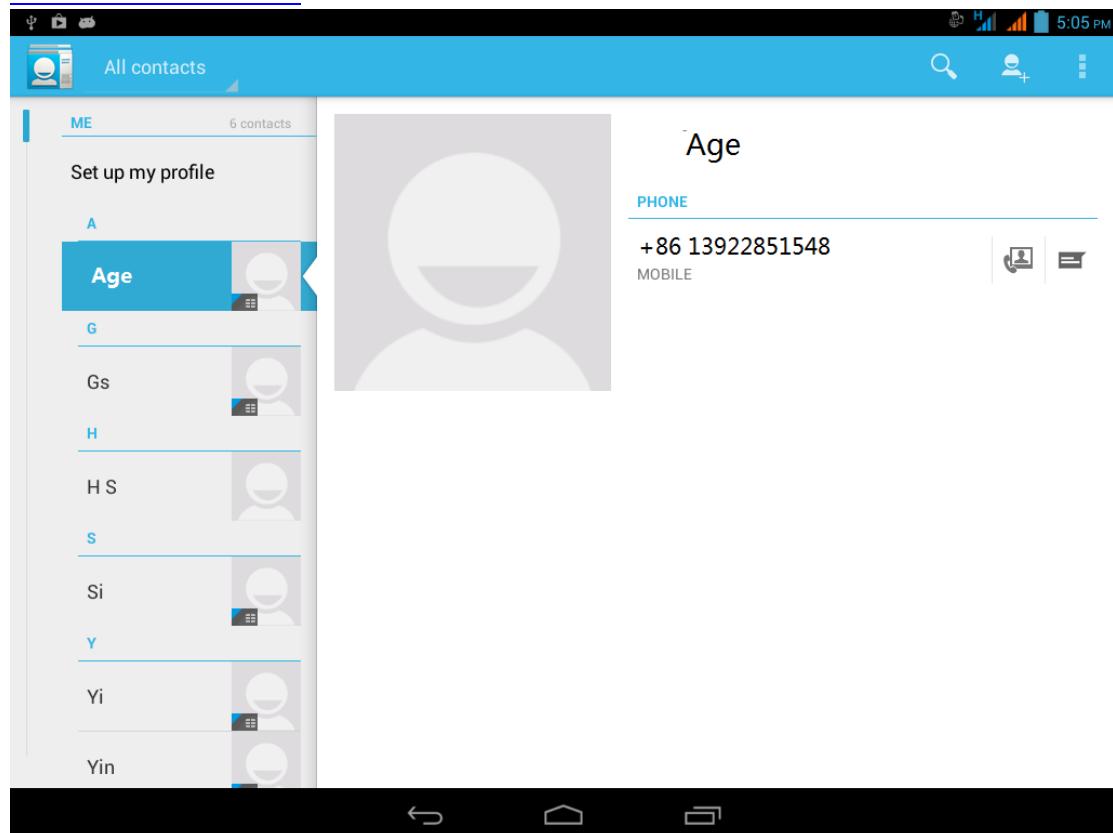

Picture 6.3


- Search contact: click  button, enter into search function.
- Add contact: click  button, enter into add contact interface

7 Internet

7.1 Browser

When wifi is well connected, click main menu or desk browser  to enter into IE interface.

Click address column to input website to start, enter into related webpage to view its information, as Picture 7.1

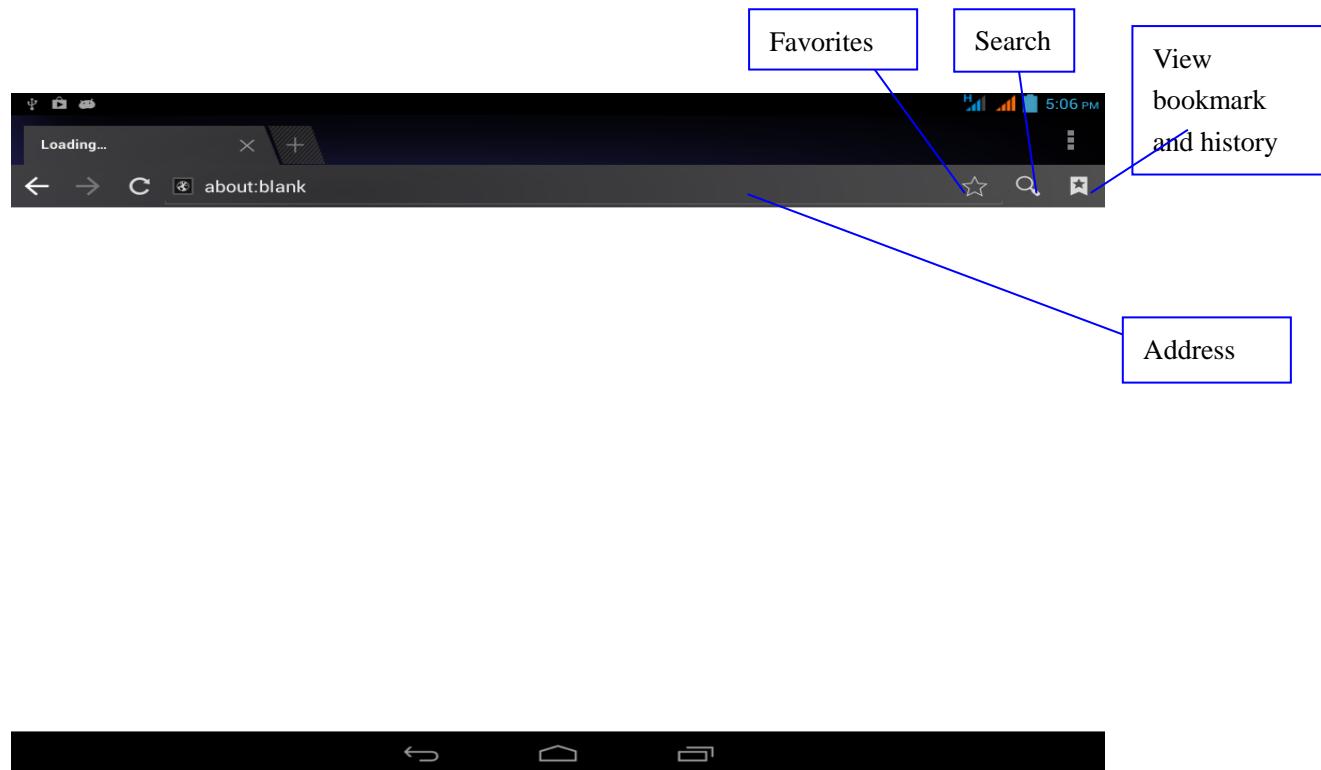


Picture 7.1

7.2 Email

The E-mail app is accompanied with E-mail setup wizard. You can add external POP3 or IMAP email accounts of common Web email service providers (e.g. Yahoo, Gmail, and 163.com) , as Picture 7.2

Beneworld International(HK) Co., Limited

www.beneworld.cn

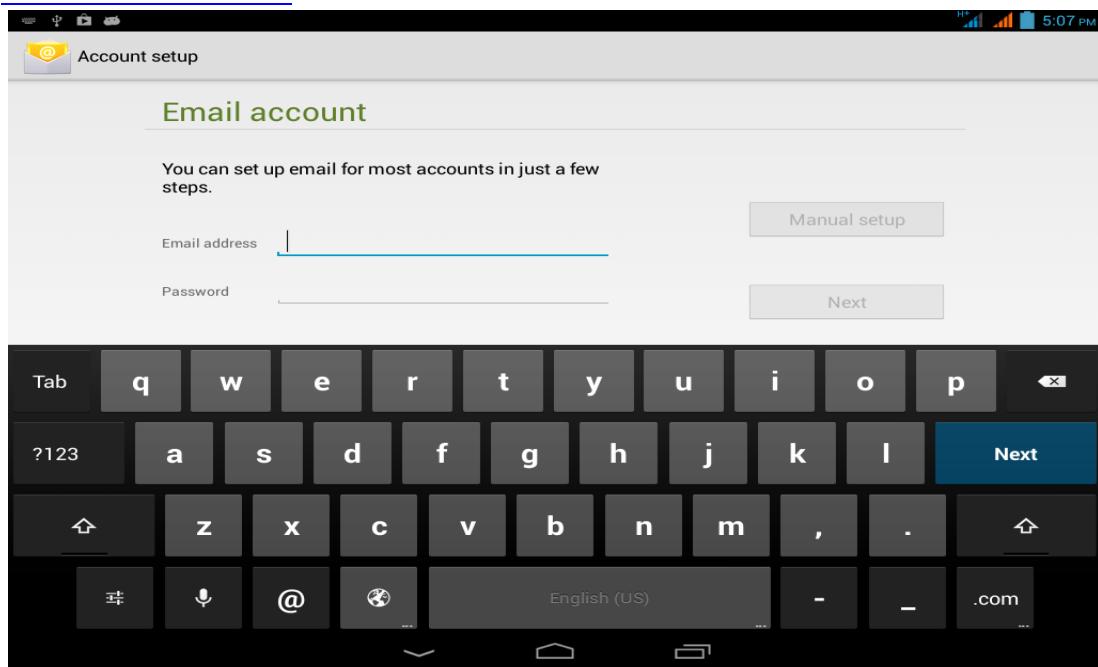

Picture 7.2

a. Email Account Setup

1. Click  icon, email setting will help you to set.
2. Input your **email address and password**.
3. Click next button to check email receiver is available or not.
4. Input account name and email address, then click finish.
5. If email can be used, it will enter into your inbox.

b. Delete email account

You can delete your POP3 or IMAP email account from your MID.

1. Click .
2. Enter into your inbox.
3. Click menu key.
4. Click **setting**.
5. Right slide to choose delete account.
6. Click confirm to delete.


c. Send E-mail information

1. Click , display your inbox.
2. Click inbox to refresh new email, click it to read.
3. Click menu key, popup menu.
4. Click  icon in right top , enter into edit email interface.

Beneworld International(HK) Co., Limited

www.beneworld.cn

5. Type email address in receiver name area.
6. Type theme and email text.
7. Click add attachment.
8. Choose the attachment you want to send (such as images, videos)
9. Click send to send email.

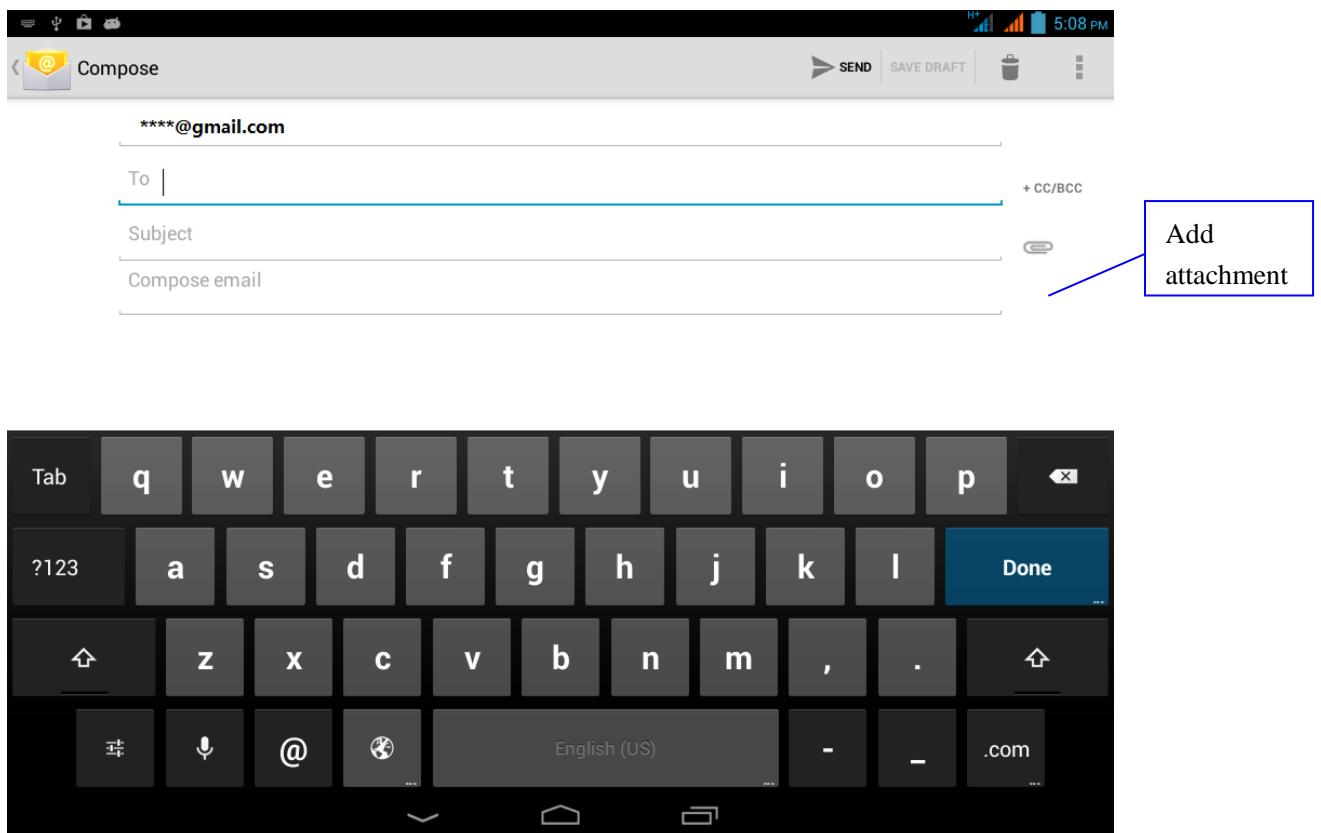

Picture 7.3

8 GPS Function

8.1 GPS Positioning

1. After installation of map application from the third party, the built-in GPS signal receiver of the MID can make accurate positioning and real-time navigation of road condition, and finally meet the need of outdoor navigation.

2. Access the “Reset” interface and click the icon , as shown in Picture 8.1.



Picture 8.1

After successful positioning, the blue area will turn to green. More details, such as latitude, longitude, height, speed and time, will be displayed, as shown in Picture 8.2.

Satellite value represents intensity of positioning signal and some relationship between positioning time and time zone selection in setup, e.g. in case of any discrepancy between time and time of positioned location, please check whether the time zone selected is correct.

Beneworld International(HK) Co., Limited
www.beneworld.cn



Picture 8.2

9 Other Apps

9.1 Clock

Click “Clock” on main menu interface, as shown in Picture 9.1.

Click “Set up Alarm” to set an alarm clock.



Picture 9.1


9.2 Calculator



1. Click .
2. Process to basic panel of calculator.
3. Touch numbers or operators on calculator panel to make calculations.

Beneworld International(HK) Co., Limited

www.beneworld.cn

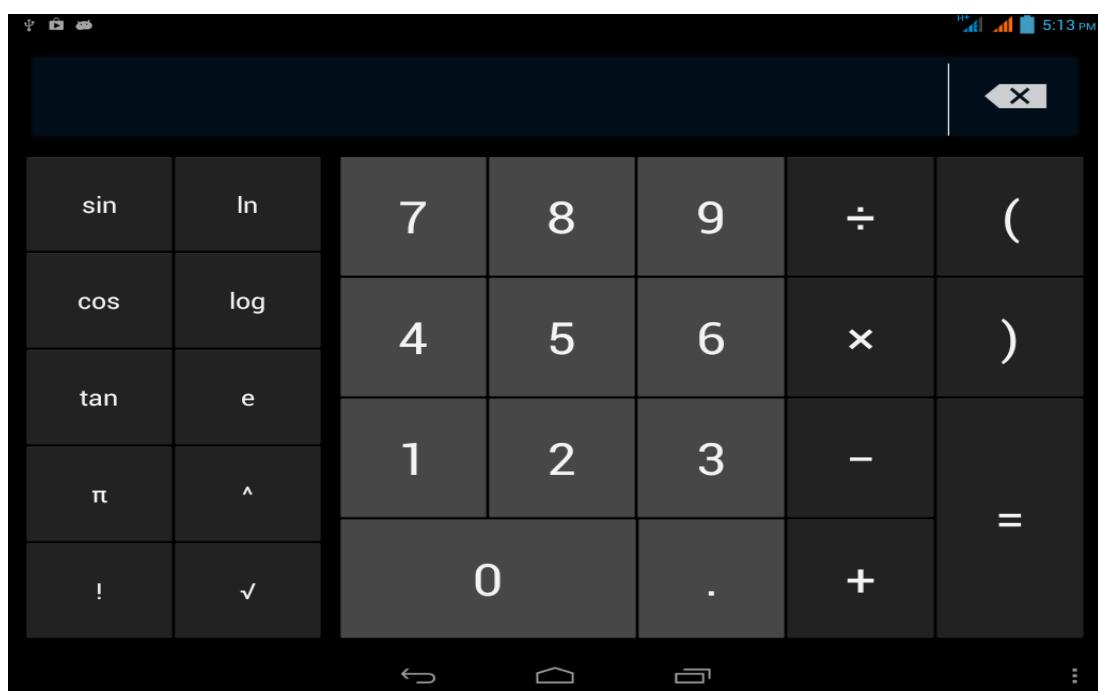

Picture 9.2

9.3 File Manager

The File Manager offers functions to copy, cut, delete and rename files and folders in TF card. Through the File Manager, you can also share files and install .apk apps.

Click the File Manager icon  on the main menu or desktop for access.




Beneworld International(HK) Co., Limited

www.beneworld.cn


Picture 9.3

a、Copy, cut, delete and rename files and folders: Select a folder or file. Then hold the folder or file to proceed to the interface as shown in Picture 9.4 and perform the relevant operations on the folder or file.

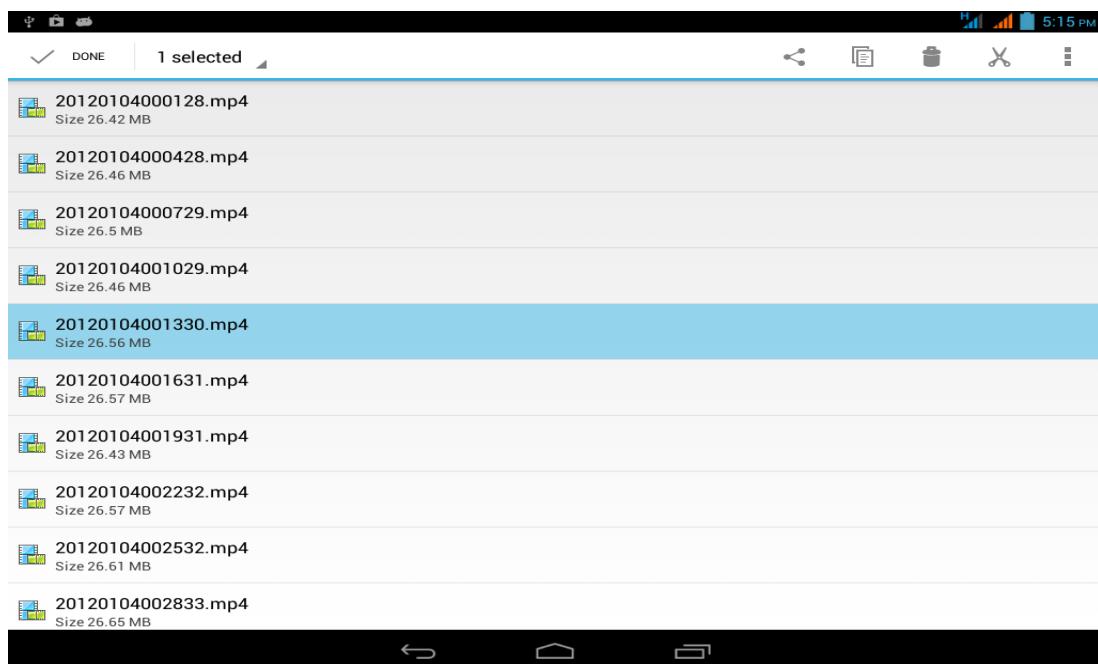

Picture 9.4

b、Paste the copied or cut file or folder. Select the icon  in the upper right-hand corner in the directory and complete paste, as Picture 9.5

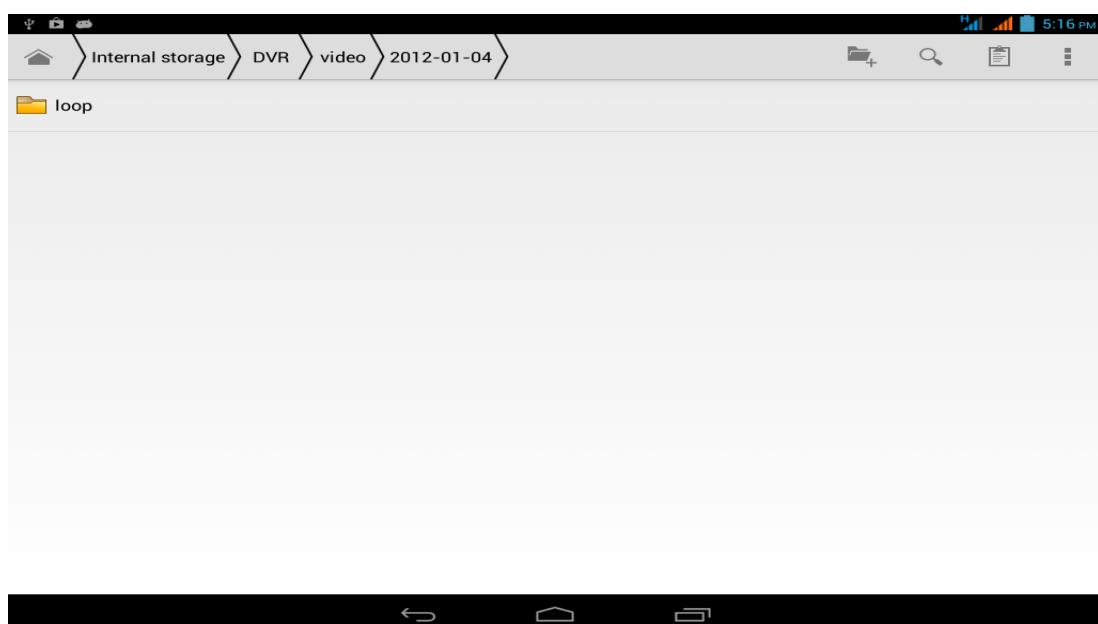


Beneworld International(HK) Co., Limited

www.beneworld.cn

Picture 9.5

c、 Share files: Select a file and hold the file. Select the icon  in the pop-up list, and then select the preferred sharing method from the pop-up list.

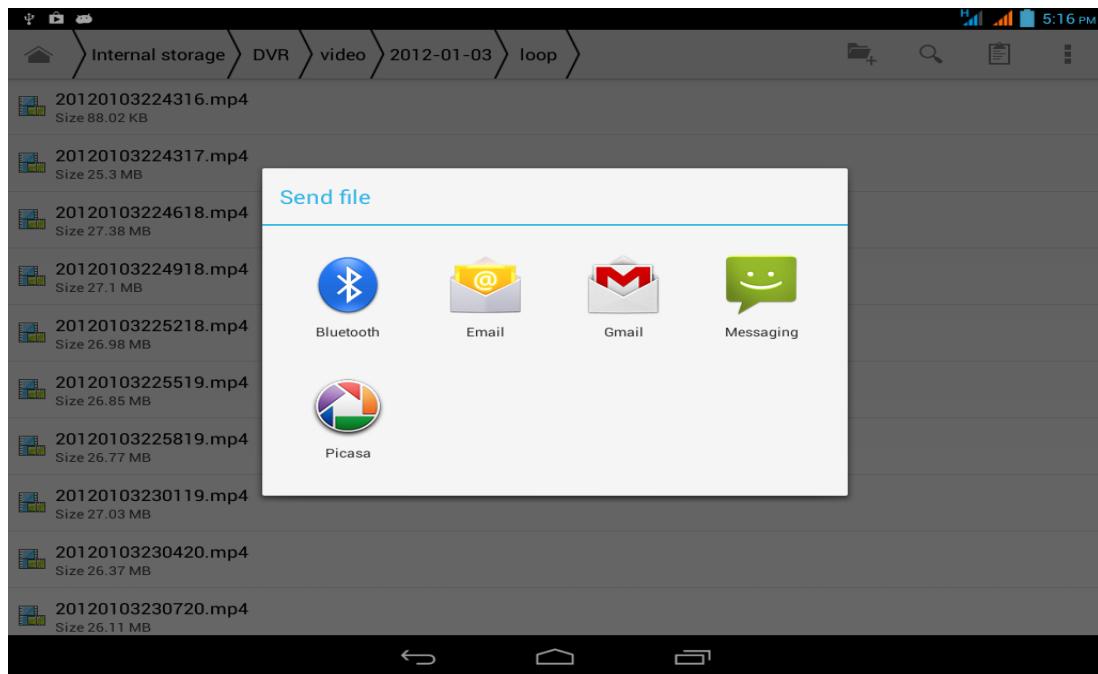

Picture 9.6


d、 Install APK. File: Select the file with apk. Suffix from file manager. After that, the setup wizard pops up. Install the third-party software by following the prompts.

e、 Create new folder: Select the directory where you intend to create new folder. Click the  icon in the upper right-hand corner. Then select the create new folder and complete the procedure by following the prompts.

9.4 Sound Recorder

In main menu or desktop, click the Record icon  to proceed to recording interface, and click the REC key  to start recording. Click the Pause key  to stop recording. Click the Play key  to play the last recording. The system will prompt you to use or quit the record. Please make your choice.

Play recording: Select the audio player to play. First, select a recording from the Resource Manager based on directory. Then click the file to play.

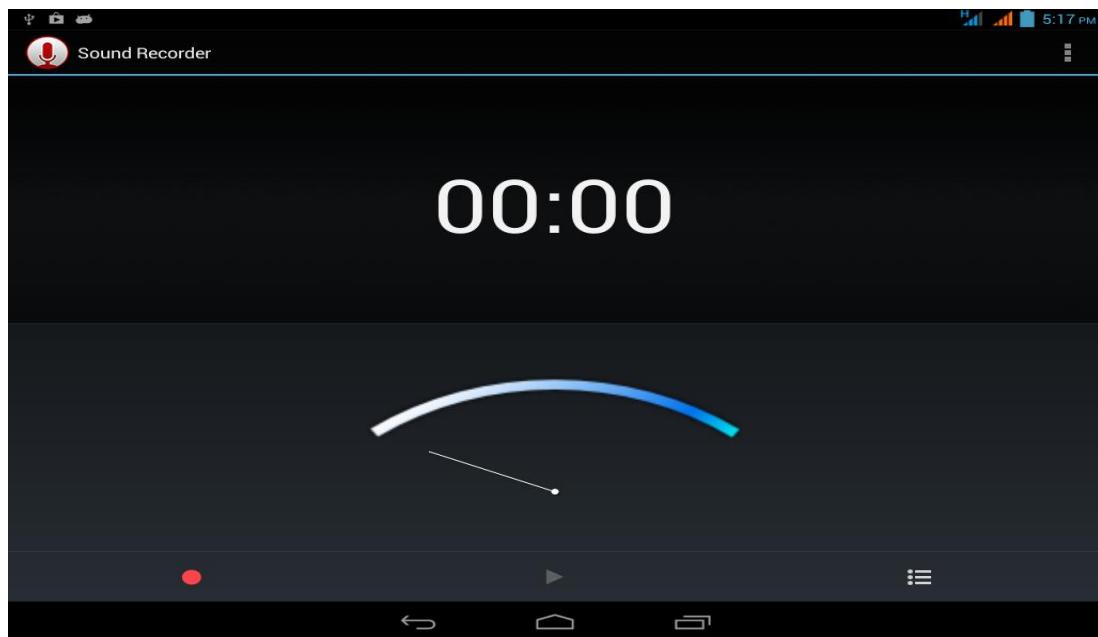

Picture 9.7

10 Installation of Apps

10.1 Installation

Install Third-Party Apps

1. Click “File Manager” to select an APP to be installed.
2. Press and hold the APP to be installed.
3. Install options pop up and click “Install Apk”.
4. Run the APP after completing installation by following setup wizard.

Note: The third-party APPs that are downloaded from the Internet and installed in the system have .apk suffix in filename.

10.2 Uninstallation Uninstall Apps

1. Click “Settings” on the main UI.
2. Click “APPs” to display list of all APPs installed in the system.
3. Click the APP (with .apk in filename) to be uninstalled and then click “Uninstall”.
4. Click “OK” to complete uninstallation.

Tips: It is convenient to uninstall an APP by the preset program manager. Open the program manager. Click the “Uninstall” tab to display the list of APPs installed in the system.

11 Troubleshooting

1. MID starts up slowly for the first time

After update of the MID system, the system needs to install the preset APPs when starting up for the first time with time delay of about 2-3 minutes. After that startup, the device will run faster.

2. MID fails to connect to Wi-Fi

- Make sure that the wireless router providing network service works normally.
- Make sure that the MID keeps a certain distance from the wireless router, and no wall or other barriers exist between them.
- Make sure you have entered the correct user name and password.

3. The MID feels hot

When the MID is charging or running multiple APPs at a time, or its screen is in maximum brightness mode, the device is likely to get hot. This is normal.

4. Fail to set up email or register application

- Make sure that your network connection is correct and available for connecting to the Internet.
- Make sure that the setup method of email is correct.
- Make sure that your system time is identical with local time.

5. System fails to work normally

When you are installing some third-party apps, it may cause abnormal status of the system. You can press the Reset key to reset the system.

6. Fail to open web pages

- Please keep an effective distance between the router and MID.
- Please reboot Wi-Fi and try again.

7. Sometimes the MID runs with slow response

- This phenomenon is normal. Please shut down some idle apps by Advanced Task Manager and uninstall some third-party apps to release more system resources.

Beneworld International(HK) Co., Limited

www.beneworld.cn

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*** RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This **7inch Tablet PC** meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

Beneworld International(HK) Co., Limited

www.beneworld.cn

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6

W/kg averaged over one gram of tissue. Device types: BW9 (**FCC ID:**

2AANC-BENEWORLD-BW9) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the **body is 0.86W/kg**. This device was tested for typical body-worn operations with the back of the handset kept **0 cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **0cm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **0 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Beneworld International(HK) Co., Limited

TEL: +852-69172443/ 30772819 FAX: +852-30772819

Shenzhen Beneworld Technology Co. Ltd.

Address: Building 3, Huangtian Industrial Park, Xixiang, Baoan District, Shenzhen, Guangdong, China

Postcode : 518128

TEL : +86-755-29434281 29435819 FAX: +86-755-29434283

Email: sales@beneworld.cn

Website: www.beneworld.cn
www.beneworld.cc