


WB-210

Bluetooth 2.1 CH Speaker

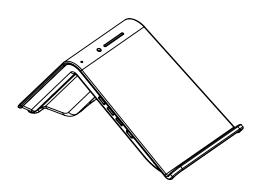

Power Lounge Bluetooth

USER MANUAL

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- a bathtub, washbowl, kitchen sink, aundry tub, swimming pool or in a wet

may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air

- heat registers, stoves or other appliances (including amplifiers) that produce heat.
- are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- liquids are not spilled into any openings or vents located on the product.

 8. Attachments Do not use attachments not recommended by the product manufacturer.
- and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to
- convenience receptacles as this can result in a risk of fire or electric shock.
- 11. Damage Requiring Service The unit should be serviced by qualified service personnel when:
- A. the power supply cable or plug has been damaged.
- B. objects have fallen into or liquid has been spilled into the enclosure.
- D. the unit has been dropped or the enclosure damaged.
- E. the unit exhibits a marked change in performance or does not operate normally. 12. Antenna - Do not connect an external antenna to the unit (other than that

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- · Never place this apparatus on other electrical equipment.

Notice for the USA and Canada

This device complies with Part 15 of the FCC Rules and RSS standard of Industry Canada. Operation is subject to the following two

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and ICES-003 of Industry Canada . These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Relocate the receiving antenna.
- · Increase the separation between equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Radiation Exposure Statement: This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

NOTE: This model is designed for use with Bluetooth wireless devices compatible with the HFP, HSP, A2DP and AVRCP streaming audio profiles. Refer to your Bluetooth device's user

anual or technical support to determine if your Bluetooth

This product bears the selective sorting symbol for waste electrical and electronic equipment(WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

Maintenance

- · Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

must support the A2DP Bluetooth profile in order to work wirelessly with your WB-210 speaker. The A2DP profile is supported by most recent mobile products with built-in Bluetooth capability. Please refer

· Clean your unit with a soft cloth moistened only with mild soap

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

to your device's user manual for details and instruction regarding the

Bluetooth profiles it supports.

WARNINGS & CAUTIONS

To reduce the risk of fire or electric shock, do not expose the WB-210

to rain or moisture. The WB-210 should not be exposed to dripping or

placed on or near it. Do not use near bathtubs, washbowls, kitchen

anywhere else that water is present. As with any electronic products

cause a failure and/or a fire hazard. The power supply must be used

indoors only. It is neither designed nor tested for charging outdoors, in

recreation vehicles or on hoats. Make no modifications to the product

warranty. Do not place any flame sources, such as lighted candles, on

or near the WB-210. The WB-210 contains small parts that may be a

Do not attempt to service the WB-210 yourself. Opening or removing

covers may expose you to dangerous voltages or other hazards and

shock, avoid overloading wall outlets, extension cords, or integral

will void the manufacturer's warranty. To prevent risk of fire or electric

convenience receptacles. Do not place your WB-210 on high surfaces

such as shelves. During music playback the WB-210 may vibrate and

Your Bluetooth device (mobile phone, music player, tablet, laptop, etc.)

move which could cause the speaker to shift and fall off of the edge.

or accessories. Unauthorized alterations may compromise safety,

regulatory compliance, and system performance, and will void the

choking hazard and is not suitable for children under age 3.

use care not to spill liquids into any part of the product. Liquids can

sinks, laundry tubs, in a wet basement, near a swimming pool, or

splashing, and objects filled with liquids, such as vases, should not be

The manufacturer is not responsible for any radio or ty interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment


3

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

- 1. Water and Moisture The unit should not be used near water. For example: near basement.
- 2. Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation.
 For example, it should not be situated on a bed, sofa, rug or similar surface that
- through the ventilation openings.
- 3. Heat The unit should be situated away from heat sources such as radiators,
- 4. Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. 5. Power-Cable Protection - Power supply cables should be routed so that they
- Cleaning The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
- 7. Objects and Liquid Entry Care should be taken so that objects do not fall and
- Lightning and Power Surge Protection Unplug the unit from the wall socket the product due to lightning and power-line surges.
- 10. Overloading Do not overload wall sockets, extension cords, or integral
- C. the unit has been exposed to rain.
- provided).

Controls and Indicators

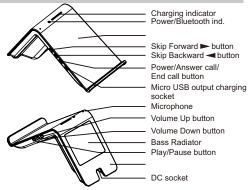

Getting Start

Connect AC adaptor cable to DC jack on rear bottom of WB-210 and plug the other end into a wall socket. The red Power indicator turns on.

Charging

1.Start Up

Connect AC adapter output DC12V to power plug, the Bluetooth LED indicateRed light on.

2. USB Power Output, There is a Type B Mini USB connector, Provide a DC Output /1.5A, 5V/, You can connect USB cable charging device direct thru this connector in order to provide an alternative power resource.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2

Listening to Bluetooth Music

In order to use this unit for music playback through Bluetooth, the unit must first be paired with the Bluetooth device. (Make sure the unit has well connected to the AC adaptor and the wall socket)

Pairing:

- 1. Push and hold the POWER button for 3 seconds. The Red and Blue BT indicator will flash alternately. (searching will stop when no device is found to be in range within two and a half minutes. the unit will go to Standby mode)
- 2. Following the instructions on your device's user manual, activate Bluetooth on your device and search for devices. Once you have found "Power Lounge", pair to the speaker. A pass code is not required.
- 3. Once connected, the Blue Bluetooth indicator will flash slowly. 4. Every time you power on this unit by press and hold the
- POWER button for 1 second, it will pair with the last linked device when that device is in range.

NOTE: If no device is found in range or no device is paired or connected for 5 minutes. The unit will go to sleep mode.

Warning: Changes or modifications made to this device not expressly approved by ONTOP TECHNOLOGY LTD may void the FCC authorization to operate this device.

Playing Bluetooth Music 1. Once your device and this unit are paired, you can start to play

- your device's music through this speaker using the Bluetooth
- 2. Press the ▶II Button on your device or this unit to play your
- 3. Press the ▶ | Button again to pause play; press again to
- 4. Press the **Skip Button** on your device or the \(\subset / \) button of this unit to Skip the track forward / Backward.
- 5. Press the Volume +/ Button on your device or this unit to adjust the volume level up or down.

Making calls with a Bluetooth Mobile Phone

Before the speaker phone feature of this unit can be used, you will need to pair and link your Bluetooth enabled phone with this unit. (Please refer to "Pairing")

Answer a call:

- 1. To answer a call, press the "Answer/ End call" Button, You can then use the unit ac a speaker phone.
- 2. Speak into the built-in microphone (located left hand side of the Bluetooth indicator) and press and hold the "Volume +/-" Button on this unit to adjust the call volume.
- 3. To end the call, press the "Answer/ End call" Button. Dial/ Re-dial Dialing:
- 1. Once this unit is paired to a Bluetooth mobile phone, you can use the keypad on your phone to dial a phone number.
- Press the "Answer/ End call" Button to cancel the call 2. To redial the last dialed number, press and hold the "Answer/End call" Button.
- 3. To end a call, press the "Answer/ End call" Button.

5