



ITEM #: NM-XA12230AA-S

**INCLUDES:**

1-Magic Wand (operated by 2AA batteries, not included),  
1-Receiver (125VAC/60Hz/8A/1000W).

**SPECIFICATIONS:**

Rated: 125VAC/60Hz/8A/1000W Resistive  
Frequency: 433.92 MHz  
Range: Up to 20 meters  
Battery: 2 AA (not included)

**FEATURES:**

Remote Control with Light and Sound  
Light up Indoor Decoration  
Light up Outdoor Decoration  
Experience the Magic of Christmas  
Remote Control - works through walls,  
doors and windows

**INSTRUCTIONS:** IMPORTANT: RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

1. Carefully remove the product and accessories from package. Keep packaging for safe storage.
2. The Magic Wand uses 2AA alkaline batteries (not included).  
Install batteries as indicated by the (+/-) polarity signs. (See illustration A).
3. Insert the Receiver plug into a standard 125 Volt AC grounded electrical outlet. If using outdoors, be sure to plug into a GFCI approved outlet.
4. Plug the electrical device you would like to control into the Receiver outlet. (See illustration B).  
Make sure your device does not exceed the voltage and frequency ratings (Specifications listed above).

**NOTICE:** To avoid interference in the case of multiple purchases of this item, there are 4 different channels (A,B,C,D) for the device. For example, the Magic Wand "A" can only control Receiver "A".

**ON:** To turn your Receiver ON and activate your device, press the "ON" button on the Wand.

The yellow LED light in the Star will light up together with a sound. The Red LED power indicator on your Receiver should illuminate to indicate that the power is ON.

**OFF:** To turn your Receiver OFF and inactivate your device, press the "OFF" button on the Wand.


The yellow LED light in the Star will light up together with a sound. The Red LED power indicator on your Receiver should turn off to indicate that the power is OFF.

**BATTERY INFORMATION AND REPLACEMENT:**


For replacement, uncover the battery box on the back of the Wand with a Phillips screwdriver and insert new batteries.

**CAUTION:**

1. Only use the batteries specified and be sure to match the (+/-) polarity signs.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Do not mix old and new batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be used for a long time.
6. Do not dispose of batteries in fire. Batteries may explode or leak. As with all small items, these batteries should be kept away from children. If swallowed, seek for medical attention immediately.

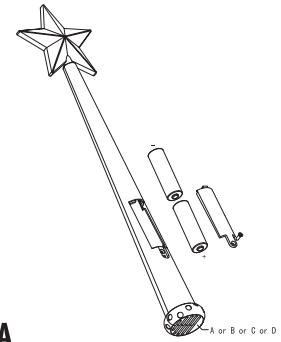

**A**

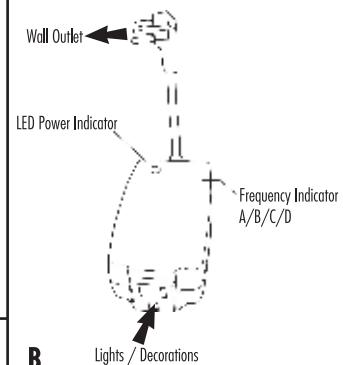

**B**

**FCC Notice:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interferences to radio communication.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interferences to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1). Reorient or relocate the receiving antenna.
- 2). Increase the separation between the equipment and receiver.
- 3). Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- 4). Consult an experienced radio/ TV technician for help

**WARNING:**

- Changes or modifications to this unit could void the user authority to operate the equipment.
- This is an electrical product, not a toy! To avoid risk of fire, burns, personal injury, and electric shock, close supervision is necessary when the product is used by or near children.
- The Receiver is suitable for indoor or damp locations. Not for water immersion or for use where directly exposed to water! Install the cord and unit above ground level at least 1.4m with the receptacle facing downward!
- Do not install your product in an area that will exceed 120°F (49°C).
- Do not allow any liquid to enter your Magic Wand or Receiver. To clean, wipe gently with a soft, dry cloth.
- Only plug into a properly grounded outlet that meets all local and national electric codes.
- Do not exceed the rated voltage and frequency specifications.
- Do not attempt to disassemble or repair.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended for an extended period.
- Do not use this product for other than its intended purpose.
- Read and follow all instructions that are on the product or provided with the product.

MADE IN CHINA