



QUICK START GUIDE

 
WIRELESS FOLDING KEYBOARD

CHARGING THE KEYBOARD

 Charge the keyboard before using it for the first time.

 Plug in the cable to the micro USB port and charge for at least 2 hours.

Connect the charging cable to charging port.

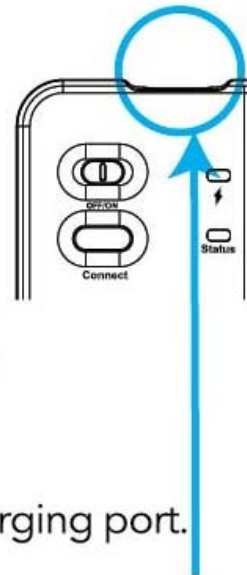

WIRELESS FOLDING KEYBOARD

PAIRING YOUR KEYBOARD

 
Your keyboard will work best if they are within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

PAIRING YOUR KEYBOARD (continued)

Make sure the keyboard is turned on before attempting to pair it with a smart phone or tablet.

WIRELESS FOLDING KEYBOARD

1

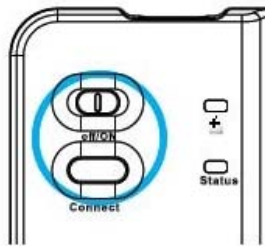

a). Push the switch to "ON" and the keyboard is turned on.
b). Press and hold the "Connect" button for 2-3 seconds to turn on the keyboard. You will see the light flash blue. This indicates that your keyboard is ready to pair.

2



From your smart phone or tablet, find a list of nearby devices and choose "BMI-FKB". no need password. The keyboard will turn off the blue light when pairing is complete!

WIRELESS FOLDING KEYBOARD

CONNECTION LOST?


- If pairing the keyboard does not work, turn off the keyboard and repeat the steps again in "Pairing your keyboard."
- Make sure your keyboard is within range of your smart device.
- When the lamp is flashing, you need to recharge your keyboard. Connection may be lost due to low battery.
- When charging your keyboard, only use the enclosed USB cable.

SPECIFICATIONS

Bluetooth Version:	4.2
Wireless Distance:	Up to 33ft (10m)
Working Time:	Up to 140 Hours
Standby Time:	Up to 6 Months
Battery Capacity:	90 mAh
Charging Time:	About 2 Hours
FCC ID:	2AANZFKB

WIRELESS FOLDING KEYBOARD

 
MEDIA KEY FUNCTIONS

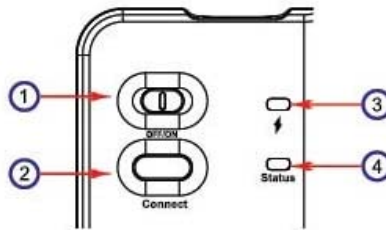

NO	Keys	Function	Apple(MAC OS, ios)/Windows/Android
1		Power Button	Use to turn keyboard on and off.
2		Battery Indicator Light	Indicates battery life. When flashing, please recharge your keyboard. When fully charged, the light will turn off.
3		Connect Button	Pairing button. See "PAIRING YOUR KEYBOARD" for instructions.
4		Status Indicator Light	Indicates keyboard status • Turns on for 2 seconds once keyboard is turned on. • Blinks during pairing mode. • Turns off when pairing is successful.

WIRELESS FOLDING KEYBOARD

 SHORTCUTS QUICK LIST

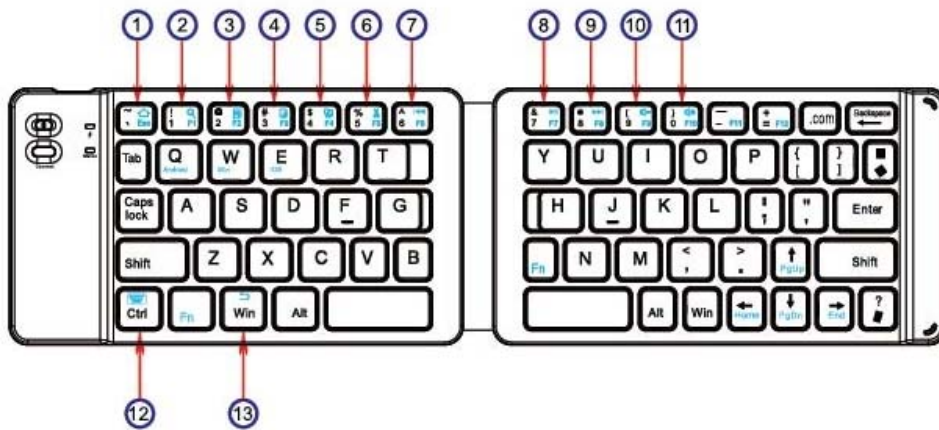

WIRELESS FOLDING KEYBOARD

NO	Function keys	Apple(MAC OS, ios)	Windows	Android
1	 Esc	Return to home page	Return to current page	Return to home page
2		Search	Search	Search
3		Select all	Select all	Select all
4		Copy	Copy	Copy
5		Paste	Paste	Paste
6		Clipping	Clipping	Clipping
7		Previous track	Previous track	Previous track
8		Play / Pause	Play / Pause	Play / Pause
9		Next track	Next track	Next track
10		Decrease volume	Decrease volume	Decrease volume
11		Increase volume	Increase volume	Increase volume
12		Open soft keyboard	Not applicable	Not applicable
13		Not applicable	Not applicable	Return to current page

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.