

SA-PWBP-WHT

SIZE: 5.9" W X 10.375" H

SANDWICH BLISTER

600G (0.90~0.96MM) WHITE CARD (FRONT SIDE) + 600G (0.90~0.96MM)

WHITE CARD (BACK SIDE) + 25SI PVC BLISTER THICKNESS (IN THE MIDDLE)

SOFT TOUCH FINISH, CMYK PRINTING + PANTONE COLOR PRINT TO MATCH SKU

SPOT UV, SILVER FOIL, F8834M, CHENGHUI BOOK, PAGE 16

10MM IN INTERIOR DIAMETER /17MM IN EXTERNAL DIAMETER WHITE(BOTH FRONT

AND BACK) ROUND GROMMET – MUST MEET SIZE

INKS

C M Y K

PANTONE 677 C (SOLID COATED)

SILVER FOIL

DO NOT PRINT

CUT LINE

HOLLOWED

FOLD LINE

SPOT UV

GLUE

GROMMET

SILVER FOIL: F8834M

WHITE, 10MM INTERIOR DIAMETER

CHENGHUI BOOK, PAGE 16



IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c) Do not put fingers or hands into the product.
- d) Do not expose power bank to rain or snow.
- e) Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.
- f) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- g) Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

- h) Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- i) Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the temperature of 212°F.
- j) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- k) Switch off the power bank when not in use. **SAVE THESE INSTRUCTIONS.**
- l) Storage: Please store the power bank in a cool and dry place. When not in use for a long time, the power bank shall be regularly characterized to maintain the service life of the power bank.
Do not expose to high temperature, humidity or fire. Do not store in direct sunlight or in the vehicle.
Keep out of reach of children. Children should use under adult supervision.
- m) Discard: Please properly dispose of the waste power bank. Do not discard, disassemble, crush, or throw it into fire or water.
- n) Charging: please use the correct charging device and method according to the instructions provided by the manufacturer.
Do not overcharge. After charging, disconnect the power supply.
- o) CAUTION : Risk of Fire and Burns. Do Not Open, Crush, Heat Above (manufacturer's specified maximum temperature) or Incinerate. Follow Manufacturer's Instructions.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an identical installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The FCC certification of this device refers to RF exposure testing performed in typical operating conditions, where a person is closer than 0 cm from the device surface at all times, except for non-repetitive patterns with transient time intervals in the order of a second. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.