

**Portable CD Player with
PLL AM/FM Radio and Bluetooth**

Model : CD-3610

SAFETY INSTRUCTION

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- THIS APPLIANCE SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING WATER AND THAT NO OBJECT FILLED WITH LIQUIDS SUCH AS VASES SHALL BE PLACED ON APPARATUS.

	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back) no user-serviceable parts inside. Refer servicing to qualified service personnel.</p>	
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

Remark: Please read and follow these instructions, before using your unit.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

16. Alternate Warnings – This product is equipped with a three-wire ground-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

17. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

18. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

19.  CLASS II apparatus with double insulation, and no protective earth provided.

20. Caution Marking and rating plate was located at bottom enclosure of the apparatus.

21. **WARNING :** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

22. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

23. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.

24. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

25. Excessive sound pressure from earphones and headphone can cause hearing loss.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:


Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CARE AND MAINTENANCE

Precautions

- Always turn off the unit after use.
- Keep the unit away from magnetic objects, water or heat sources.
- Use a clean soft cloth moistened with lukewarm water to clean the cabinet. Never use chemical cleaners that could damage the finish of the unit.
- Never touch the CD pickup and lens. If fingerprints get on the pickup lens, clean it gently with a commercial lens cleaner.
- Disconnect the unit from any power sources before cleaning.
- To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.
- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.
- Never use chemicals such as record sprays, anti-static sprays, benzene or thinners to clean compact discs. These chemicals can irreparably damage the disc's surface.
- Discs should be returned to their cases after use. This avoids serious scratches that could cause the Laser pickup to skip.
- Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Long exposure to high temperatures can warp the disc.
- Do not stick paper or write anything with a ballpoint pen on the label side of the disc.

LOCATION OF CONTROLS

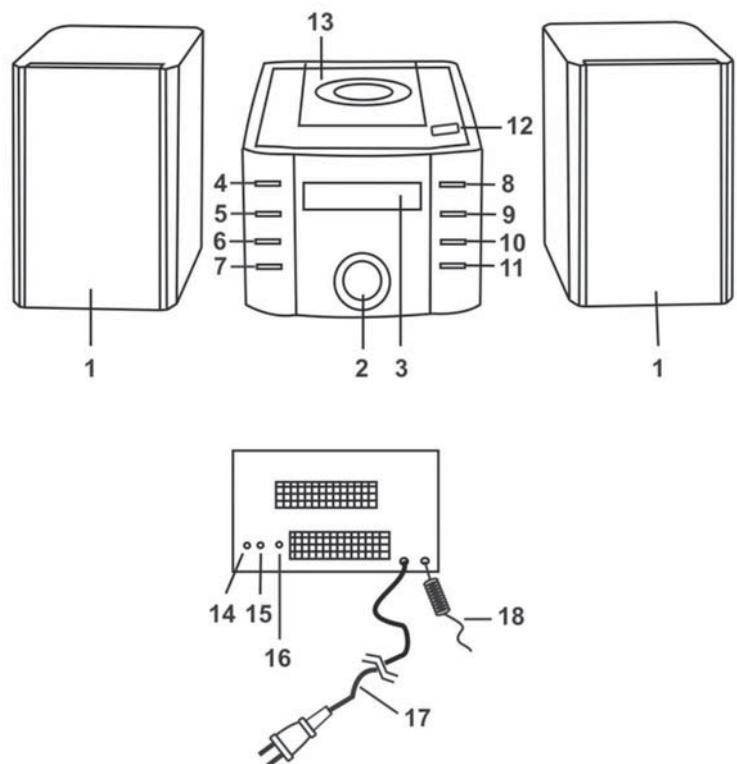

1 Speaker	11 SKIP-/TU- button
2 VOLUME knob	12 CD door OPEN button
3 LCD display	13 CD compartment
4 ON/OFF button	14 Speaker jack R
5 SOURCE button	15 Speaker jack L
6 MODE button	16 Phones jack
7 PROG/MEM button	17 AC power cord
8 PLAY/PAUSE button	18 FM wire antenna
9 STOP/M+ button	
10 SKIP+/TU+ button	

CONNECTING THE LOUDSPEAKERS

Connect the cables of the two loudspeakers to the corresponding input (R) for the right speaker and input (L) for the left speaker, located at the back of the unit.

Warning:

- Connect the loudspeakers before powering the unit;
- The unit may not work properly or get damaged if you use speakers different than the ones supplied with the unit.

AC OPERATION

Connect the power cable plug to the wall outlet.

ATTENTION

1. Do not plug or unplug the power cable while you have wet hands;
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet;
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

RADIO OPERATION

1. Press SOURCE button to select AM or FM radio mode.
2. Press the SKIP+/TU+ button or SKIP-/TU- button step by step to tune to the desired radio stations.
3. Press and hold the SKIP+/TU+ button or SKIP-/TU- button to search the next radio station in the direction of the search. The search operation simply finds stations with strong signals, Stations with weak signal can only tuned in step by step
4. If FM stereo broadcast received, **ST** will display on the LCD display.
5. Use the VOLUME knob to adjust the volume to the desired listening level.

TO STORE THE RADIO STATIONS IN THE MEMORY

1. Press the SKIP+/TU+ button or SKIP-/TU- button to search the desire radio station.
2. Press the PROG//MEM button, the display will show "PXX" and **PROG** will flash in the display.
3. Press the SKIP+/TU+ button or SKIP-/TU- button to select the desired memory radio station number and press the PROG/MEM button to store the station in the memory.
4. The radio station will store in the memory after 5 seconds.
5. Up to 20 AM and 20 FM radio stations can stored in the memory.

TO SELECT A STORED RADIO STATION IN THE MEMORY

Press the STOP/M+ button to skip to the next stored radio station.

CD OPERATION

1. Press the SOURCE button to select CD mode.
2. Insert an audio CD disc in the CD compartment and close the CD door, the unit will start reading the disc, it will show the total number of tracks of the entire disc after reading and start playing the first track of the entire disc.
3. During playing, press the PLAY/PAUSE button to temporarily pause playing. To resume, press the PLAY/PAUSE button again.
4. To stop playing the disc, simply press the STOP/M+ button

Skip Mode

1. In PLAY or PAUSE mode, press the SKIP+/TU+ button to go to the next track.
2. In PLAY or PAUSE mode, press the SKIP-/TU- button to go back to the previous track.
3. In PLAY mode, press the SKIP  button to go back to the beginning of the track.
4. In PLAY mode, press the SKIP  button twice to go back to the previous track.

Different Play Mode

In CD mode, press the MODE button to select different kinds of play mode with the following sequence.

Repeat 1 ➔ Repeat ALL ➔ Normal

- Repeat – repeat the track being played.
- Repeat ALL – repeat all the tracks in the entire disc.
- Normal – play the tracks in sequence.

Programming

The programming can only be done in STOP mode

1. Press the PROG/MEM button, the LCD display will show P01 and flash.
2. Use the SKIP+/TU+ button or SKIP-/TU- button to select the desired track.
3. Press the PROG/MEM button again to store the selected track in the memory, the LCD display will show P02.
4. Repeat steps 2 to 3 to store more tracks in the memory. You can store up to 20 tracks in the memory.
5. Press the PLAY/PAUSE button to start playing the disc in the programmed order.
6. To stop playing, press the STOP button.
7. To cancel the programming list, press the STOP button again.

PHONES JACK

For private listening, insert the plug of a stereo headphone into the Stereo Headphone Jack and adjust the VOLUME Knob accordingly. During the use of a headphone, the speakers are automatically disconnected.

BLUETOOTH OPERATION

Connecting BLUETOOTH

1. Press the SOUCRE button to select BLUETOOTH mode, ' bt ' will show in the LCD display.
2. Turn on the Bluetooth of your device and search the unit for connection. Your Bluetooth device should find "xxxxx". If password is needed for connection, please enter "0000".
3. If connection is successful, your Bluetooth device may show Bluetooth is connected.
4. Select and play the audio file through your Bluetooth device.
5. You can use the SKIP+/TU+ button to go to the next track or press the SKIP-/TU- button to go back to the previous track.
6. Press the PLAY/PAUSE button to temporarily pause playing. To resume, press the PLAY/PAUSE button again.

Turn Off the Bluetooth Operation

To turn off the BLUETOOTH operation, press SOURCE button to select other mode.

Turn Off the Unit

Press and hold the ON/OFF button for about 1 second, the unit will turn off

SPECIFICATIONS

Power supply: AC 120V ~ 60Hz

Frequency range: FM 87.5 – 108 MHz
AM 520 – 1710 KHz

Specifications are subject to change without further notice.