

BRAND

Wooden Table with Qi Wireless charging, USB charging, and Bluetooth

Model : WS-200Qi



INSTRUCTION MANUAL

Note: Please read and follow these instructions before using your unit.

1. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Alternate Warnings – This product is equipped with a three-wire ground-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
14. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
15. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
16. CLASS II apparatus with double insulation, and no protective earth provided.
17. Caution Marking and rating plate was located at bottom enclosure of the apparatus.
18. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
20. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.
21. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
22. Excessive sound pressure from earphones and headphone can cause hearing loss.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the


user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

Caution: To maintain compliance with the FCC's RF exposure guidelines, place the unit at least 20cm from nearby persons."

LOCATION OF CONTROLS

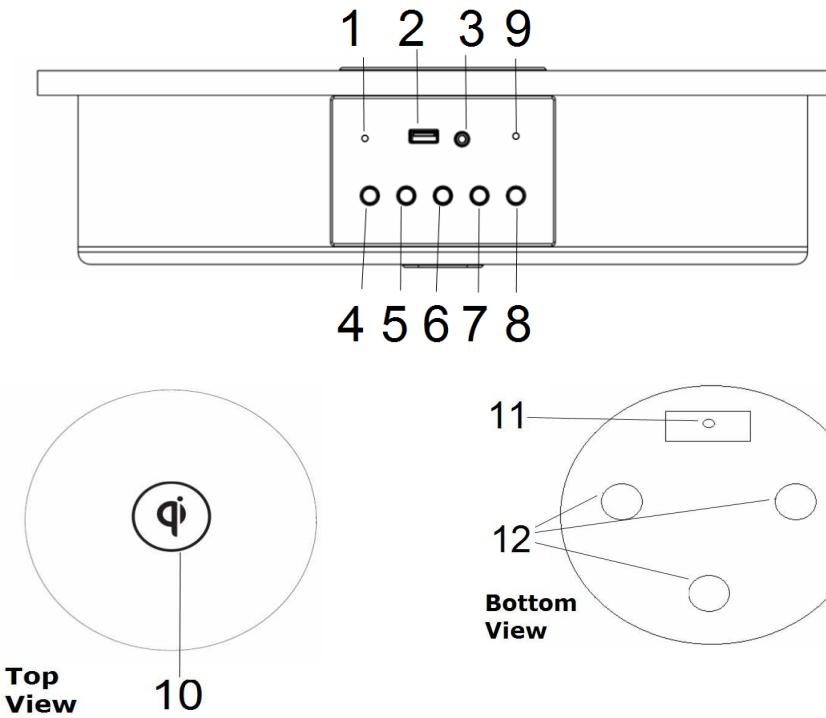

1	MODE Indicator	7	▶/II Button
2	USB charging port (1A)	8	Bluetooth Unpair Button
3	Aux-in Jack	9	Qi Wireless charging indicator
4	Mode / Standby button	10	Wireless charging Pad
5	Volume -/◀ Button	11	DC Jack
6	Volume +/▶ Button	12	Table Leg connection

Note :The rating label has marked on the bottom panel of the apparatus..

Specifications

Power Supply: AC 100V-240 ~ 60/50 Hz

AC/DC adapter: DC9V ~ 3.5A

USB Rated Output: DC5V 1A

Specifications are subject to change without further notice.

SETTING UP THE TABLE

Connect the 3 identical legs to the bottom of the table.

CONNECTING THE UNIT TO POWER


Plug one end of the AC adaptor into the DC power Input, and then plug the other end into AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

WIRELESS CHARGING

When the unit is on, place a supported mobile device on the wireless charging pad.

The wireless charging indicator will be on as below:

1. While charging, the Qi indicator will be **RED**. (Android Phones and Apple Phones)
2. Fully charged: the Qi indicator will be **WHITE** for some specific Android phones. For Other smart phones, the Qi indicator will stay RED.
3. Improper charging error**: the Qi indicator will keep **FLASHING**. (Android Phones and Apple

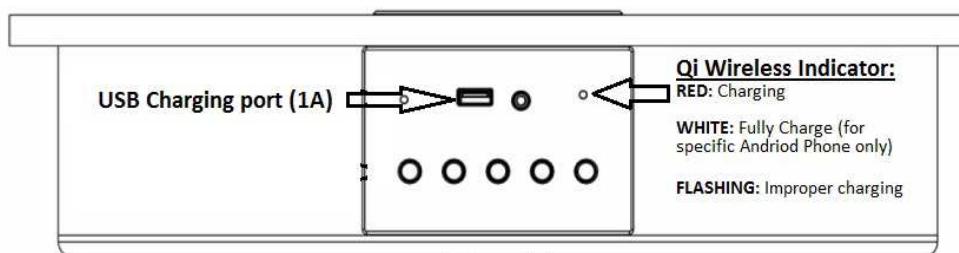

Phones)

You can also check the charging icon displayed on the mobile device's screen for the charging status.


The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.

****Note :**

- If the mobile device is not placed properly on the wireless charging pad, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- When the mobile device is fully charged, remove it from the wireless charger.
- Do not place foreign materials, such as metal objects, magnets and magnetic stripe card between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.
- Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing on the wireless charger.
- Wireless charging uses magnetic field. Do not place too close with magnetic stripe or chip card (ID card, bank card etc.) to avoid magnetic failure


USB CHARGING

Connect the USB cable to your device and the unit's USB port. The unit will charge your device, such as smartphones or tablets. The unit contains one USB port with 1A charging.

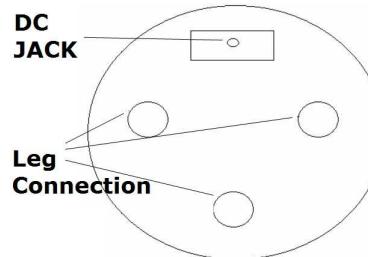

-3-

BLUETOOTH STREAMING

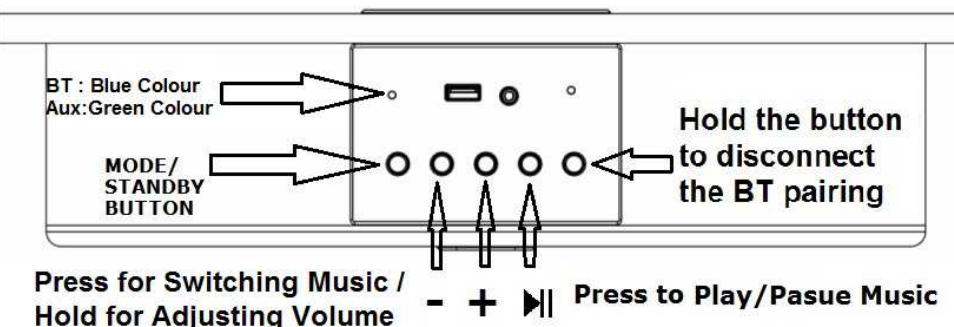

1. Press and hold the **Mode / Standby button** to turn the unit on. Press **Mode / Standby button** to select the **BLUETOOTH** mode. The mode indicator will light up and the **BLUE LED** (Bluetooth mode) will flash.
2. Turn on your Bluetooth of your Bluetooth device and search the speaker for connection. Your Bluetooth device should find "**HX-201Qi HANNLOMAX**".
3. If connection is successful, the **BLUE LED** will stop flashing and remains light up.
4. Select and play the audio files through your Bluetooth device.
5. To play/pause playing, press **▶|| button**.
6. To adjust the volume, press and hold **VOLUME -** and **VOLUME + button**.
7. To stop the streaming, press and hold the **Mode / Standby button**.

SKIP MODE

1. During play or pause mode, press the **▶|| Button** to go to the next track.
2. During play or pause mode, press the **◀|| Button** to go back to the beginning of the track and press twice to go back to the previous track.

BLUETOOTH AUTO PAIRING

Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

BLUETOOTH UNPAIRING

Press and hold **Bluetooth Unpair Button** to disconnect the Bluetooth pairing.

AUX IN CONNECTION

1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your audio device and the other side to the aux-in jack on the unit.
2. Press and hold the **Mode / Standby button** to turn the unit on. Press **Mode / Standby button** to select the Bluetooth mode. The mode indicator will light up and the **GREEN LED** (Aux-in mode) will flash.
3. Turn on your audio device and follow the playback instruction.
4. To stop this function, remove the audio cable from the unit and press and hold the **Mode / Standby button**.

