

STEREO BLUETOOTH AVANTI TOYS

USER GUIDE

Safety and General Information

Please read the following information before using this product

Users are not permitted to make changes or modify the product and the accessories in any way.

1. DO NOT use the product while operating a motor vehicle.
2. To avoid electronic interference and/or compatible conflicts, TURN OFF the product in any facilities where posted notices instruct you to do so. For example: Aircraft, Military Base, Hospital or Health Care Facilities.
3. To avoid impairing your hearing in the long-term operation, keep the volume in the moderate level.
4. Keep away of fire, water, and high voltage equipments
5. Follow the charging procedure described in this guide to charge the product.

Product Overview

With Bluetooth wireless technology, AVANTI TOYS gives you the convenient wireless way to enjoy the streaming stereo music transmitted from the Bluetooth A2DP^{*1}-Source device such as a mp3 player, PC or PDA in the available range.

Moreover, you can use AVANTI TOYS to remote control the music playing functions of your Bluetooth device if it supports Bluetooth AVRCP^{*2} in addition.

Switching between music and phone calls, AVANTI TOYS also allows you answer or make calls with the Bluetooth-enabled mobile phone^{*3} while you are listening to music. After you ended the call, the music will follow to be streamed in few seconds^{*4}. Besides the wireless stereo and mobile hands-free applications, you can apply the AVANTI TOYS to the Bluetooth-enabled PC^{*5} with the Internet messenger.

Notes:

*1 The playback or its plug-in Bluetooth adapter/transmitter needs to support Bluetooth A2DP (Advanced Audio Distribution Profile).


*2 The playback or its plug-in Bluetooth adapter/transmitter needs to support Bluetooth AVRCP (Audio Video Remote Control Profile).

*3 The mobile phone needs to support Bluetooth HSP (AVANTI TOYS Profile) or HFP (Hands-free Profile) and support Bluetooth A2DP (Advanced Audio Distribution Profile).

*4 Some mobile phones do not release the connection switch function to the AVANTI TOYS, which will cause the AVANTI TOYS to fail to switch the Bluetooth connection between music and call.

*5 The computer or its plug-in Bluetooth adapter needs to support Bluetooth HSP (AVANTI TOYS Profile).

Structure and key definition

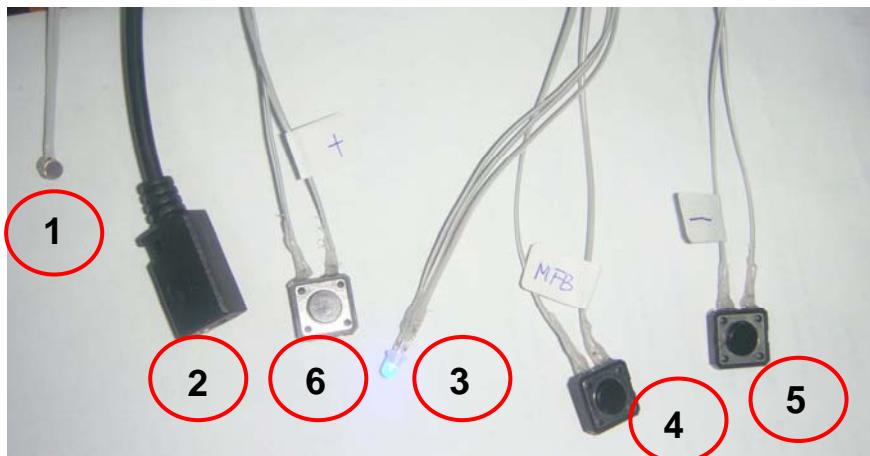

- ① Microphone
- ② Mini USB Charging Port
- ③ Red and Blue dual color LED light
- ④ MFB Button
- ⑤ Volume -
- ⑥ Volume +

The picture is for reference only. Please check the product for details.

How to use AVANTI TOYS

Turn on the Bluetooth toy:

When the Bluetooth toy is off, press and hold the MFB(multifunction) button for 3 seconds until the blue LED turns on for 3 seconds.

Turn off the Bluetooth toy:

When the Bluetooth toy is on, press and hold the MFB button for 3 seconds until the red LED turns on for 3 seconds.

Paring:

Pairing is the process of establishing encrypted link between AVANTI TOYS and Bluetooth devices.

Step-1 In the off state, press and hold MFB Button for about 7 second until the red and blue LED flash alternatively.

Step-2 Follow the operating instruction of your Bluetooth mobile phone to start the pairing process. Typically, this is done by going to a "Connect" or "Setup" menu and then selecting the option to search the that is still in the pairing mode

Step-3 The mobile will find AVANTI TOYS and ask whether you are willing to connect your mobile with the AVANTI TOYS. Press "Yes" or "Confirm" to confirm this action.

Step-4 The mobile phone's display should then prompt you for a passkey or PIN. Enter 0000 (a sequence of four zeros) and the display should prompt the pairing result.

If the connection is successful, the blue LED of the AVANTI TOYS will flash 3 times. Then blue LED will flash one time every 7 seconds. If the pairing is unsuccessful, please turn off the AVANTI TOYS and turn it on again. Then, return to Step-1 and do the pairing procedure again.

Make a Call

Step-1 Use the mobile phone's keypad to dial the phone number.

Step- 2 Press mobile phone's "Send" or "OK" key. The mobile phone initiates the call and transfer the call from the mobile phone to the AVANTI TOYS.

Normally speaking, if there is no disturbance between AVANTI TOYS and mobile, the voice quality is better.

Voice dialing (dialing a number by saying a name)

It is possible to make a call directly from the AVANTI TOYS using voice recognition. To use this voice dialing function, your mobile phone must provide this option and corresponding voice samples must have been recorded.

Step-1 Enable voice recognition function of your mobile and set the mobile to handsfree state.

Step-2 Double press the multifunction button of the AVANTI TOYS, you will hear a beep prompt.

Step-3 Follow the voice instruction from your mobile phone and Say the loudly.

Answer a Call

Step-1 If there is an incoming call while you are listening to the streaming music, you will hear beep prompt from AVANTI TOYS.

Step-2 Just press MFB button one time.

End a Call

Use either of the following methods to end a call.

Method-1 Press multifunction key one time to end a call from the AVANTI TOYS.

Method-2 End a call from the mobile phone's keypad.

If you are listening to music when there is incoming call or you are making a call, the AVANTI TOYS will switch the connection from the music player (A2DP) to the mobile phone (HSP or HFP); the streaming music will be paused temporarily. After you end the call, the music will be played and streamed to the AVANTI TOYS again.

Notes: When you press multifunction key to answer or end a call, please just press one time. Do not press and hold.

Refuse a Call

When there is incoming call, press and hold MFB button for about 2 second until you hear prompt from the AVANTI TOYS. Release the button and the call is refused.

Redial the last dialed number

Press and hold multifunction key for 2 second to redial the last dialed number.

Adjust volume

In call mode or music mode, press volume +/- key to adjust volume.

One short press will adjust one level. When the volume reaches max or min, when you press, the AVANTI TOYS will prompt “du-du”.

Play/Pause music

In idle state, press multifunction button one time to play or pause music.

Trouble shooting:

If disconnection occurs, please check the following factors:

- 1) Ensure that the AVANTI TOYS has enough power, is turned on and has been successfully paired to the mobile.
- 2) The Bluetooth function of the mobile is enabled.
- 3) Check whether the range between the AVANTI TOYS and mobile is over 10 meters (about 30 feet.) Or there is wall or other

disturbance or other electrical devices between AVANTI TOYS and mobile.

Battery and Charging Notice

We use rechargeable battery for BSH10. A normal charging process takes about 2-3 hours. The red LED will turn on when charging and will turn off when charging finished.

When the battery is nearly used up, the red LED will flash every 30 second and there is also prompt from the AVANTI TOYS. Please charge the AVANTI TOYS at this time.

Please make sure the battery has been fully charged and fully released at the beginning three times of use to ensure the battery the best performance.

Always use correct AC Power Adapter to charge the AVANTI TOYS. Using any incorrect power supply device will cause damage and void the warranty.

After finished charging, please pull out the cable from the AVANTI TOYS and plug the adaptor from the electricity outlet. Do not put the AVANTI TOYS in charging state for a long time. This will shorten the lifetime of the battery.

Do not use the AVANTI TOYS in too hot or too cold environment. It is recommended to keep the environment temperature between 15

and 25°C

Dot not install, place or use the AVANTI TOYS near any source of heat such as a stove, radiator, oven, toaster, coffee maker or other apparatus (including microwave oven) that gives off heat

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference

will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

A distance of 20cm shall be maintained between the antenna and users, and the transmitter may not be co-located with any other transmitter or antenna.