

70mm


105mm

**PROSCAN**  
**PORTABLE TWS LED LIGHT-UP**  
**BLUETOOTH SPEAKER**  
**PSP1091**



PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD.  
[www.proscan-brand.com](http://www.proscan-brand.com).

For service assistance and product information, pls call  
 1-800-968-9853.  
 Curtis International Ltd.  
 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA,  
 ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

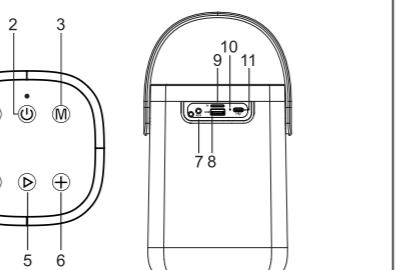

- Light button: Short press the light effect mode switch (8modes), long press to turn off the light;
- Key on: Long press for 2 seconds to turn on the device, double-click to disconnect Bluetooth
- Function switching key: Short press to switch functions (Bluetooth/FM/USB /TF card / AUX)double-click to enter TWS box matching function & double-click Cancel TWS box matching function;
- “+” button: long press to decrease the volume, Short press the previous Song.
- Play pause button: Short press play/pause;Double click it will search for channels in the radio state.
- “+” button: long press to increase volume, Short press to add a song;
- AUX:Used for audio input.
- USB: Used for USB flash drive playback
- TF card: used for TF card playback
- Charging indicator light: The charging red light is on, and the fully charged light is off
- TYPE-C charging port: suitable for 5V1A charging

### Operation Guide

Key function operation			
Number	Function	Instruction	Prompt tone
	Power on	Press "power" button for 3 second to power on the speaker, and automatically recognize the play back mode	Yes
	Power off	Press "power" button for 3 second to power off the speaker in the power on state	Yes
	Mode switching	Short press "power" button to switch playback modes	Yes
	Wireless disconnect wireless link back	In the wireless connection state, double-click the "power" button to disconnect the wireless. After disabling the wireless, double-click the "power" key to reconnect. The wireless/Bluetooth pairing name is "Pro PSP1091".	Yes
	Volume down	Press and hold "v-/prev" button to decrease volume	No
	Previous track	Short press "v-/prev" button for the previous track	No
	Pause	IN the wireless/Micro TF/AUX playback mode short press the "PLAY/PAUSE" button to pause playback	No
	Answer	For an incoming call,short press the "PLAY/PAUSE" button to answer the call	No
	Reject	Press and hold the "PLAY/PAUSE" button for 15 to reject the call	No
	Redial	Under wireless connection with your phone,double press the "PLAY/PAUSE" button to redial the last dialed number	No

	Volume up	Press and hold "v+/prev" button to increase volume	Yes
	Next track	Short press "v+/prev" button for the next track	No
	Light mode	Short press the light button to switch the light mode	No
	Turn off the lights	Long press the light button to turn off the lights	No

#### TWS pairing:

- It needs two same units and both are under Bluetooth mode.
- Don't connect to any Bluetooth devices.
- Double click M button from either of both units.
- Both units will pair together.
- After that turn on the Bluetooth devices and select Pro PSP1091 to pair it.
- You can play the songs from the Bluetooth devices now.
- Double click M button again then TWS function will be disconnected.

#### Matters needing attention

- Please store and use this product in a room temperature environment
- Do not expose this product to rain or damp environments
- Do not throw to avoid product damage caused by falling
- Do not disassemble, repair, or modify this product by yourself
- The product is equipped with a built-in lithium battery. Please do not dispose of it or place it in a fire to avoid danger

#### Common problem-solving methods

phénomène de problème	Solution
Multiple unsuccessful connection pairing	1. Check if the speaker is in search mode or restart it 2. There are too many Bluetooth devices around, making it difficult to search. Turn off other Bluetooth devices.
Low or distorted sound	1. Check the volume of the Bluetooth device and adjust it to the appropriate position. 2. If the battery voltage is low, please charge it.
Music breaks	Is it beyond the effective connection distance of the audio system, or is there an obstacle between the speaker and the Bluetooth device.
Bluetooth status indicator light does not light up	Is it beyond the effective connection distance of the audio system, or is there an obstacle between the speaker and the Bluetooth device.

#### Power operation method

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increases the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original delivery to the consumer. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

The speaker contain built-in batteries and should not be disposed of with regular household waster. Pls consult the local authorities on the correct way to dispose of the device.

70mm


105mm

**PROSCAN**  
**PORTABLE TWS LED LIGHT-UP**  
**BLUETOOTH SPEAKER**  
**PSP1091**



PROSCAN et le logo PROSCAN sont des marques de commerce utilisées sous licence par CURTIS INTERNATIONAL LTD. – [www.proscan-brand.com](http://www.proscan-brand.com).

Pour obtenir de l'aide sur le service et des informations sur les produits, veuillez appeler  
 1 - 800 - 968 - 9853.  
 Curtis International Ltd.  
 7045 beckett Avenue, Unité 15, Mississippi,  
 Sur le 15s 2A3  
[www.curtsint.com](http://www.curtsint.com)

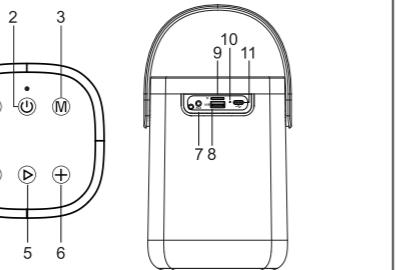

- Bouton de lumière: appuyez brièvement sur le commutateur de l'effet de lumière (8 modes), appuyez longuement pour éteindre la lumière;
- Mise en marche: appuyez longuement sur 2 secondes pour démarer. Double - cliquez pour déconnecter Bluetooth
- Touche de commutation de fonction: appuyez brièvement sur la fonction de commutation (Bluetooth / FM / USB / TF card / aux) Double - cliquez pour entrer Fonction de correspondance TWS box & Double - cliquez sur Annuler TWS box Fonction de correspondance;
- Bouton “+”: appuyez longuement pour réduire le volume, Appuyez brièvement sur la chanson précédente.
- Play pause bouton: appuyez brièvement sur play / pause; Double - cliquez il recherchera les canaux à l'état radio.
- Bouton “+”: appuyez longuement pour augmenter le volume, appuyez brièvement sur play / pause“+” Répond
- Aux: pour l'entrée audio.
- USB: pour la lecture de lecteur flash USB
- carte TF: pour jouer la carte TF
- indicateur de charge: le voyant rouge de charge est allumé, Et la lumière complètement chargée s'éteint Port de charge 11.type-c: approprié pour la charge 5v1a

### Guide de fonctionnement

Fonctionnement de la fonction clé			
Numérique	Rôle	Instructions	Provoyer Le ton
	Démarrer la machine	Appuyez sur le bouton "power" pendant 3 secondes	C'est exact
	Éteignez la puissance	Appuyez sur le bouton "power" pendant 3 secondes	C'est exact
	Mode Commute	Appuyez brièvement sur le bouton "power" Changer le mode de jeu	C'est exact
	Sans fil Déconnecter Sans fil Lien retour	In the wireless connection state, double-click the "power" button to disconnect the wireless. After disabling the wireless, double-click the "POWER" key to reconnect. The wireless/Bluetooth pairing name is "Pro PSP1091"	C'est exact
	Volume Vers le bas	Press and hold "v-/prev"button to decrease volume	Non
	Précédent La piste	Appuyez brièvement sur le bouton "V - / Prev" Piste précédente	Non
	Suspension	IN the wireless/Micro TF/AUX playback mode short press the "PLAY/PAUSE" button to pause playback	Non
	Réponse	Pour les appels entrants, appuyez brièvement sur le bouton "play / pause" Répond	Non
	Refusé	Appuyez et maintenez "play / pause" 1S bouton pour refuser un appel	Non
	Recomposer	Avec votre connexion sans fil Téléphone, double - cliquez sur "play / pause" Bouton pour recomposer le dernier numéro composé	Non

	Volume up	Maintenez le bouton "v + / Prev" enfoncé Rendre le volume plus petit	C'est exact
	Next track	Appuyez brièvement sur le bouton "V + / Prev" Piste suivante	Non
	Lumières Mode	Appuyez brièvement sur le bouton de la lampe pour basculer Mode lumière	Non
	Éteigne Lumière	Appuyez longuement sur le bouton de la lampe pour fermer Lumière	Non

#### TWS appairiment:

- Il a besoin de deux unités identiques et les deux sont en mode Bluetooth.
- Ne connectez aucun appareil Bluetooth.
- Double - cliquez sur le bouton m de l'une des deux unités.
- Les deux unités seront appariées ensemble.
- Allumez ensuite votre appareil Bluetooth et sélectionnez pro PSP1091 pour l'appairement.
- Vous pouvez maintenant jouer des chansons via votre appareil Bluetooth.
- Double - cliquez à nouveau sur le bouton M, puis la fonction TWS sera Désconnecté.

#### Choses à noter

- Veuillez stocker et utiliser ce produit à température ambiante Environnement
- N'exposez pas ce produit à la pluie ou à l'environnement humide
- Ne laissez pas ce produit pour éviter que la chute ne cause des dommages au produit
- Ne pas démonter, réparer ou modifier ce produit Une personne
- Batterie au lithium intégrée dans ce produit. S'il vous plaît ne pas jeter ou mettre dans le feu Évitez le danger.

#### Solutions communes aux problèmes

Le phénomène Le problème	La solution
Plusieurs échecs Couplage de connexion	1. Vérifiez si le Haut - parleur est en mode de recherche ou redémarrez 2. Trop de périphériques Bluetooth autour, provoquant Difficile à chercher. Eteignez les autres appareils Bluetooth.
Trop bas ou distorsion La voix	1. Réglez le volume de votre appareil Bluetooth et Ajustez - le à l'emplacement approprié
Temps de pause musicale	Si la distance de connexion effective de l'audio est dépassée Système, ou s'il y a un obstacle entre les Haut - parleurs et Appareils Bluetooth.
Statut Bluetooth Indicateurs lumineux Pas lumineux	1. Vérifiez le statut de votre appareil Bluetooth et Ajustez - le à l'emplacement approprié 2. Si la tension de la batterie est basse, veuillez la charger.

**Note:** l'équipement est conforme aux essais Appareils numériques de catégorie B, conformément à la partie 15 des règles de la FCC. Ces restrictions sont les suivantes: Vise à assurer une protection raisonnable contre l'installation résidentielle.Cet appareil peut produire de l'électricité et émettre des radios L'énergie de fréquence, si elle n'est pas installée et utilisée conformément aux instructions. Peut causer un brouillage préjudiciable aux communications radio.Mais non. Assurez - vous qu'il n'y a pas d'interférence dans une installation particulière.Si ça L'équipement peut effectivement causer un brouillage préjudiciable à la réception de la radio ou de la télévision Cela peut être déterminé en fermant et en