

TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
1 OUTLOOK DESCRIPTION	3
2 POWER BUTTON USAGE	4
3 TOUCH-SCREEN NAVIGATION	4
4 U-Disk.....	5
5 USING MICRO-SD CARD.....	5
6 GETTING STARTED	6
Charge the device	6
Turn the device on.....	6
Wi-Fi Network Setup	6
HDMI video play.....	6
USB device mode options	6
7 DESKTOP	7
8 SCREEN LOCK.....	8
9 PRE-LOADED APPLICATIONS	9
10 STATUS AND NOTIFICATION AREA	11
11 APPLICATION MANAGEMENT.....	12
Install Android Applications	12
Download Android Applications direct from a Website	12
Uninstalling Android Applications	12
12 People	13
You can create your personal address, including some other you want personal information.	13
Create Contacts.....	13
Add contacts to Favorites	13
Edit Contacts	13
Delete Contacts.....	13
13 CLOCK.....	14
Alarm	14
14 BROWSER	14
15 CALENDAR.....	15
Add Event	15
16 CAMERA.....	16
Take Pictures	16
Take Videos	16
Single-motion Panorama	16
17 CALCULATOR	17
18 MYRECODER	17
19 EMAIL	17


Add Email accounts	17
Email Inbox	18
Edit Email Accounts.....	18
Delete Email Accounts	19
20 FILE BROWSER.....	19
Copy Media between Computer and Tablet	20
Delete files	20
21 MY MUSIC.....	20
Play Music.....	20
Create Music Widget	21
The Operation with Music and Playlist.....	21
Sort by title or date added	22
22 Gallery.....	22
Switch the view storage area	22
Delete the photos and videos in the list.....	23
23 SCREEN CAPTURE	23
24 WI-FI.....	23
26 PPPoE SETTINGS.....	26
27 ETHERNET	26
28 SETTINGS.....	27
FREQUENTLY ASKED QUESTIONS	30
Android	30
Basic Device Functionary	30
Email.....	30
Media Cards	30
Music	30
Photos.....	31
Video.....	31
Wi-Fi.....	31
BATTERY MANAGEMENT	31
Charge battery.....	31
IMPORTANT SAFETY PRECAUTIONS	32
Appendix : FCC Statement and Caution	33

1 OUTLOOK DESCRIPTION

Front:

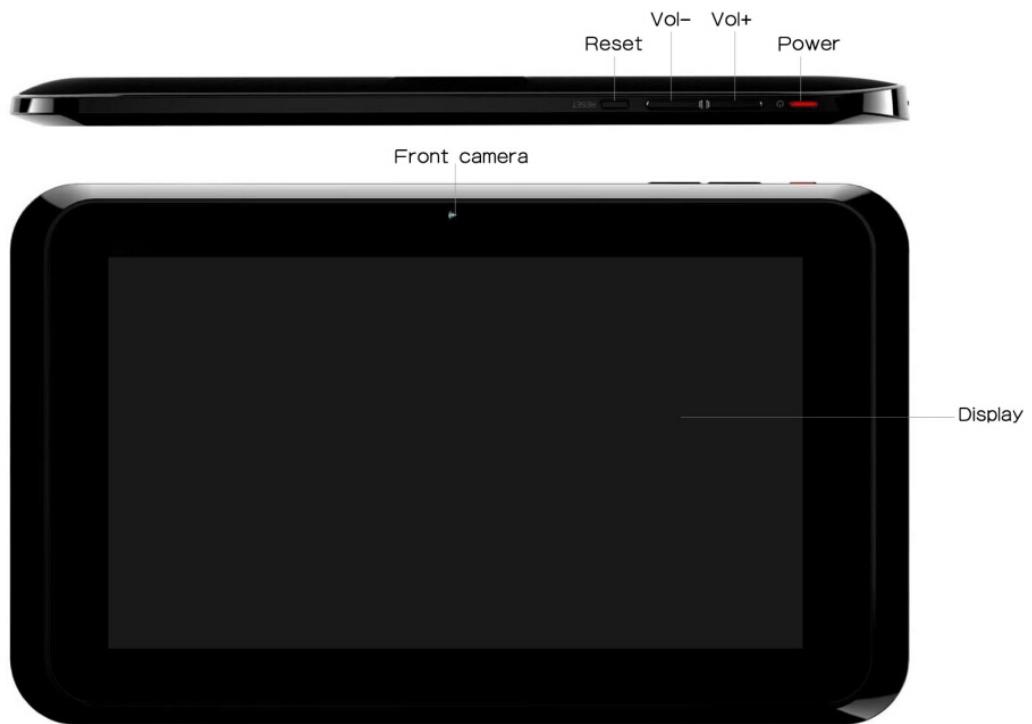

Right side:

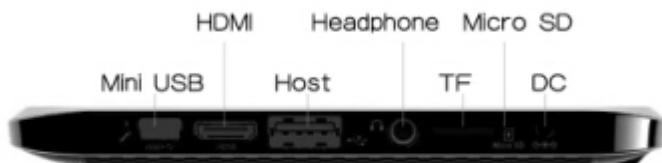

Back:



2 POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

Reboot: Press the power button and hold for 2 seconds → Tap **reboot** → tap **OK**.

Airplane mode: Press the power button and hold for 2 seconds → Tap **Airplane mode**.

Silent mode: Press the power button and hold for 2 seconds → Tap **Silent mode**.

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please careful with the function.

☆ After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.

3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold in place approx 2 seconds, and then release to display an options window.

Finger slide: Touch & slide your finger across the screen and then release.

Two points to zoom in or out: Press and hold any two points relative or opposite direction to drag in desktop, video play interface, picture view interface and so on .it will zoom in or out the interface.

★ To avoid scratching or crushing, do not place objects on the touch screen surface.

4 U-Disk

Insert U-Disk

Insert your U-disk into the device via USB host transfer cable. When ready for use, enter into the file browser, switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  →

Settings → Storage → USB storage → Unmount this storage device. When it displayed **Mount this device** and then you can unplug the U-disk.

★ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

5 USING MICRO-SD CARD

★ *The device supports a maximum 32GB micro SD card.*

Insert your card into the microSD slot until it clicks into place. It's OK.

Remove micro SD Card

Close all applications or documents which have been opened on the card. Tap  →

Settings → Storage → SD card → Unmount this storage device. When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

★ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

★ *We recommend using major brands of memory cards to avoid incompatibility.*

6 GETTING STARTED

Charge the device

★ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press & hold the power button 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.



1. Tap → **Settings**.

2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure **Wi-Fi** networks that require input password to connect.

3. Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.



4. Tap to return to the Desktop screen.

★ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

HDMI video play

This device support through the Mini HDMI connected with TV, it makes TV and device displayed synchronic. For using this feature, insert the Mini HDMI cable into the right side of the device interface to connect with TV.

USB device mode options

Before using this feature please connect to PC via the Mini USB cable.

USB debugging

Debug mode used to debug program for developers. ADB driver needs to be installed before using this mode, Installation method as follows:

(1) First switch on the device to **Install Driver** mode, And then find the "CD driver" (such as F:) on your PC, Use the resource manager to open the CD drive , then copy all files in the folder (\adb_driver) to your PC;

(2) And then switch to **USB debugging** mode on the device, If the PC-side prompts to install the driver, select manual installation, and specify the drive path to the location where you saved the ADB driver.

Media Transfer Protocol(MTP)

Media transfer protocol (MTP) mode used to synchronize transmits data and the users can copy, paste or delete the files in the device. If this is the first time using this mode on your PC, you need to install the driver. Installation method as follows:

Firstly, switch to **Install Driver** mode on the device, and then your PC will automatically pop-up driver installation interface, users need only follow the prompts, and reboot the system after the installation completed. (If not, please go to the Microsoft official website to download Media Player 11 upgrade package and install.)

Install Driver

Install driver mode used to install the driver for USB debugging and media transfer protocol (MTP) mode, The media transfer protocol (MTP) mode driver only for Windows XP, Windows 7 support by default, not need to install.

★ You can also refer to the *readme.txt* in the "CD drive".

7 DESKTOP



1. Back.

2. Home.

3. Recent Apps.

4. Hide status bar.
5. Current time.
6. Screen capture.
7. Volume.
8. Wireless network
9. Battery Status.
10. Google search.
11. Voice search.
12. Add Widgets/Apps shortcuts or setting wallpapers and more.
13. Tap to view the applications screen


Through add icon  or in the desktop make **two points to zoom** in the interface can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

- ☆ Tap on any application icon to launch it.
- ☆ Touch, hold and then slide icons to reposition them on the screen.
- ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Lock screen displays the following:

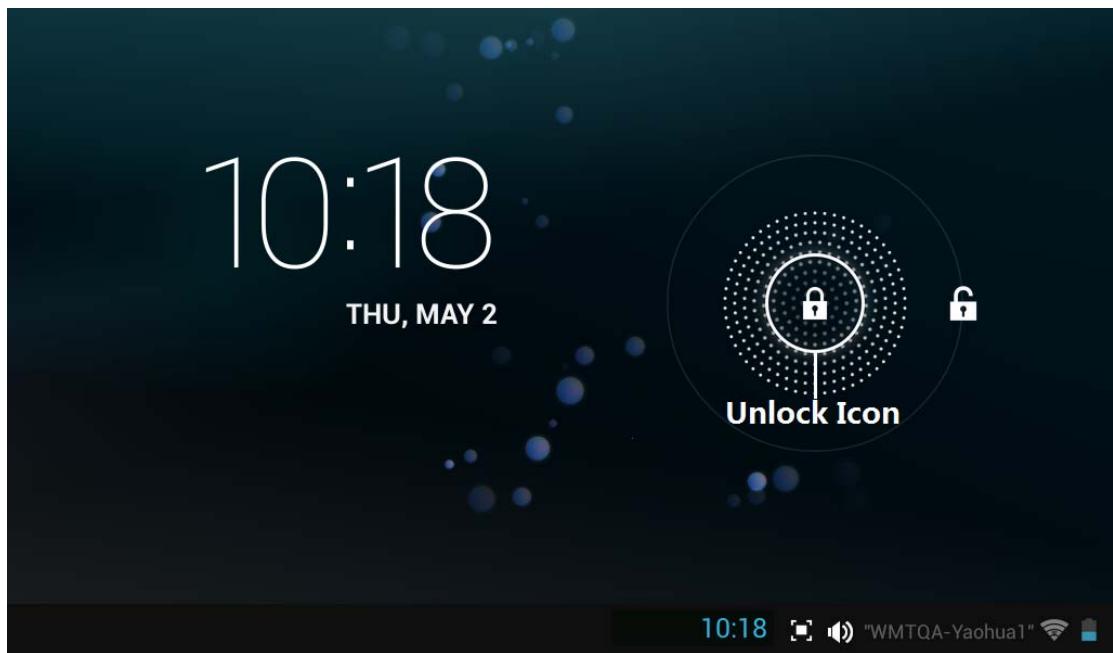

Tap the unlock icon and drop it to the right and out of the circle to unlock.

9 PRE-LOADED APPLICATIONS

	People	Create a list with e-mail contacts
	Clock	It can display the time and set the alarm.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and take video.
	Calculator	Do calculation.
	My Recorder	Recording and playback of recorded audio.

	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Voice search	Voice search.
	Google	Local search and online search.
	Downloads	View the downloads and the download progress.
	Settings	Multiple settings for personalizing and enhancing your Device.

- ★ To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click  icon ,Then click on the icon which you want to add to desktop in the App shortcuts below this interface , the icon will automatically move to the desktop.
- ★ Touch, hold and then slide icons to reposition them on the screen.
- ★ Touch, hold and slide icons onto  to remove them from the Desktop screen.

10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which in the state bar to view more state information and events.



Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Auto-rotate screen	Auto-rotate switch. After opening, and the screen will automatically rotating screen with gravity induction.
Brightness	Setting screen brightness.
Notifications	Open or close the notification.
Settings	Access to settings.

11 APPLICATION MANAGEMENT

Install Android Applications

★ There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.

Purchased or free Android applications that you have downloaded to your computer can



be installed quickly & easily on your Tablet using the **File Browser** or **task manager** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device → insert or connect to your Device.



2. Tap the **File Browser** application icon.

3. Tap **SD** or **USB** and locate the folder in which the .apk application files were saved.

4. Tap on a **.apk** file → **Install**.

The application is installed and the application icon is added to the **Applications** screen.

5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.



1. Tap the **browser** application icon to launch the internet.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is completed, tap → **Downloads**. Open the applications from app list.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.



1. Tap → **Settings** → **Apps** → **All**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



12 People

You can create your personal address, including some other you want personal information.

Create Contacts

1. Click the **PEOPLE** program icon 
2. Click  to create a new contact or click **Create a new contact** button.
3. In the **Name** field, enter the name of the contact.
4. Click **Add another field** on the bottom of the screen, can increase the contact information.
5. Click the options to select fill.
6. Input characters in the options point as the contact informations.
7. Click **Done** which on the top left of the interface.

Add contacts to Favorites

1. In **All contacts** page, click a contact which you want to add to favorites.
2. Click the icon  on the right.
3. Click **Favorites** page, you can view the list of your favorite contacts.
☆ *Click the options which on the left corner **All contacts**, **Favorites** and **Groups** to switch the display contents.*

Edit Contacts

1. In **All contacts** page, click a contact which you want to edit.
2. Select the contact what you want to edit, click the key  which on the top right of the interface.
3. If you finished editing, click **Done** which on the top left of the interface.

Delete Contacts

1. In **All contacts** page, click a contact which you want to delete.
2. Click the menu key which on the top right of the interface, choose **Delete**.



13 CLOCK




Tap the **Clock** application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

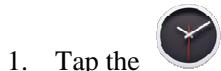

1. Tap the **Clock** application icon.



2. Tap **Set alarm** → **+** Add alarm.

3. Set up your alarm as desired.

4. Tap **OK**.

5. Turn on the right switch of the alarm clock which need to be enabled.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.



Drop **Clock** to **10** if you want to be reminded again in 10 minutes.



Drop **Clock** to **ZZ** to cancel the alert.

Turn Alarm on

1. In the Alarm list, find the desire alarm.

2. The switch button to open the alarm clock on the right side, the switch button



Edit Alarm

1. Enter the alarm list, click the alarm time to edit.

2. After editing, tap **OK**.

Delete Alarm


1. Enter the alarm list, drag left or right to delete the alarm you want to delete.



14 BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

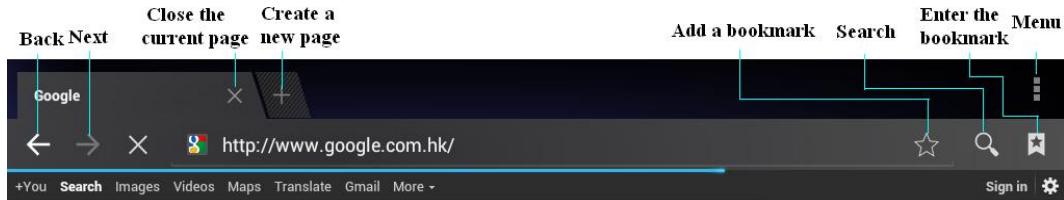

15 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account & sync** → **Add account**. According to the prompts complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.

2. Tap on the event time → tap .

3. In each field, enter the details of the related activities.

4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*



16 CAMERA

Tap the Camera application icon.

Take Pictures

1. Tap switch to video, and you can take picture.
2. Tap take picture.
3. The picture will be saved.
4. Sliding the screen from right to left, and you can enter the gallery to browser the complete picture.
5. Press **Back** to the **Camera**.
6. Tap to exit the **Camera** and back to the **Desktop**.

Take Videos

1. Tap switch to video, and you can take videos.
2. Tap to begin and tap to stop.
3. The video will be saved.
4. Sliding the screen from right to left, and you can enter the preview list.
5. Press **Back** to the **Camera**.
6. Tap to exit the **Camera** and back to the **Desktop**.

★ *During video recording, you can click the frame quickly to take pictures. Quick shot function does not terminate the video recording.*

Single-motion Panorama

For capturing larger scenes, tap icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

★ *You can press Viewfinder long, or on the top right screen tap , then tap , enter camera settings menu, In the dialog box, click select storage device , to*

choose the files are stored in the Local, SD card or USB storage.



17 CALCULATOR



1. Tap the Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



18 MYRECORDER



1. Tap the recorder icon.
2. Tap the record icon to start recording.
3. Tap the record icon to stop record.
4. Tap the play button to play the voice of recording.



19 EMAIL

★ POP3, SMTP and Exchange accounts are supported.

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.



1. Tap the Email application icon.
2. On the **Account setup** screen, Tap in the **Email address** entry field → enter your email address.
3. Tap in the **Password** entry field → enter your email password.
4. Tap **Next**.
5. **Manual Setup (optional):** The server settings are automatically populated based on your email account provider (*i.e.*, *gmail.com*, *etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.

6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.
7. (Optional): Enter a name for the account.
8. Enter name for outgoing message → tap Done.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*


Email Inbox

1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap  **Reply** or  **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

Compose New Email Message

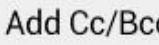1. On the **Inbox** screen, tap  .
2. Enter the e-mail address in the recipient field. if you want to add Cc or Bcc recipients, tap  **Add Cc/Bcc**, and then enter the recipient's email address.
3. Tap in the **Subject** entry field to enter your desired subject title.
4. Tap in the **Compose Mail** area to enter your personal message.
5. If desired, tap  to attach a file.
6. When ready to send the email, tap  .

Edit Email Accounts

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **settings**.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the **Inbox** screen.

Delete Email Accounts

★ If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.

1. Tap the  Email application icon.

2. On the **Inbox** screen, tap  → **Settings**.

3. Click the account you want to delete.

4. In the pop-up **Account options** window, tap **Delete**

5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  Email application icon.

2. On the Inbox screen, tap  → **Settings**.

3. Tap the desire account.

4. In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.




20 FILE BROWSER



Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:

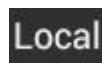 **Local** Internal Flash (ROM)

 **SD** SD Card

 **USB** USB Storage

 Paste

 Back to the previous folder

 Switch folder display mode.



Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

- ★ *The internal device storage is titled "Local", a memory card "SD", and a USB storage device is titled "USB".*
- ★ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **GoTo**, select **SD** or **USB** to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.
3. Tap **GoTo**, select **Local** Internal Memory → tap on the folder into which you want to copy the file → tap .

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.



21 MY MUSIC


★ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music

1. Tap the  **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.
3. Tap the **Pause**  icon to pause your music.
4. When you playing the music you can tap  or  return to the previous screen.



Click switch to the currently playing interface, It is shown as follows:

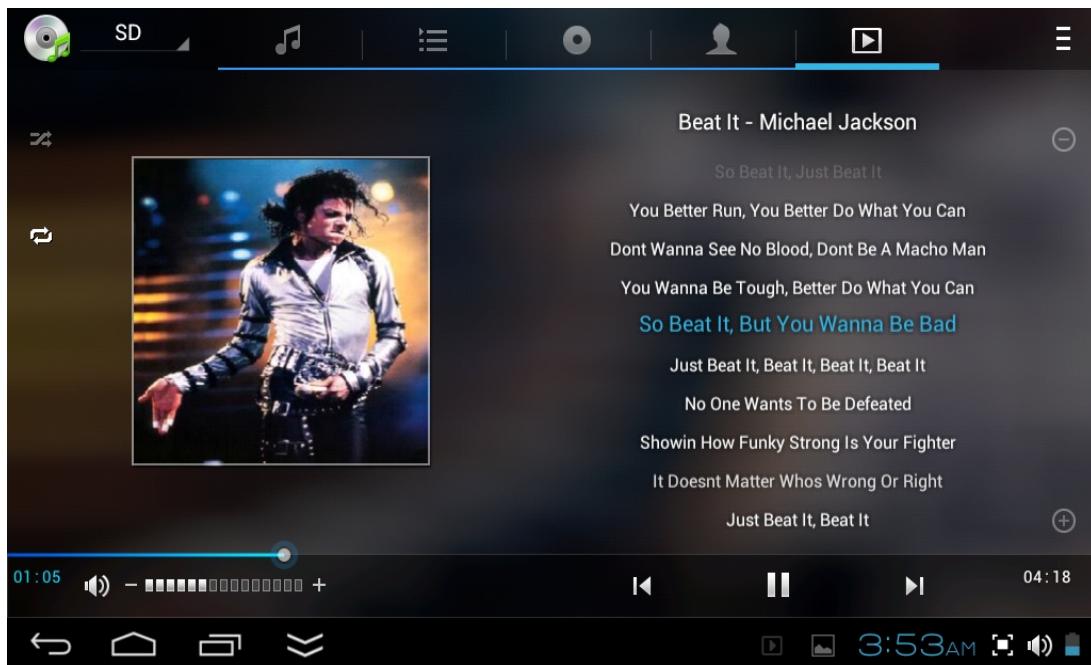

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap icon, In the pop-up list select **Widgets** → Select **Music**

Widget.

The Operation with Music and Playlist

Add playlist



1. Enter Play list interface → click .
2. Input the playlist name.
3. Tap **Save**.

Rename or Delete playlist



Switch to **display mode**, Tap the playlist → tap → Enter a new name in



the dialog box, and click **Save**. If you want delete the playlist, click → click **save**.

Add music

1. In the **all song, album, and artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).
3. Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete**.

Sort by title or date added



In the all song interface, on the upper right click the **☰**, in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will be sorted by add date.



22 Gallery

Switch the view storage area

In the root directory, on the top left click the **Local**、**SD** or **UDisk** to switch the view storage area.

Classification of photos and videos list

In the root directory, on the top left click the **Albums**、**Locations**、**Times**、**People**、or **Tags** classify the photos and videos. In the classification file folder, on the top left click **Filmstrip view** or **Grid view** to switch the view display mode.

View, play the photos and videos

Photo

In the classification folder, click on the photo thumbnails to open the photo, and



on the top right of the folder interface tap **☰** → **Slideshow** to play the slide.

Video

In the classification folder, click on the view preview. Enter to the video preview interface, and click the play button in the video preview to play the video.

★ In preview picture interface, on the top right screen click



to operate the corresponding photos (including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)



★ In preview video interface, on the top right screen click **☰** to operate the corresponding videos (including trim and details)

The operation with picture or video playback

DLNA

In preview photo interface (or video playback interface) on the top right click **DLNA**

follow the prompt to operate, you can easily share the tablet picture(or video)to support DLNA TV broadcast.

Playback of the video floating window



In video playback, on the top right click  to switch to playback of the video floating window.

- ★ Ordinary video playback and floating window playback all are supported by two points zoom to adjust the size of the video screen.
- ★ Floating window video will continue to play after you switch to other interface(ex: browser the website, desktop, run the software etc.).
- ★ You can easily drag the floating window to adjust the position in the screen.

Delete the photos and videos in the list



On the top right of the screen, Tap  icon → Tap **select album** or **Select item**. Select the album、image thumbnails or video preview which you want to delete, tap  → **OK**. If you want to delete a single picture (or video), please enter the folder ,select the picture(or video) , tap  , or delete it in the image thumbnails(or video preview) , tap  → **OK**.



23 SCREEN CAPTURE



You can capture a screen image by tapping  at any time.



Tap the  **Screen Capture** application icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.
- View software version information.



After the images are saved, they can be viewed through  **Gallery** application.

24 WI-FI


Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the wireless network in the vicinity will be listed, click to select the name you want to connect to wireless network;
3. If the wireless network is connected successful before, the wireless network information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove wireless network information;
4. If the wireless network is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the wireless network is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.


25 Bluetooth

Bluetooth is a short distance (typically 10m) wireless communication technology to support data exchange between Bluetooth devices. The device has Bluetooth, you can communicate with other Bluetooth headsets and Bluetooth-enabled devices.

1. Touch **settings**, touch Bluetooth to on.
2. The system will automatically scan for available Bluetooth devices.

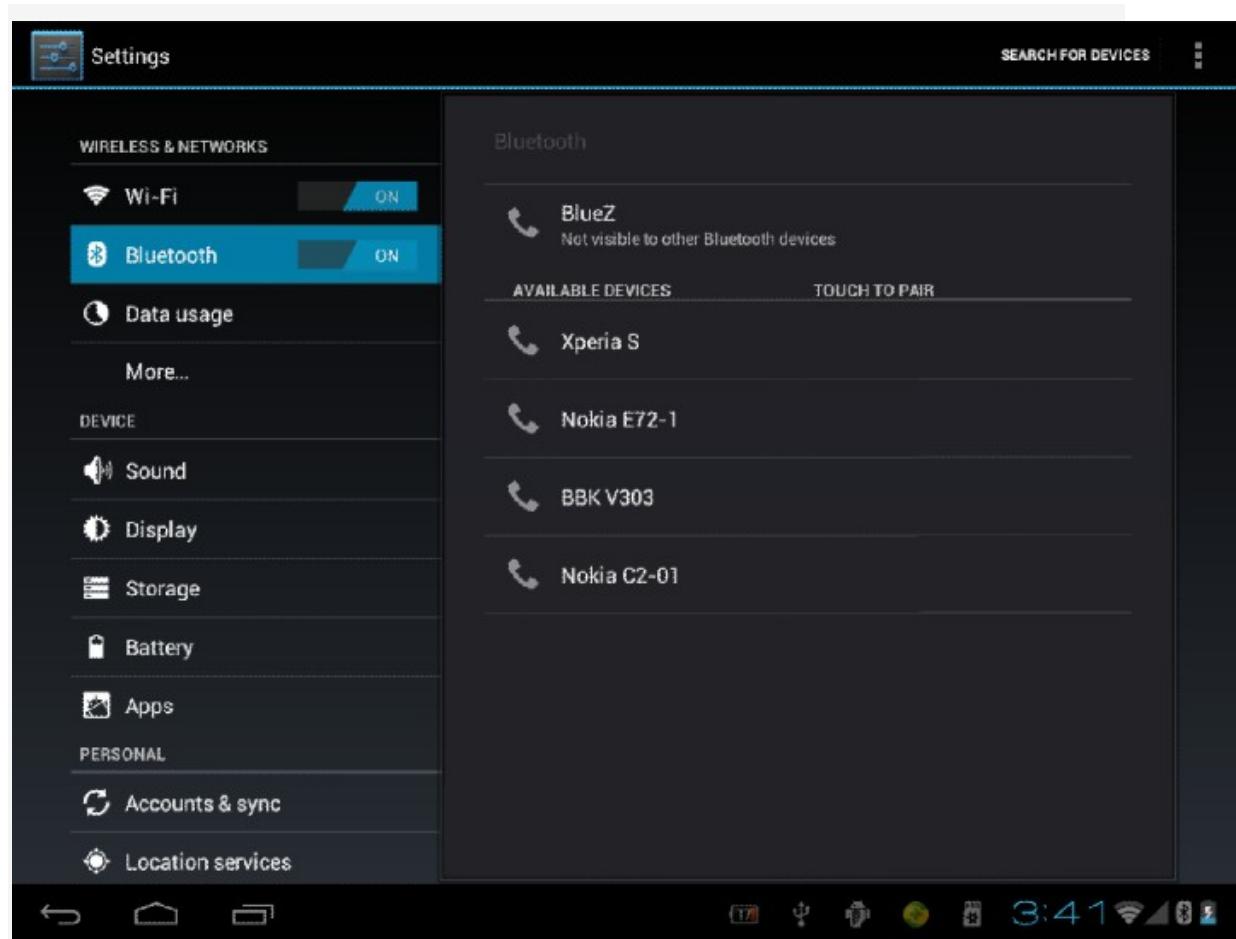

3. Select the paired Bluetooth device, enter the pairing PIN code, click Finish and confirm.

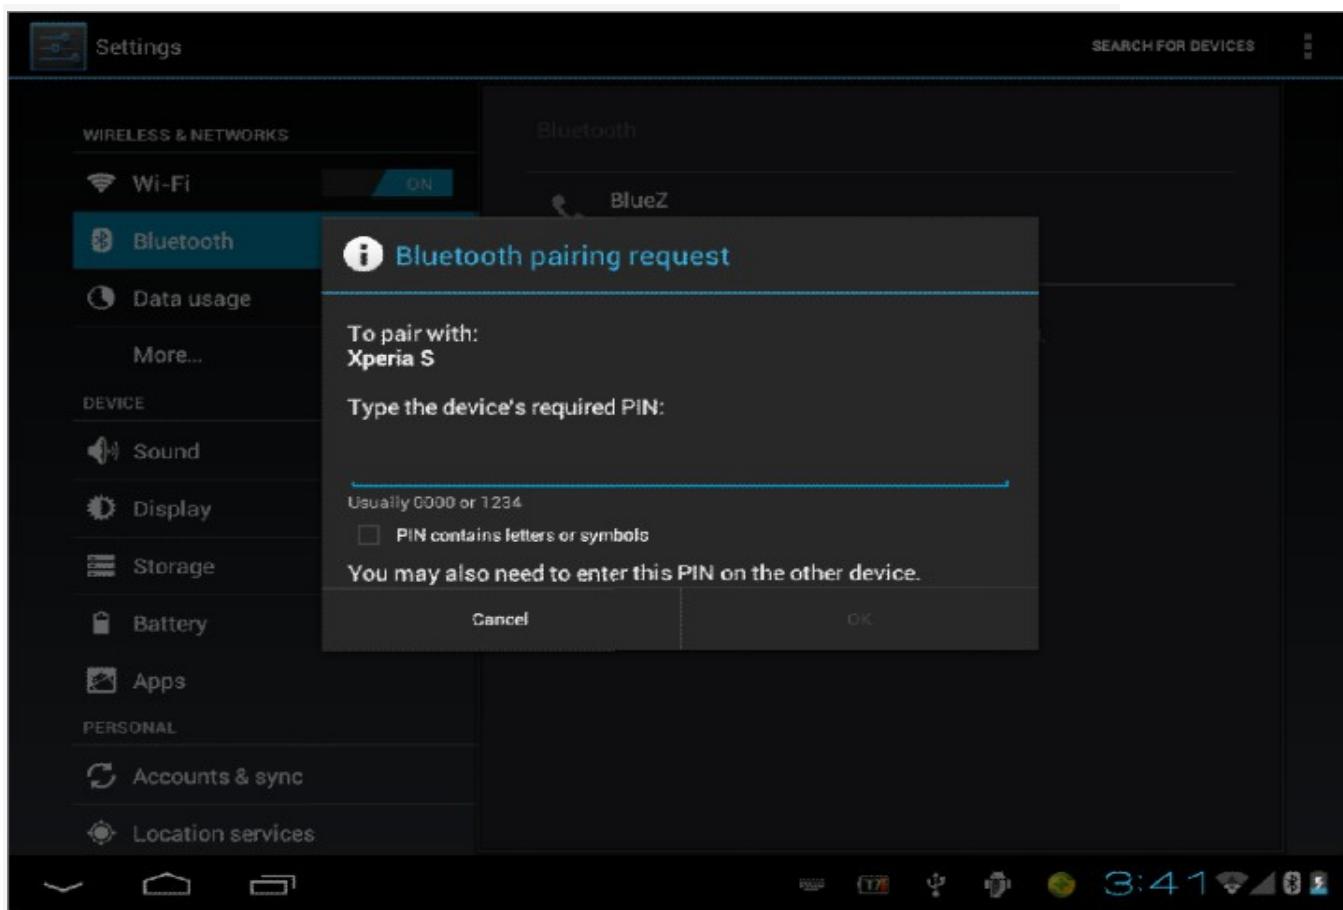

4. Enter the same PIN code in the paired devices, click OK.

5. After a successful connection need to be transmitted in the file manager, select the file, press and pop-up menu, click share, select the paired device name, click to receive the matching device, may be relative to send files.

26 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings**.
2. Input name and password then click connect to access the broadband network.

27 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable plugged into the USB network card, you will see

the bottom of status bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.



28 SETTINGS

Wireless & networks	Wi-Fi	Turn on /off Wi-Fi, Set up & manage wireless access points.	
	Ethernet	Automatic assign IP address	
		Use Static IP	
	PPPoE settings	Set up ADSL network	
	Bluetooth	Support 2.1+EDR(Optional)	
	Data usage	View of data usage	
	Airplane mode	Disable all wireless connections.	
	VPN	Add Virtual Private Networks (VPNs).	
	Tethering & Portable hotspot	USB tethering.	
		Portable Wi-Fi hotspot.	
	More...	Set up Wi-Fi hotspot.	
Device	Sound	Volumes	To adjust the Media volume.
		Default notification	Select desired ringtone sound.
		Dial pad touch tones	Turn on/off dial pad touch tones.
		Touch sounds	Turn on/off touch sounds.
		Screen lock sound	Turn on/off lock sounds.
	Display	Brightness	Adjust the screen brightness as desired.
		Wallpaper	Set up wallpaper
		Auto-rotate screen	Auto-rotate switch.
		Allow hiding the status bar	Allow hiding the status bar.
		Show full-screen gesture tip	Full-screen gesture prompts.
	Sleep	Adjust the delay before the screen automatically turns off.	
	Daydream	Set the daydream.	
	Font size	Set the system font size.	
	Wireless display	Search and connect available wireless displays.	

	Storage		View, uninstall, and format the ROM disk, SD card and USB storage.
	Battery		View the usage of the battery.
	Apps		View and uninstall applications
	Users		Modify owner info, add, modify, delete new users and their associated information.
		Access to my location	Let apps that have asked your permission use your location information.
		GPS satellites	Let apps use GPS to pinpoint your location.
	Location access	WIFI & mobile network location	Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.
		Screen lock	
		Owner info	
		Encrypt device	Require a numeric PIN or password to decrypt your device each time you power it on.
		Make passwords visible	
		Device administrators	View or deactivate device administrators
		Unknown sources	Allow installation of non-Market apps.
		Verify apps	Disallow or warn before installation of apps that may cause harm
		Trusted credentials	Display trusted CA certificates.
		Install from SD card	Install certificates from SD card.
		Clear credentials	Remove all certificates.
	Language &	Language	Setting system language.

	input		Spelling correction, personal dictionary, keyboard and input methods, Voice search , text to speech (TTS) output, and pointer speed.
Backup & Reset	Back up my data		Back up app data, Wi-Fi passwords, and other settings to Google servers.
	Backup account		Backing up to debug-only private cache.
	Automatic restore		When reinstalling an app, restore backed up settings and data.
	Factory data reset		Erases all data on tablet.
Accounts	Add account		
System	Date & Time	Automatic date & time	Use network-provided time
		Set date	Set date
		Set time	Set time
		Select time zone	Select time zone
		Use 24-hour format	Choose 24-hour format or 12-hour format.
		Choose date format	Select date format.
	Accessibility		Talkback, Magnification gestures, Large text, auto-rotate screen, speak passwords, Accessibility shortcut, Ext-to-speech output, Touch & hold delay, Enhance web accessibility
	Developer options		Take bug report, Desktop backup password, Stay awake, Protect SD card, Super user setting, USB debugging, Power menu bug reports, Allow mock locations, Select debug app, Wait for debugger, Verify apps over USB, Show touches, Pointer location, Show layout bounds, Show GPU view updates, Show hardware layers updates, Show GPU overdraw, Show

			surface updates, Window animation scale, Transition animation scale, Animator duration scale, Disable HW overlays, Force GPU rendering, Force 4x MSAA, Simulate secondary displays, Strict mode enabled, Show CPU usage, Profile GPU rendering, Enable OpenGL traces, Enable traces, Don't keep activities, Background process limit, Show all ANRs
	About device		System updates, Status, Legal information, Model number, android version, Kernel version, Build number.

FREQUENTLY ASKED QUESTIONS

Android

Q: What Android OS version is on my Device?

A: 4.2

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours in the off status, You can use the device while it's charging, but this method to charge is not recommended.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4, H263, H264, VC1, Real Video, Motion JPEG. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Inconsistent with the physical specifications, please prevail in kind.

BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

Appendix : FCC Statement and Caution

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.