


Description of Parts

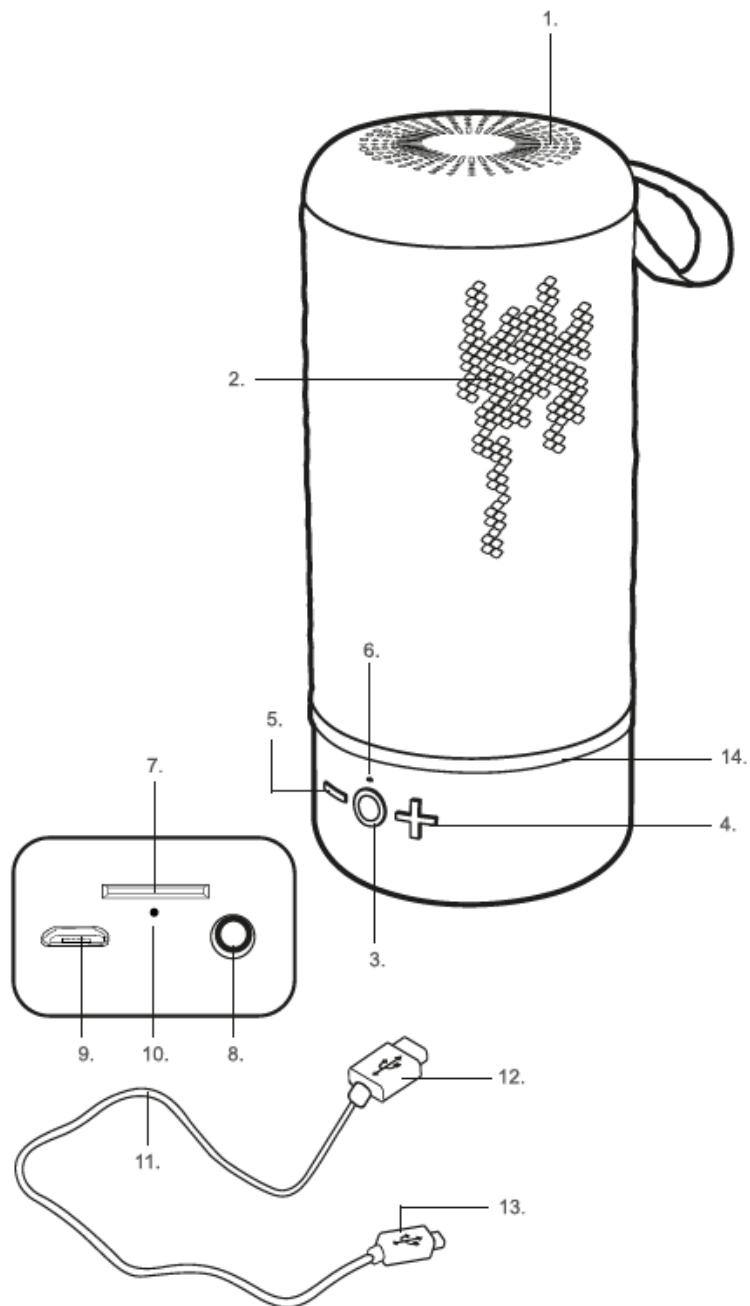

- | | |
|-------------------------------------|-------------------------|
| 1. Wireless Tower Speaker main unit | 8. Aux. Input |
| 2. Speakers | 9. 5 V Charging Port |
| 3. Power Button (●) | 10. LED Indicator Light |
| 4. Skip/Volume + Button (+) | 11. USB Charging Cable |
| 5. Skip/Volume - Button (-) | 12. USB Connector |
| 6. Built-in Hands-free Microphone | 13. Micro USB Connector |
| 7. Micro SD Card Slot | 14. LED Light Band |

EN

Please read all of the instructions carefully and retain for future reference.

Safety Instructions When using electrical products, basic safety precautions should always be followed. / Keep the product and its accessories out of the reach of children. / Keep small parts away from children as these may present a choking hazard. / Children under 8 years should be supervised to ensure that they do not play with the product. / This product is not a toy. / This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged; the product should be recycled. / Keep the product and its accessories away from heat sources, direct sunlight, humidity, water and any other liquid, or sharp edges that could cause damage. / Ensure the product is well-ventilated. Do not leave any objects susceptible to magnetism (cash cards etc.) near the product. / Do not operate the product with wet hands. / Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product. Do not use the product for anything other than its intended use. / Do not use any accessories other than those supplied. / Do not put objects into any of the openings. / This product is intended for domestic use only. It should not be used for



commercial purposes. To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.

Note: It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

Battery Safety The supply terminals are not to be short-circuited. / In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. / Do not use any cell or battery which is not designed for use with the product. / Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance. / Keep batteries out of the reach of children. / Do not dispose of batteries in a fire. / Do not dismantle, open or shred secondary cells or batteries. Do not expose cells or batteries to heat or fire. / Do not crush, puncture, dismantle or otherwise damage batteries. / Do not store above 60 °C. / Avoid storage in direct sunlight. / Do not expose batteries to heat or fire as they may explode. / Do not subject batteries to mechanical shock. / Do not dispose of exhausted batteries in household waste. / Once the batteries have been exhausted, dispose of the unit at a local recycling station. Contact the local government offices for further details. This product is fitted with a 3.7 V 800 mAh rechargeable battery (non-removable). UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other provisions of directive 2014/53/EU. The declaration of conformity may be consulted at [UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK. or alternatively at www.intempo.co.uk/declaration-letters.html](http://www.intempo.co.uk/declaration-letters.html)

Care and Maintenance Wipe the speaker with a soft, lint-free cloth. Do not: Use any abrasive cleaning solvents to clean the speaker. / Expose the speaker to extremely high or low temperatures. / Drop the speaker. Attempt to disassemble the speaker. / Dispose of the speaker in a fire as it will result in an explosion. **Getting Started** Remove the speaker from the box. / Remove any packaging from the speaker. / Place the packaging inside the box and either store or dispose of safely. **In the Box** Wireless Tower Speaker / USB Charging Cable / Instruction Manual

Instructions for Use

Charging the Battery

The speaker is fitted with a 3.7 V 800 mAh battery (non-removable). It is recommended that the battery is fully charged before first use; this will take approx. 2–3 hours. Connect the micro USB end of the USB charging cable into the 5 V charging port on the speaker and the USB end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will switch off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.

Note: It is advised that the speaker is not used whilst charging, as this could reduce the life of the battery.

Using the Wireless Tower Speaker

Basic Functionality

Turn on the speaker by pressing and holding '●' for approx. 3 seconds. Pause a track by pressing '●' once; press it again to resume the track.

Adjust the volume of the speaker using '+' and '-'. Press and hold '+' to increase the volume; decrease the volume by pressing and holding '-'. To switch to the next track, press '+'; play the previous track by pressing '-'. Turn the speaker off by pressing and holding 'O' for approx. 3 seconds.

Modes

The speaker must be turned on before using any of the following modes.

Bluetooth Mode

Pairing with a Bluetooth Compatible Device

STEP 1: Once the speaker has been turned on, the LED indicator light will flash to signal that it is ready to pair.

STEP 2: Search for the speaker using a Bluetooth compatible device. Select 'PMK Tower Speaker' to connect and pair. Once a connection has been made a tone will sound.

STEP 3: To unpair or remove a Bluetooth compatible device from the speaker, turn off the Bluetooth function on the compatible device. The speaker can now be paired with a new compatible device.

Note: Once connected, sound can be controlled using either the speaker or the relevant controls on the Bluetooth compatible device.

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the speaker, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the speaker, press 'O'.

STEP 3: The volume of the phone call can be controlled using either the speaker or the Bluetooth compatible device.

Aux. Mode

Connect one end of the line-in Aux. cable (not included) to the Aux. input port on the speaker and the other end to an MP3 player or other compatible audio source. The speaker will automatically switch to Aux. mode once the line-in Aux. cable has been inserted.

Note: Once connected, sound can be controlled using the relevant controls on the compatible audio source. The speaker cannot be used to skip tracks during Aux. mode.

Micro SD Card Mode

To use Micro SD card mode, insert a Micro SD card (not included) into the Micro SD card slot. The speaker will automatically change to Micro SD card mode.

Note: Once connected, sound can be controlled using the speaker.

The speaker will only recognise MP3 audio files; if other files are present on the Micro SD card, this may prevent the speaker from playing.

Troubleshooting

The speaker has no power.

The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the Battery'.

The speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

Unable to pair a device with the speaker.

The Bluetooth device is not compatible with the speaker. Check that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

The charge of the speaker depletes quickly.

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and the speaker will need to be disposed of. See the section entitled 'Battery Safety'.

Specifications

Product Code: EE5649

Bluetooth Version: 5.0

Wireless Range: Up to 25 m*

Speaker Output: 5 W

Power Supply: 5 V ===

Working Voltage: 3.7 V

Rechargeable Battery: 800 mAh

Operating Frequency: 2.4 GHz

FCC ID: 2AAR2EE5649

* Effective range may be reduced due to the presence of obstacles between connected devices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. / FCC Caution: Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. / FCC Statement: "This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. / If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. / Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. / Consult the dealer or an experienced radio/TV technician for help."

DE

Bitte lesen Sie alle Anweisungen sorgfältig durch und bewahren Sie sie zur späteren Verwendung auf. **Sicherheitshinweise** Bei der Verwendung elektrischer Geräte sind stets die grundlegenden Sicherheitsvorkehrungen zu beachten / Bewahren Sie das Produkt und das Zubehör außerhalb der Reichweite von Kindern auf. / Halten Sie Kleinteile von Kindern fern, da diese eine Erstickungsgefahr darstellen können. / Kinder unter 8 Jahren sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Produkt spielen. / Dieses Produkt ist kein Spielzeug. / Dieses Gerät enthält keine Teile, die vom Benutzer gewartet werden können. Wenn das Produkt und das Zubehör nicht ordnungsgemäß funktionieren oder beschädigt wurden, sollten Sie das Produkt dem Recyclingkreislauf zuführen. / Halten Sie das Produkt und das Zubehör von Wärmequellen, direkter Sonneneinstrahlung, Feuchtigkeit, Wasser und anderen Flüssigkeiten sowie scharfen Kanten fern, die Schäden verursachen könnten. Stellen Sie sicher, dass die Luftzirkulation um das Produkt herum gewährleistet ist. Bewahren Sie keine magnetempfindlichen Gegenstände (z. B. Bankkarten) in der Nähe des Produkts auf. / Bedienen Sie das Produkt nicht mit nassen Händen. Betreiben Sie das Produkt nicht, wenn es Wasser, Feuchtigkeit oder anderen Flüssigkeiten ausgesetzt war, um Stromschläge, Explosionen und/oder Verletzungen sowie Schäden am Produkt zu vermeiden. / Verwenden Sie das Produkt nur für den vorgesehenen Zweck. / Verwenden Sie ausschließlich das mitgelieferte Zubehör. / Legen Sie keine Gegenstände in die Öffnungen.

 Dieses Gerät ist nur für den Hausgebrauch vorgesehen. Es sollte nicht für kommerzielle Zwecke verwendet werden. / Hören Sie nicht über einen längeren Zeitraum mit hoher Lautstärke, um Gehörschäden zu vermeiden. Dies kann auch zu Schäden am Produkt führen. **Hinweis:** Es wird empfohlen, das Produkt nicht während des Ladevorgangs zu verwenden, da dies die Lebensdauer des Akkus beeinträchtigen könnte.

Batteriesicherheit

Die Versorgungsklemmen dürfen nicht kurzgeschlossen werden. / Bei einer undichten Batterie und Zelle sollten Sie darauf achten, dass die Flüssigkeit nicht mit der Haut oder den Augen in Kontakt kommt. Waschen Sie bei Kontakt den betroffenen Bereich mit reichlich Wasser und holen Sie ärztlichen Rat ein. / Verwenden Sie keine Zellen oder Batterien, die nicht für die Verwendung mit dem Produkt vorgesehen sind. / Sekundärzellen und Akkus müssen vor der Verwendung aufgeladen werden. Nach längerer Lagerung kann es erforderlich sein, die Zellen oder Akkus mehrmals zu laden und zu entladen, um eine maximale Leistung zu erzielen. / Bewahren Sie Batterien außerhalb der Reichweite von Kindern auf. / Geben Sie Batterien nicht ins Feuer. / Zerlegen, öffnen oder zerkleinern Sie Sekundärzellen oder Akkus nicht. / Setzen Sie Zellen oder Batterien keiner Hitze oder Feuer aus. / Zerdrücken, durchstechen oder zerlegen Sie keine Batterien, und beschädigen Sie sie nicht anderweitig. / Lagern Sie sie nicht über 60 °C. / Vermeiden Sie die Lagerung bei direkter Sonneneinstrahlung. Setzen Sie Batterien nicht Hitze oder Feuer aus, da sie sonst explodieren können. Setzen Sie Batterien keinen mechanischen Stößen aus. / Entsorgen Sie verbrauchte Batterien nicht im Hausmüll. / Wenn die Batterien leer sind, entsorgen Sie sie bei einer örtlichen Recyclingstation. Weitere Informationen erhalten Sie bei den örtlichen Behörden. / Dieses Produkt ist mit einem Akku mit 3,7 V und 800 mAh ausgestattet (nicht herausnehmbar).

UP Global Sourcing UK Ltd. erklärt hiermit, dass dieses Produkt die wesentlichen Anforderungen und andere relevante Bedingungen der Richtlinie 2014/53/EU erfüllt.

PRIMARK®



Primark Limited, PO Box 644, Arthur Ryan House,
22-24 Parnell Street, Dublin 1, Ireland.

Primark Tiendas S.L.U, Gran Via,
32,5, 28013 Madrid, Spain.

Primark US Corp, 7171 Goodlett Farms Pkwy,
Cordova TN 38016, USA.

FCC ID:2 AAR2EE3576

CD050319/M0000000/V1