
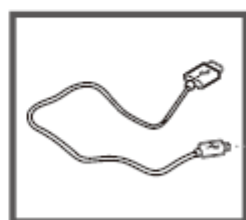


PRIMARK[®] TRAVEL

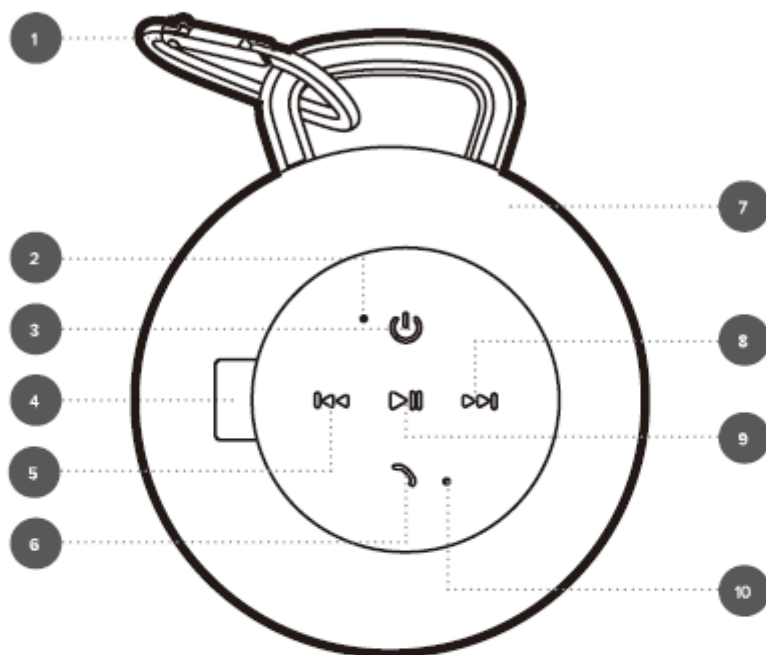

CARABINER SPEAKER

Instruction Manual

EN | Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Keep the product and its accessories out of the reach of children.
- Keep small parts away from children as these may present a choking hazard.
- Children under 8 years should be supervised to ensure that they do not play with the product.
- This product is not a toy.
- This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged, the product should be recycled.
- Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.
- Do not operate the product with wet hands.
- Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.
- Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.
- Do not use the product for anything other than its intended use.
- Do not use any accessories other than those supplied.
- It is imperative to unplug the charging cable after the product has been used before it is cleaned.
- This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.



NOTE: It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

BATTERY SAFETY

The supply terminals are not to be short-circuited.
In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
Keep batteries out of the reach of children.
Do not crush, puncture, dismantle or otherwise damage batteries.
Do not store above 60 °C.
Avoid storage in direct sunlight.
Do not dispose of exhausted batteries in household waste.
Do not dispose of exhausted batteries in a fire as they may explode.
Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.
This product is fitted with 3.7 V 500 mAh Lithium-ion rechargeable battery (non-removable).

Declaration of conformity

Hereby, Primark declares that the radio equipment type 'Carabiner Speaker' is in compliance with Directive 2014/53/EU.
The full text of the UK and EU declaration of conformity is available at the following internet address: <https://www.primark.com/en-gb/doc>.

Care and maintenance

Wipe the speaker with a soft, lint-free cloth.

DO NOT:

- Use any abrasive cleaning solvents to clean the speaker.
- Expose the speaker to extremely high or low temperatures.
- Drop the speaker.
- Attempt to disassemble the speaker.
- Dispose of the speaker in a fire, as it will result in an explosion.

Instructions for use

Charging the battery

The speaker is fitted with a 3.7 V 500 mAh rechargeable battery (non-removable). It is recommended that the battery is fully charged before first use; this will take approx. 1.5 hours.

Connect the Type-C USB end of the charging cable into the 5 V  charging port on the back of the speaker and the USB end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will switch off.

Carefully disconnect both ends of the Type-C charging cable and store it safely for future use.



NOTE: "Maximum play time of 9 hours is based on 50% volume."

Using the speaker

Basic functionality

Turn on the speaker by pressing and holding  for approx. 2 seconds.

Pause a track by pressing  once; press it again to resume the track.

To select the next track; press  once.

To select the previous track; press  once.

To adjust the volume of the speaker, press and hold  to increase the volume and  to decrease the volume.

Turn off the speaker by pressing and holding  for approx. 2 seconds.

Bluetooth mode

Pairing with a Bluetooth compatible device

STEP 1: Once the speaker has been turned on, the LED indicator light will flash blue to indicate it is ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the speaker using a Bluetooth compatible device. Select 'PMK SPEAKER' to connect and pair. Once a connection has been made, a tone will sound and the LED indicator light will remain solid to signal that the devices are paired.

STEP 3: To unpair or remove a Bluetooth compatible device from the speaker, turn off the Bluetooth function on the compatible device. The speaker can now be paired with a new compatible device.



NOTE: Once connected, sound can also be controlled using the relevant controls on the Bluetooth compatible device.

Making phone calls via a Bluetooth compatible device

Once the Bluetooth compatible device has been paired with the speaker, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the speaker, press  once.

STEP 3: To reject a phone call press and hold  until the call is rejected.

STEP 4: To redial the last number, press  twice.

STEP 5: The volume of the phone call can be controlled using either the



EN | Electric and Electronic devices as well as batteries must not be disposed of with household waste. For more information about where you can drop off your waste product for recycling please contact your local authority.

ES | Los dispositivos eléctricos y electrónicos, así como las baterías, no deben desecharse con los residuos domésticos. Contactar con las autoridades locales competentes para obtener más información sobre dónde se pueden depositar los residuos para su reciclaje.

CA | Els dispositius elèctrics i electrònics, inclosos les piles, no s'han de llençar amb els residus domèstics. Per obtenir més informació sobre els punts de recollida de residus, poseu-vos en contacte amb les autoritats locals.

PT | Os dispositivos elétricos e eletrônicos, bem como as baterias, não devem ser eliminados com o lixo doméstico. Para obter mais informações sobre onde entregar o produto para reciclagem, contactar a autoridade local.

DE | Elektrische und elektronische Geräte sowie Batterien dürfen nicht im Hausmüll entsorgt werden. Nähere Informationen zu den Recyclingstellen für Altprodukte lassen sich bei den kommunalen Behörden erfragen.

FR | Ne pas jeter les appareils électriques et électroniques ou les piles avec les ordures ménagères. Pour plus d'informations sur les endroits où vous pouvez déposer votre produit usagé à des fins de recyclage, veuillez contacter votre autorité locale.

NL | Elektrische en elektronische apparaten en batterijen mogen niet worden weggegooid met het huishoudelijke afval. Neem voor meer informatie over inzamelpunten voor afval ten behoeve van recycling contact op met de gemeente.

IT | I dispositivi elettrici ed elettronici e le batterie non devono essere smaltiti insieme ai rifiuti domestici. Per maggiori informazioni sui punti di raccolta per il riciclaggio dei rifiuti, contattare l'ente locale.

PL | Produktów elektrycznych i sprzętu elektronicznego nie wolno wyrzucać wraz z odpadami z gospodarstwa domowego. Więcej informacji na temat punktów zbiórki odpadów do recyklingu można zasięgnąć w lokalnym urzędzie.

SL | Električnih in elektronskih naprav ter baterij ne smete odvreči med gospodinjске odpadke. Za več informacij o tem, kje lahko oddate odpadni izdelek za recikliranje, se obrnite na lokalne oblasti.

CS | Elektrická a elektronická zařízení a baterie se nesmí likvidovat spolu s domovním odpadem. Další informace o tom, kde můžete svůj výrobek odevzdat k recyklaci nebo zlikvidovat, získáte od místního úřadu.

SK | Elektrické a elektronické zariadenie ani batérie sa nesmú likvidovať spolu s komunálnym odpadom. Ďalšie informácie o tom, kam môžete výrobok odniesť na recykláciu, vám poskytne miestny úrad.

EL | Οι ηλεκτρικές και ηλεκτρονικές συσκευές καθώς και οι μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να αφήσετε τα απορρίμμάτά σας για ανακύκλωση, επικοινωνήστε με την τοπική αρχή.

HU | Az elektronos és elektronikus eszközöket, valamint az elemeket, akkumulátorokat nem szabad a háztartási hulladékkal együtt kidobni. Ha további információra van szüksége arról, hogy hol adhatja le a terméket szelektív hulladékként, forduljon a helyi hatóságokhoz.

RO | Dispozitivele electrice și electronice, precum și bateriile, nu trebuie eliminate împreună cu deșeurile menajere. Pentru mai multe informații despre locul în care puteți lăsa deșeurile în vederea reciclării, vă rugăm să contactați autoritățile locale.



EN | The used battery should not be thrown away with other waste. The battery must be collected, recycled or disposed of in an environmentally sound manner according to local regulations.

ES | Las baterías usadas no deben desecharse con otros residuos domésticos. Las baterías deben recogerse, reciclarse o desecharse en consonancia con las medidas de protección del medioambiente y de conformidad con la legislación local.

CA | La pila utilitzada no s'ha de llençar amb altres residus. Les piles s'han de recollir, reciclar o llençar de manera respectuosa amb el medi ambient, d'acord amb la normativa local.

PT | A bateria usada não deve ser deixada fora com outros resíduos. A bateria deve ser recolhida, reciclada ou eliminada de forma ambientalmente correta, de acordo com os regulamentos locais.

DE | Gebrauchte Batterien/Akkus dürfen nicht zusammen mit anderem Abfall entsorgt werden. Die Batterie muss gemäß den örtlichen Vorschriften gesammelt, recycelt oder umweltgerecht entsorgt werden.

FR | La batterie usagée ne devra pas être jetée avec les autres déchets. Les batteries doivent être collectées, recyclées ou jetées d'une manière respectueuse de l'environnement conformément à la réglementation locale.

NL | De gebruikte batterij mag niet met ander afval worden weggegooid. De batterij moet worden ingezameld, gerecycled of op een milieuvriendelijke manier worden weggegooid volgens de lokale regelgeving.

IT | Le batterie usate non devono essere smaltite insieme ai rifiuti indifferenziati. Le batterie devono essere raccolte separatamente, riciclate o smaltite secondo una procedura ecologicamente corretta e in accordo con le normative locali.

PL | Zużytej baterii nie wolno wyrzucać wraz z innymi odpadami. Baterie należy zebrać, poddać recyklingowi lub utylizacji w sposób nieszkodliwy dla środowiska naturalnego i zgodny z lokalnymi przepisami.

SL | Izrabljenih baterij ne smete zavreči skupaj z drugimi odpadki. Baterijo je treba zbrati, reciklirati ali odvreči na okolju varen način v skladu z lokalnimi predpisi.

CS | Použitá baterie nesmí být vyhozena do jiného odpadu. Baterie se musí sbírat, recyklovat nebo likvidovat způsobem šetrným k životnímu prostředí v souladu s místními předpisy.

SK | Použitá batéria sa nesmie likvidovať s iným odpadom. Zber, recyklácia alebo likvidácia batérie musí prebehnúť environmentálne vhodným spôsobom v súlade s miestnymi predpismi.

EL | Η χρησιμοποιημένη μπαταρία δεν πρέπει να απορρίπτεται μαζί με άλλα απορρίμματα. Η μπαταρία πρέπει να συλλέγεται, να ανακυκλώνεται ή να απορρίπτεται με περιβαλλοντικά ορθό τρόπο, σύμφωνα με τους τοπικούς κανονισμούς.

HU | A használt elemeket és akkumulátorokat nem szabad más hulladékkal együtt kidobni. Az elemeket és akkumulátorokat a helyi előírásoknak megfelelően, környezetkímélő módon kell begyűjteni, újrahasznosítani vagy ártalmatlanítani.

RO | Bateria uzată nu trebuie aruncată împreună cu alte deșeurii. Bateria trebuie colectată, reciclată sau aruncată într-un mod ecologic, în conformitate cu reglementările locale.



MADE IN CHINA / FABRICADO EN CHINA / FET A LA XINA / FABRICADO NA CHINA / HERGESTELLT IN CHINA / FABRIQUÉ EN CHINE / GEMAAKT IN CHINA / PRODOTTO IN CINA / WYPRODUKOWANO W CHINACH / IZDELANO NA KITAJSKEM / VYROBENO V ČÍNE / VYROBENÉ V ČÍNE / KATAKEZAYETAI ΣΤΗΝ ΚΙΝΑ / GYÁRTÁS HELYE: KÍNA / FABRICAT ÎN CHINA.

Primark Limited, PO Box 644, Arthur Ryan House, 22–24 Parnell Street, Dublin 1, Ireland.

Distributed By: Primark Limited, 41 West Street, Reading, RG1 1TZ UK.

US Importer: Primark US Corp., 101 Arch Street, Suite 300, Boston MA 02110, USA

www.primark.com

RN CODE: 145478

SEASON CODE: AW24

CE 883875477

speaker or the Bluetooth compatible device.

STEP 6: To reject an incoming phone call, press and hold 'V'.

Troubleshooting

The speaker has no power.

The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the battery'.

The speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth mode'.

Unable to pair a Bluetooth device with the speaker.

The Bluetooth device is not compatible with the speaker. Check that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

The charge of the speaker depletes quickly.

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the battery' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and the speaker will need to be disposed of. See the section entitled 'BATTERY SAFETY'.

Specifications

Product code: EE7793

Bluetooth version: 5.3

Wireless range: up to 10 m*

Speaker output: 3 W

Impedance: 4Ω

Sensitivity: 80 ± 3 dB

Frequency range: 100 Hz–16 KHz

Charging voltage: 5 V 

Rechargeable battery: 3.7 V 500 mAh

Operating frequency: 2.402–2.48 GHz

Max RF output: ≤6 dBm

Charging cable: Approx. 30 cm

*Effective range may be reduced due to the presence of obstacles between connected devices.

The Bluetooth® word, mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks are under license. Other trademarks and trade names are those of their respective owners.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

ES | Conservar estas instrucciones para futuras consultas.

INSTRUCCIONES DE SEGURIDAD

- Al usar productos eléctricos, siempre se deben seguir las precauciones básicas de seguridad.
- Mantener el producto y sus accesorios fuera del alcance de los niños.
- Mantener las piezas pequeñas fuera del alcance de los niños, ya que pueden suponer riesgo de asfixia.
- Se debe supervisar a los niños menores de 8 años para asegurarse de que no juegan con el producto.
- Este producto no es un juguete.
- Este producto no contiene piezas que el usuario pueda reparar. Si el producto o cualquiera de sus accesorios funcionasen mal o estuvieran dañados, proceder a su reciclaje.
- Mantener el producto alejado de otras fuentes de calor, lugares expuestos a la luz directa del sol, humedad, agua o cualquier otro tipo de sustancias líquidas.
- No manipular el producto con las manos húmedas.
- No utilizar el producto si se ha expuesto a agua, a la humedad o a cualquier otro líquido, para evitar descargas eléctricas, explosiones o lesiones personales y daños.
- No dejar ningún objeto susceptible al magnetismo (tarjetas de efectivo, etc.) cerca del producto.
- No utilizar el producto con fines distintos al uso previsto.
- No utilizar accesorios que no sean los suministrados.
- Es necesario desenchufar el cable de carga tras utilizar el producto, antes de limpiarlo.
- Este producto está diseñado únicamente para uso doméstico. No debe ser utilizado con fines comerciales.



No exponerse a volúmenes elevados durante largos periodos de tiempo a fin de evitar posibles problemas auditivos y daños en el producto.



NOTA: se recomienda no utilizar el producto mientras se está cargando, ya que podría reducir la vida útil de la batería.

SEGURIDAD DE LAS PILAS O BATERÍAS

Los terminales de suministro no deben cortocircuitarse.

Evitar el contacto del líquido con la piel y los ojos en caso de fugas del contenido de las pilas o baterías. De producirse contacto, lavar la zona afectada con abundante agua y buscar asistencia médica.

Las baterías y pilas secundarias deben cargarse antes de su uso. Después de largos periodos de almacenamiento, puede ser necesario cargar y descargar las pilas o baterías varias veces para obtener un rendimiento óptimo.

Mantener las baterías o pilas fuera del alcance de los niños.

No aplastar, perforar, desmontar ni dañar las pilas o baterías.

No conservar a una temperatura superior de 60 °C.

Evitar el almacenamiento en lugares expuestos a la luz solar directa.

No desechar pilas o baterías gastadas en la basura doméstica.