
RETEKESS





TR627 Emergency Radio User's Manual

Be familiar with the machine Volume / switch knob

Hand strap Buckle

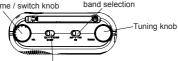

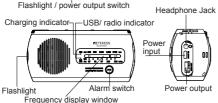

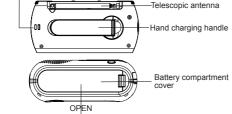

1.5Vx3 UM-4/AAA - + 1 - + 1

Power switch button

(Lithium or dry battery)

USING THE FLASHLIGHT

FUNCTION

- AM/FM/WB/radio.
- Super bright LED flashlight
- Charging for 5V input devices; cell phone, iPhone, etc.
- · Solar, hand crank, USB Jack to power it.
- · Supports listening with earphone.
- Emergency alarm.
- High capacity rechargeable battery or 3*AAA dry batteries.

RADIO OPERATION

- 1. Select Li-ion battery or AAA battery before use.
- 2. Turn the 'Volume' Dial clockwise to power on the radio and adjust volume.
- 3. Select FM/AM/WB with radio band, extend the antenna to get better signal reception.
- 4. Turn tuning knob to select station.
- 5. Long press the SOS button for 2 seconds, the alarm sounds. short press to turn off the alarm.

- When battery is over loading or short circuit, it would stop output automatically.
- When the battery voltage is lower than 2.7V, the radio will cut off automatically.

CHARGE MOBILE PHONE

- 1. Turn on the power output switchconnect cell phone (or other USB 5V devi- ces) and radio via USB cable, it will charge automatically
- 2. Cell phone or other devices can be charge by using the hand Crank / AAA batteries if needed, but as the last charging option.
- The radio is not available when charging the USB device.
- This feature is intended to only charge USB devices for emergency use, not a normal power bank.

Turn it on/off with the flashlight switch.

POWER SUPPLYING

A. Hand-Cranking

- Turn the Hand Crank for 3-5 minutes to activate the internal battery for initial use. While cranking the unit, the charging indicator will turn green.
- Turn the Hand Crank continuously inclockwise or counterclockwise at speed of 130-150 RPM to generate power, it will be fully charged in 4 hours.
- One minute of cranking supports 20 minutes of light or 10-15 minutes of radio playing at medium volume.
- B. USB Port Charging
- Recharge it via supplied USB cable.
- Connect USB power (such as AC/DC adapter or computer USB power port) and the USB Type-C jack of the radio with the supplied USB charging cable.
- . The charging indicator is always green during charging while goes off after being fully charged.
- It takes 4.5 hours to fully charge the internal Li-ion battery. C. AAA Battery
- · Remove batteries case cover, load the batteries inside correctly.
- Push the Battery Switch to CELL BATT position and then close. batteries case.

This radio supporting with 3 AAA batteries (not included).

- SPECIFICATION Dimensions: 133*51*63mm/5 2*2*2 5inch
- Unit weight: 217g/0.48lb
- · Radio Frequency Range: AM: 520~1710kHz
- FM: 87~108MHz
- NOAA: 162.40~162.55MHz Working Voltage: 2.7-4.2V
- Rechargeable battery:1200mAh /3.7V Li-ion
- Dry battery size: 3*AAA(Not included)

RF ENERGY EXPOSURE AND PRODUCT SAFETY GUIDE



Before using this radio, read this guide which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.

Local Government Regulat

When radios are used as a consequence of employment, the Local Government Regulations requires users to be fully aware of and able to control their exposure to meet occupational reguirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your Retekess radio has a RF Exposure Product Label. Also. vour Retekess user manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.



Changes or modifications not expressly approved by the party responsible for compliance may void the use

by the local government radio management departments to operate this radio and should not be made.

the corresponding requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed service as certified by an organization representative of the user of those services

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the local government radio management departments equipment authorization for this





HENAN ESHOW ELECTRONIC COMMERCE CO., LTD.

7/F, Sanjiang Building, No.170 Nanyang Road, Huiji District Zhengzhou, Henan, China Facebook: facebook.com/
RetekessRadio
E-mail: support@retekess.com

Web: www.retekess.com



radio could violate the rules.

FCC Requirements:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- (If applicable) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Requirements:

 (Simple EU declaration of conformity) Henan Eshow Electronic Commerce Co.,Ltd declares that the radio equipment type is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and the ROHS Directive 2011/65/EU and the WEEE Directive 2012/19/EU; the full text of the EU declaration of conformity is available at the following

internet address: www.retekess.com.

Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

Avoid Choking Hazard



small Parts. Not for children under 3 years

Protect your hearing:



- see the lowest volume necessary to do your job.

 Turn up the volume only if you are in noisy
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.

 When using the radio without a headset or
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss

Note: Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's

volume, the less time is required before your hearing could be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect.

Approved Accessories



- This radio meets the RF exposure guidelines when used with the Retekess accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the RF exposure guidelines and may violate regulations.
- For a list of Retekess-approved accessories for your radio model, visit the following website: http://www.Retekess.com

Guarantee

Model Number:	
Serial Number:	
Purchasing Date:	
Dealer:	
User's Name:	Telephone:
Country:	
Address:	
Post Code:	

Remarks

RETEKESS

- This guarantee card should be kept by the user, no replacement if lost.
- Most new products carry a two-year manufacturer's warranty from the date of purchase.
- 3. The user can get warranty and after-sales service as below:
- Contact the seller where you buy.
- Products Repaired by Our Local Repair Center
- 4. For warranty service, you will need to provide a receipt proof of purchase from the actual seller for verification

Exclusions from Warranty Coverage:

- 1. To any product damaged by accident.
- 2. In the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs.
- If the serial number has been altered, defaced, or removed.