USING THE APP - ADDING SPEAKERS

Adding Speakers

- 1. To add another speaker to your speaker network, turn ON the speaker you would like to add.
- 2. In the "Wi-Fi Speaker" app, go to the Device List page and hit the [+] button at the top-right corner of the page.
- 3. Follow the steps to add a new speaker within the app (please refer to the steps for adding a device on pages 4 and 5, "Connecting to a Wi-Fi Network," for further assistance).

NOTE: If you are adding speakers to a main speaker that is NOT on a Wi-FI network (see page 6, "Connecting Without a Wi-FI Network"), the main speaker does NOT have a password by default. To set a password please see page 19, "The Device Settings Page."

4. The new speaker will appear on the Device List page.


With multiple speakers added to your speaker network, you can use them in separate rooms to play music throughout your home or office or you can set them up to create a stereo sound system.

Connecting Without a Wi-Fi Network

When there are no available Wi-Fi networks, you can still connect to the speaker via Wi-Fi to play music locally or to configure/set up speakers and stream music with Bluetooth or via AUX.

- 1. Long press the [७/>॥] button to turn the speaker ON. A voice will be heard, indicating that the speaker has power and the Wi-Fi LED will flash BLUE.
- 2. After 10-15 seconds, a tone will be heard, indicating that the speaker is ready to connect to a Wi-Fi network.
- 3. Locate the speaker's Wi-Fi network through your device's Wi-Fi menu and connect. The speaker will be labeled PWFSK2000XX_YYYY, where XX is an abbreviation denoting the color of the speaker and YYYY is a 4-digit, randomly-generated number used to identify individual speakers. Then, start the "Wi-Fi Speaker" app. The "Wi-Fi Speaker" app will prompt you to enable your Wi-Fi settings if you haven't already. In order to distinguish between speakers, the first connected speaker is considered the "Main" speaker. To add new speakers to the main speaker, please refer to page 17, "Adding Speakers."

Once connected, you can add/remove or configure your speakers and play music locally but cannot stream music because the speaker is NOT connected to the internet, it is just connected to the speaker's Wi-Fi signal.

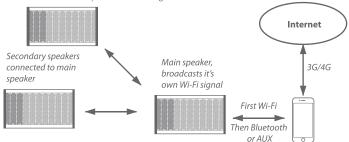

- 4. To connect to the internet, **DISCONNECT** your mobile device from the speaker's Wi-Fi signal, close the"Wi-Fi Speaker" app and access 3G/4G mobile data network. Note that the Wi-Fi LED is still solid BLUE. This means that the speaker network is still established and configured as you set it.
- Quick press the [M] button on the main speaker to change to either Bluetooth or AUX mode and connect accordingly (see page 7 for Bluetooth connections and page 8 for AUX connections).
- 6. Open an app to stream and play music.

NOTE: There are limitations to connecting this way. You cannot stream different music to different speakers and you will be unable to reconfigure or add/remove speakers as long as you are connected via Bluetooth. This changes can ONLY be made when connected via Wi-Fi.

PAIRING THE SPEAKER WITH BLUETOOTH

- 1. Turn the speaker ON by long pressing the [७/▶||] button. A voice will be heard and the Wi-Fi LED will turn BLUE. Quick press the [M] button, the Bluetooth LED will flash BLUE.
- 2. Set your Bluetooth-enabled device to search for Bluetooth devices. Select PWFSK2000xx from the list of found devices.
- 3. After a successful pairing, a voice will be heard and the Bluetooth LED will turn solid BLUE to indicate that the speaker and device are ready to use.

On an iOS or Android Device

• Go to SETTINGS > BLUETOOTH (Make sure Bluetooth is turned ON)







The screenshots above are typical of many current Bluetooth-enabled devices, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the device may differ slightly from the illustrations in this user guide.

USING THE APP - THE DEVICE LIST PAGE

Device List Page

To open the Device List page, either press the [DEVICE NAME] button on the Now Playing page or swipe to the left to open. All nearby PWFSK2000 speakers will be listed here.

- 1. [+] Button: Add another device 6. [@] Button: Settings menu
- list*
- 2. [] Button: Update/refresh device 7. [] Button: Speaker configuration
 - toggle
- 3. Device Pane

8. [Play All] Button: Play/pause media

4. Device's Name

through all

5. Volume Adjustment Slider

- connected devices
- *-The [G] button is only on the Android version of this app. To refresh the device list on iOS devices, swipe the Device List page down until it refreshes.



Set Speaker Configuration [○]

You may set a speaker in the Device List as a Left, Right, or Stereo speaker by pressing the [] button.

Device Settings [⊚]

Pressing the [1 button in a device's pane will open up a menu allowing you to rename the speaker and view the speaker's info.

USING THE APP - THE SIDE BAR (cont'd)

TuneIn Radio

TuneIn Radio is an Internet radio service that allows you to play radio stations from around the world through the "Wi-Fi Speaker" app to your speaker(s).

iHeartRadio

iHeartRadio Radio is an Internet service that allows you to play radio stations from around the world through the "Wi-Fi Speaker" app to your speaker(s).

Spotify

The Spotify option in the sidebar will open up the Spotify app on your phone and allow you to stream music from it to your speaker network. This app must be installed to your phone and will require a registered account.

Visit www.spotify.com for more details.

Tidal


Using your Tidal login, you can stream Tidal radio stations through the "Wi-Fi Speaker" app to your speaker(s).

Visit www.tidal.com for more details.

CONNECTING THE SPEAKER WITH AUX


To use the speaker as a wired device, attach one end of the 3.5mm auxiliary cable to the AUX jack on the back of the speaker. A voice will be heard, indicating that the speaker is now in auxiliary mode and the AUX LED will turn BLUE. Attach the other end to the headphone jack on your mobile device or computer.

Media playback is controlled through the attached device; however, volume adjustment can still be controlled with the [-] and [+] buttons on the speaker.

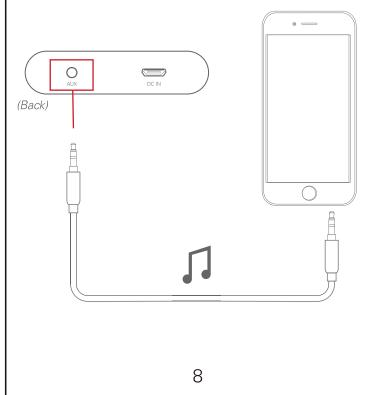

CHARGING THE SPEAKER

Attach the small end of the micro USB cable to the micro USB charging port on the back of the speaker and attach the larger end to your computer or USB adaptor or charging device (5V). The charging LED indicator will turn RED while charging and turn GREEN when fully charged. Detach the micro USB cable when finished.

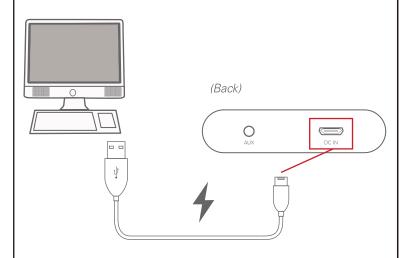



Make sure you charge the speaker for at least 3 to 4 hours before using it for the first time.

The Sidebar

To open the side bar menu, swipe to the right to open.

Favorites

Search through all songs that you have marked as a "favorite."

My Music

The My Music page will show all music that is installed on your mobile device, playlists you have created inside the "Wi-Fi Speaker" app, and any recently played songs.


Settings [@]

The Settings page on the sidebar menu allows you to toggle what apps appear in the sidebar menu.

Press the button at the end of an app's name to make it appear or disappear on the sidebar menu.

Pandora

You can stream to your speakers using the Pandora app. Use your Pandora account to log in to the app.

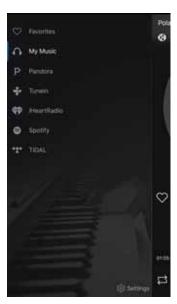

USING THE SPEAKER

Before using the "Wi-Fi Speaker" app, please make sure that it is properly installed and connected to your mobile device (see the "Installing the App" on page 12 and "Connecting the Speaker with Wi-Fi" on pages 3 - 6 for further assistance).


Now Playing Page

1. **[Device Name]**: Opens device list page

USING THE APP - NOW PLAYING PAGE

- 2. [🏈] Button: Marks the track as a favorite track
- 3. [:≡] Button: Opens the current playlist
- 4. Seek bar

- 5. [⇄/⇄/⇉]: Toggles between repeat track, repeat track once, and shuffle play order
- 6. [⋈] Button: Skip to previous track
- 7. [▷] Button: Play/Pause
- 8. [] Button: Skip to next track
- 9. [4)] Button: Adjust device volume

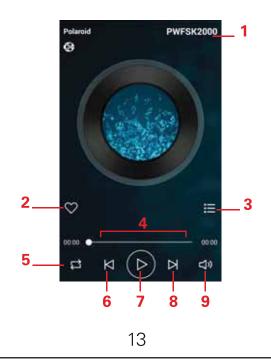

Powering ON/OFF

- Turn the speaker ON by long pressing the [७/▶||] button. A voice will be heard, indicating that the speaker is powered ON.
- Turn the speaker OFF by long pressing the [₺/▶||] button. A voice will be heard, indicating that the speaker is powered OFF.

Changing Between WI-FI, Bluetooth, and AUX Mode

- To change between Wi-Fi and Bluetooth mode, quick press the [M] button. A voice will announce the mode the speaker is in and the corresponding LED indicator will turn ON.
- To switch to AUX mode, first attach the 3.5mm cable to the AUX jack on the back of the speaker. See the "Connecting the Speaker with AUX" on page 8 of this user guide for further assistance. Quick press the [M] button while the 3.5mm AUX cable is connected to change back to Wi-Fi or Bluetooth.

Search for WI-FI

• Long press the [M] button to search for Wi-Fi networks. A voice will be heard, indicating that the speaker is searching for Wi-Fi connections.

10

USING THE SPEAKER (cont'd)	DOWNLOADING AND INSTALLING THE APP
Playing/Pausing Music • Quick press the [७/▶] button to pause the music. • Quick press the [७/▶] button again to resume music playback.	The "Polaroid Wi-Fi Speaker" app is compatible with Android 4.0 and above and iOS versions 6 and above. The "Wi-Fi Speaker" app is required to configure multiple speakers and offers many other functionalities.
Skipping Songs • Press the [◄] button to go to the previous song. • Press the [▶] button to go to the next song. Adjusting the Volume • Press the [-] to decrease the volume of music playback. • Press the [+] to increase the volume of music playback.	Wi-Fi Speaker Android Devices 1. Open the Google Play Store app. 2. Search for the "Polaroid Wi-Fi Speaker" app and press the "Install" button. If prompted to allow any additional permissions, hit "Accept." 3. The app will install automatically after downloading. Once installed, it is ready to use.
	 Apple Devices 1. Open the App Store. 2. Search for the "Polaroid Wi-Fi Speaker" app and press the "Get" button, then "Install." 3. The app will install automatically after downloading. Once installed, it is ready to use.
11	12