

Tablet PC

QUICK START GUIDE



Content

Introduction.....	1
1. Power On/Off.....	2
2. Desktop.....	2
3. Standby mode (Screen off mode) /Unlock the screen.....	2
4. System settings.....	3
5. How to connect/disconnect the device with/from the computer.....	10
6. How to install Applications(.apk file) into the device.....	11
7. How to make desktop icons.....	12
8. Change Input Method.....	13
Specification.....	15

Introduction

This manual contains important safety precautions and information of correct use.

Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.

Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accident.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place:

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.
- The device shows  on the bottom right corner.

1. Power On/Off

- Long press power button to turn on/off the device, it may take a minute to boot the device.
- Short press power button to turn on/off the screen. (Standby mode Refer to 3 below)


2. Desktop

- After turning on the device, desktop displays with shortcut icons and arrow panel at the left bottom corner



3. Standby mode (Screen off mode) /Unlock the screen

- Short press the power button to turn on/off the screen(standby mode on/off)
- After standby mode , slide the lock icon in order to unlock the screen.

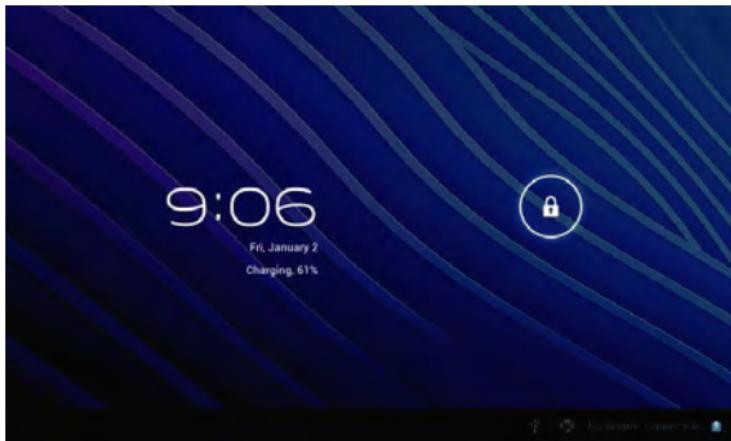

4. System settings

- On the desktop, press menu button and select settings




1.1 Wireless & networks



WIFI : Press WIFI to turn on /off Set up each setting as you like.

Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

1.2 Sound

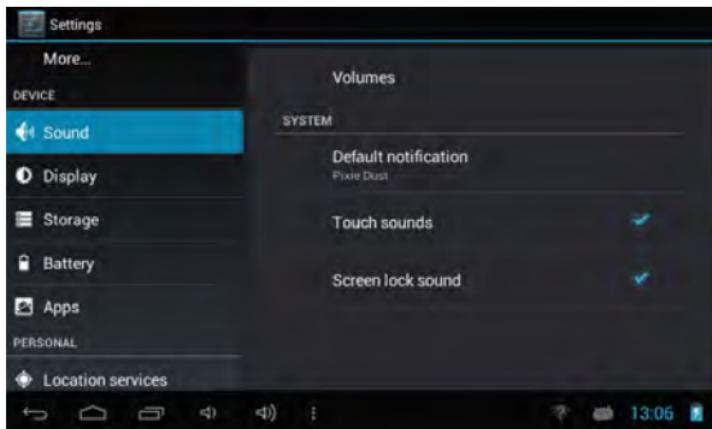

1.3 Display



Set up each setting as you like.

1.4 Storage



Check device memory and micro SD card status. Unmount SD card – Unmount the SD card for safe removal.

1.5 Battery

Check battery usage status.



1.6 Apps


Manage downloaded or running applications.



Downloaded : All installed application are listing.



Running : View and control currently running services.

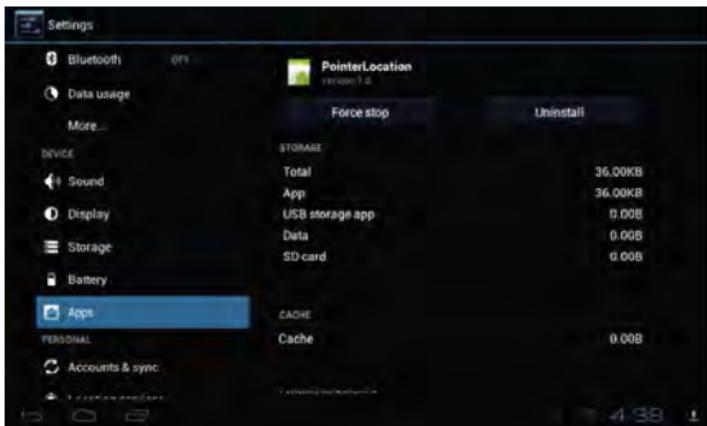

Keep pressing an application to manage. Press Uninstall to uninstall the selected application.

1.7 Account & sync

Create your account. After connecting Wi-Fi network, the e-mailing system

synchronizes your account with the device. Emails are automatically downloaded into the device.


1.8 Location services

Google's location service : Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

1.9 Security

Screen lock : Protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords visible – Show password as you type.

Unknown sources : If you want to allow installation of non-Market Applications, Press Unknown sources and presses OK

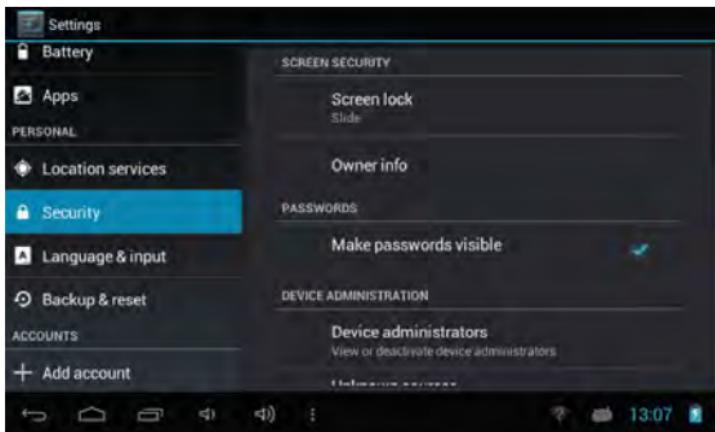

Install from SD card : Install encrypted certificates from SD card.

1.10 Language & input