

**Language** :Choose your preferable language.

**Keyboard & input method** : Change keyboard & keyboard settings.

On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

### **1.11 Date & time**

Set date & time and format

### **1.12 Developer options**

Set options for application development

### **1.13 About tablet**


See status, legal information, ETC


## 5. How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC, touch right side of the status bar on the bottom of desktop



Press “USB connected”, select “Turn on USB storage”. The device is recognized at Explorer of the computer. Now you can use it as an external storage

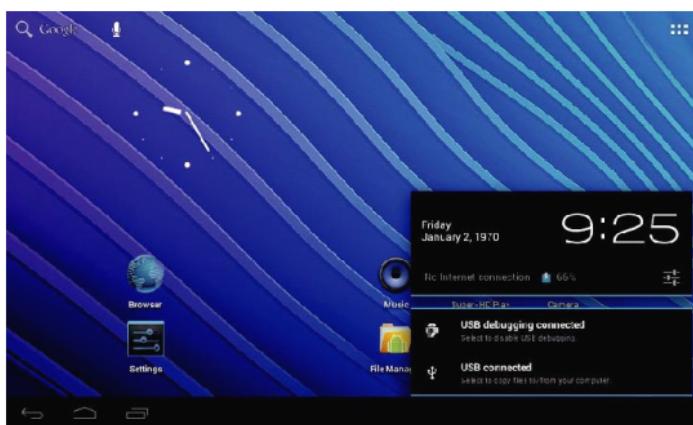

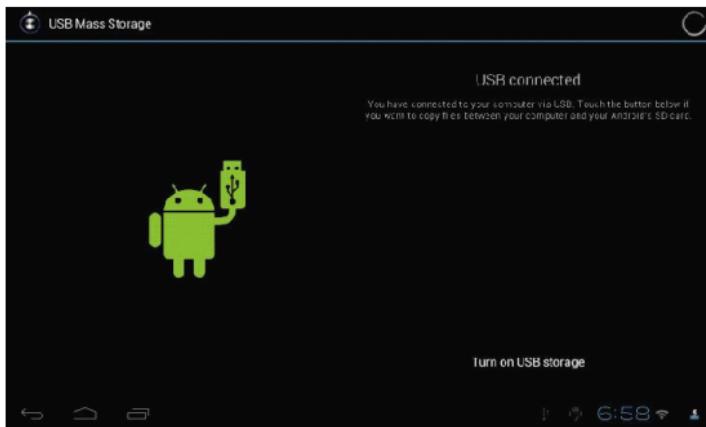

After finishing your work, press “Turn off USB storage” to unmount it.

## **6. How to install Applications(.apk file) into the device**

### **Method 1.**

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “Getjar” and search the applications you want to install.
3. Follow the instruction on the screen for installation.

### **Method 2.**

1. On your computer, search application file(.apk) that you want to install into the device
2. Download the file(.apk) into your computer
3. Connect the device with your computer.

See above [How to connect/disconnect the device with/from the computer.]

4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run “File browser” and .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.


## 7. How to make desktop icons

Press the upper right side icon of desktop, the pop-up displays.



## Shortcuts

Long press your desired APK icon and put it on the desktop.

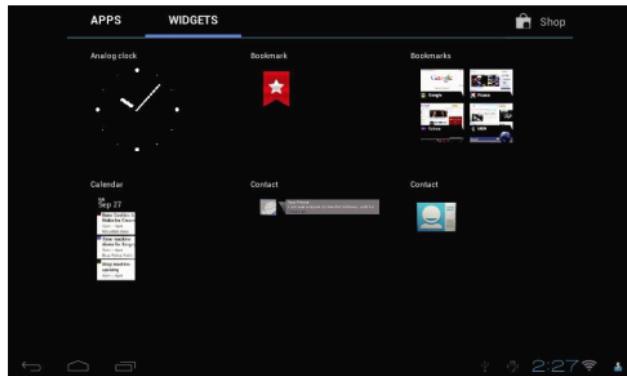

## Widgets

Press Widgets and press your desired icon to put it on the desktop.


## Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper.

Select one you desire and press Set wallpaper.

## 8. Change Input Method

If your device was installed with other more input method, long press setting icon of keyboard, and the pop-up displays.

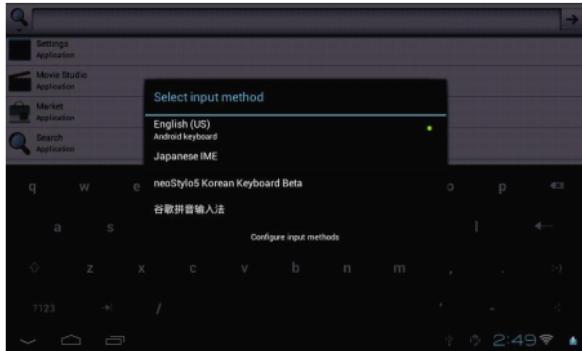

Select the installed keyboard, then the keyboard will appear with your desired language you installed.

<b>Specification</b>		
O/S	Android 4.2 Jelly Bean	
CPU	BOXCHIP A13 Cortex A8 1.2GHz	
RAM & Flash	DDR3 512MB, 4GB flash	
Display	7" LCD 800*480 Capacitive multi-touch panel	
IO PORTS	Micro SD slot	2 / 4 / 8 / 16GB
	Audio port	3.5ø earphones
	USB port	1 x 5pin micro USB port (support USB host and OTG)
	OTG port	Same with USB port
	Button	Power, VOL-, VOL+, reset,
Speaker	1.5W, Frequency response : 20Hz – 20k Hz, N/S : >85%	
G-sensor	Yes	
Camera	Front 0.3M pixel, Rear 2.0MP pixel	
Wi-Fi	802.11b/g/n	
Power	Adaptor 5V -2A	
Battery	3.7V Li-Polymer	
Dimension	192x 117 x 11.5mm	
Charging time	by charger	approx. 3~4hours

**FCC warning statement.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. ”.