



**Battery Precaution**

1. The 3.6V rechargeable battery pack must be charged before use by utilizing the battery charger which included.
2. Do not overcharge the battery pack. Do not charge for more than 6 hours.
3. Do not charge the battery pack if it shows leakage, corrosion, or has loose or exposed wires or other damage.
4. Do not cover the battery pack with any sort of materials while charging.
5. Do not touch the battery pack when it is hot. Wait until the battery pack cools before installing it in the Vehicle and before recharging.
6. Do not dispose of the battery in fire.
7. Do not dismantle the battery or charger, and do not cut the battery or charger cables.
8. The battery pack will be warm after charging, and not after use in a vehicle.
9. The supply terminals are not to be short-circuited.
10. Rechargeable batteries are to be removed from the toy before being charged.
11. Rechargeable batteries are only to be charged under adult supervision.
12. Battery replacement must be only made by adults.
13. The transformer (charger) is not a toy.
14. Charge only type (700mAh Max.) rechargeable battery packs. Other types of batteries may burn causing injury to persons and damage. This power unit is intended to be correctly oriented in a vertical or floor mount position. This charger is intended to be used for charging 3.6V rechargeable battery pack with capacity 700mAh Max. It cannot be used for charging non-rechargeable batteries. Regular examination of battery charger for any damage to their cord, plug, enclosure and other parts, and that, in the event of such damage, it must not be used with the charger or battery pack charge until such damage has been repaired. Note that the 9V battery is non-rechargeable and is not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. It will need replacement when transmission is poor.
15. Exhausted batteries are to be removed from the product.

**Charging the Rechargeable Battery Pack for the Vehicles**

1. Connect the 3.6V rechargeable battery pack to the battery charger.
2. Plug the charger into the standard AC socket.
3. The charging time for a full charge is about 5 hours.
4. When charging is completed, unplug the charger from the AC socket.
5. Disconnect the rechargeable battery pack from the battery charger.

**Cautions**

1. Do not attempt to disassemble the Vehicle or Transmitter.
2. Do not operate the Vehicle with same frequency with other player(s) in same location that will interfere and make the Vehicle out of control.
3. Make sure the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
4. Remove the package and take out all accessories before giving the Vehicle and Transmitter to child to play.

**FCC label compliance statement:**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The packaging and instruction manual contain important information. Please keep them for future reference.

Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts.

We reserve the right to improve/modify specifications and colors without notice.

Warning! The Antenna of vehicle is not to be inserted into socket outlets.

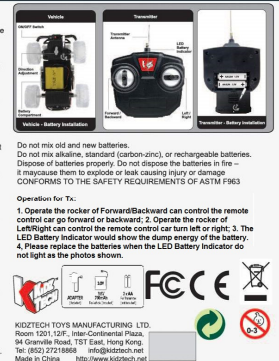

Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.  
Dispose of batteries properly. Do not dispose the batteries in fire - it may cause them to explode or leak causing injury or damage.  
CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963

**Operation for TX:**

1. Operate the rocker of Forward/Backward can control the remote control car go forward or backward; 2. Operate the rocker of Left/Right can control the remote control car turn left or right; 3. The LED Battery Indicator would show the dump energy of the battery; 4. Please replace the batteries when the LED Battery Indicator do not light as the photos shown.

KIDOTECH TOYS MANUFACTURING, LTD.  
Room 1201, 12/F, Inter-Continental Plaza,  
94 Grenville Road, TST East, Hong Kong.  
Tel: (852) 27218868 info@kidotech.net  
Made in China http://www.kidotech.net