





You can find the electronic version of this user guide at [www.minnotablet.com](http://www.minnotablet.com). Viewing the electronic version requires you to install Adobe Reader, downloadable for free from [www.adobe.com](http://www.adobe.com). This manual contains important safety and product information for your MINNO tablet. Please read carefully before use.

MINNO reserves the right to improve the product, product specifications and design without prior notice.

**Note:** All pictures in this manual are for reference only. Product specifications and design are subject to change without notice.





## Contents

<b>Getting Started .....</b>	<b>4</b>
Device Overview.....	4
Turning your device on/off.....	6
Using the touch screen.....	6
Getting to know the Home screen... ..	8
Status Bar .....	9
Access Applications .....	10
Customize your device.....	11
<b>Tools and Applications.....</b>	<b>12</b>
Email.....	12
Home screen applications.....	12
Battery management .....	13
<b>Operational tips .....</b>	<b>14</b>
<b>Safety Notices .....</b>	<b>15</b>





## Getting Started: Device Overview



---

1	Front camera lens
2	Google search/voice search
3	Status bar
4	Lock/unlock screen
5	Applications menu bar

---





<b>6</b>	Speakers	<b>12</b>	Micro SD Card slot
<b>7</b>	Earphone jack	<b>13</b>	Power button
<b>8</b>	Microphone	<b>14</b>	Rear camera lens
<b>9</b>	Adapter port	<b>15</b>	Back button
<b>10</b>	Micro USB port	<b>16</b>	Volume + / - button
<b>11</b>	Mini HDMI port		



## Getting Started: Turning Your Device On/Off

To turn on your device, press and hold (2-3 seconds) the **Power button**.

**Note:** Fully charge the battery (6 hours or more) before first use (see Pg 13 for battery management).

To turn off your device, press and hold the **Power button**, then select **Power off →OK**.

## Getting Started: Using the Touch Screen

Your device is equipped with a 10 finger multi-touch screen.

**Note:** For optimal use of the touch screen, remove the screen protection film before using your device.

### Lock or unlock the touch screen

When first powering on or after not being used for a specified period the device will go to sleep and lock (touch screen will be turned off to prevent unintended operations).

To **lock** the touch screen, manually press the **Power button**.

To **unlock** the touch screen, turn on the screen by pressing the **Power button**, then press the **lock icon** and drag it to the right.



To manage screen lock preferences go to **Settings → Security → Screen Security → Screen lock**





## Touch Screen Control

### Pressing

Pressing the touch screen allows you to select a desired item or activate an application.

### Long pressing

Long-pressing, or holding, an application allows you to drag and drop the application or the application shortcut to another Home screen or to remove it from the screen. *\*Holding your finger on an application icon for approximately 2 seconds causes the icon to pop up slightly allowing you to drag it.*

### Pinching

Pinch or spread two fingers to zoom in or out of images on screen in **Gallery, Maps, or Places**.

### Scrolling

Use one finger to scroll back and forth between Home screens, through different images in the **Gallery**, or pages in open applications.

#### Note:

*To avoid scratching the touch screen, do not tap it with sharp objects.*

*Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.*


*Do not allow the touch screen to come into contact with liquids. The touch screen may malfunction in humid conditions or when exposed to liquids.*



## Getting Started:

### Getting to Know the Home Screen

Once the device has been turned on and the touch screen unlocked, you will see the **Home screen**.

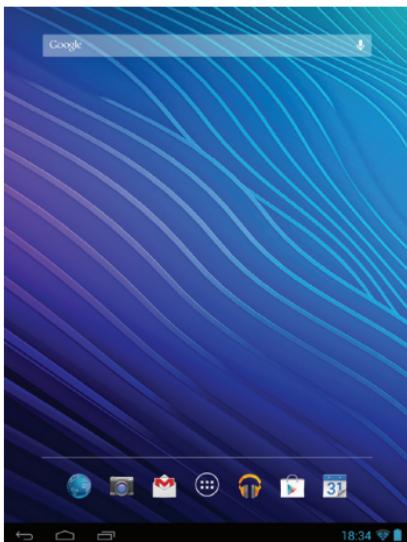

From the **Home screen** you can view your device's status and access applications. The Home screen has multiple panels that can be used to organize your programs and applications. Scroll left or right to view other panels.

See Pg 12 for more information on **Home screen** applications.





## Getting Started: Status Bar



- 1 **Return to previous screen**
- 2 **Return to the Home screen**
- 3 **Open list of active applications**
- 4 **Indicator Icons**

### Indicator Icons

Icons shown on the display may vary depending on your region or service provider.

	<b>Micro SD card icon</b> —appears when a micro SD card is inserted into the device.
	<b>USB icon</b> —appears when tablet is connected to a USB device.
	<b>WIFI signal indicator</b> —appears when device is connected to a WIFI network.
	<b>Battery icon</b> —shows remaining battery level or indicates battery recharging status.
	<b>Time</b> —shows current system time.
	<b>Airplane mode icon</b> —appears when Airplane mode is activated.
	<b>Email icon</b> —appears when new message arrives and Notifications are turned ON. (Press right corner of status bar then right corner of pop-up window to see Notifications settings)
	<b>Error icon</b> —appears when an error has occurred or caution is required.
	<b>Bluetooth icon</b> —appears when Bluetooth is activated.



## Getting Started: Access Applications

On the Home screen press the Applications icon  to open the Applications menu.

### Manage Applications

**Open** – Press any application icon to launch the application.

**Grab** – Long-press any icon in the Applications menu to drag it to the Home screen.

**Move** – Long-press any icon on the Home screen to drag and place it anywhere on the screen. Drag icons to other tablet screens by long-pressing the icon and dragging it to the left or right of the Home screen until you see a new screen appear. When you reach the desired screen let go of the icon to set it on that screen.

**Delete** – Long-press the application icon you want to delete and drag it to “X Remove” at the top of the screen. Hover over “X Remove” until the icon turns red and remove your finger to delete the icon.

**Download** – Press the **Google Play Store**  application to search and download Android™ applications for your device.

**\*You must sign in to Google or create a Google account to access the Play Store and to use applications that interact with the Google server.**




1:58





# Getting Started: Customize Your Device

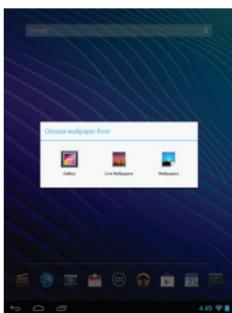

## Wallpaper

To change Wallpaper press and hold your finger on the Home screen to bring up the Wallpaper dialog box. Choose Wallpaper from available options.

## Settings

Press the Settings icon  to enter the Settings menu and customize your device.

Gently press your finger on the Settings list and move it up or down to scroll through Settings options.

### Change the display language

1. Go to **Settings** → **Language & Input** → **Language**
2. Select a language

### Adjust the device's volume

1. Go to **Settings** → **Sound** → **Volumes**
2. Drag the sliders to adjust the volume lever for each sound.
3. You can also adjust the volume by pressing and holding the Volume up and Volume down buttons on the tablet case (see Pg 5 for button locations).

### Adjust the brightness of the display

1. Go to **Settings** → **Display** → **Brightness**
2. Drag the slider to the adjust the screen brightness.

### Turn on Wi-Fi

1. Go to **Settings** → **Wi-Fi**
2. Press On/Off bar to turn Wi-Fi on or off.




## Tools and Applications: Email

To set up or sign up for a Gmail account open the **Gmail**  application on the Home screen, choose **Existing** if you already have a Gmail account or **New** to create a new account and follow the instructions on the screen to complete set up.

To set up a personal or company email account open the **Email**  application in the **Applications menu**, enter the email address and password for the email account you wish to add and follow the instructions on the screen to complete set up.

## Tools and Applications: Home Screen Applications

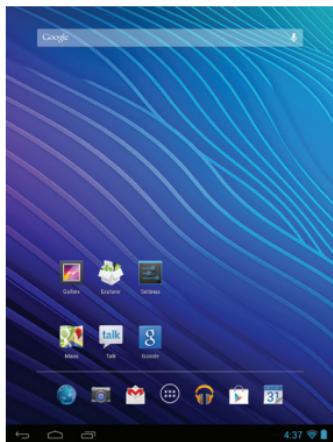

Press any **Home screen** application icon to start taking advantage of features on your device. You can reorganize the applications on the screen to match your preferences, move applications to other **Home screen** panels, add new application icons from the **Applications menu**, or **Download** applications from the Internet to enhance your device's functionality.

*See 'Manage Applications' on Pg 10 for more information.*





## Tools and Applications: Battery Management

Fully charge the battery for at least 6 hours before first use and whenever it is depleted to prolong battery life.

*\*Battery only needs to be charged 4 hours for subsequent charges and reaches maximum capacity after a few full charging and discharging cycles.*

When charging while the device is in use the battery icon will have a white lightening bolt in the center.  When fully charged the battery icon will turn solid blue.

When charging while the device is powered off a large battery icon will scroll from red to yellow to green on the screen as it charges. When fully charged, the battery icon will turn solid green.

Disconnect the power charger from the device when the device is fully charged.

To maintain optimum battery life, wait until the battery is low before charging.

### **Note:**

*To avoid battery damage charge the battery once a month, even when the tablet is not in use.*

*When the battery is very low the system will show an alert and automatically shut down when the battery charge has completely run down. If your tablet shuts down due to a low battery, connect the adaptor to recharge.*

*Charging should occur when the tablet has been shut down. The tablet can be charged while in use, but charging time will be longer.*





## Operational Tips

### Toggle Between Open Applications

Press  to display the list of active applications and select the application you wish to access. By doing this you can toggle between active applications without going back to the Home screen and/or closing the application that you are using.

### End Application Operation

Press  to display the list of active applications. Press and hold your finger on any application to open a drop down menu. Select **Remove from list** to end the operation of the application.

### Locating a Downloaded File

Press  to access the **Applications menu** then press  to see downloaded files.

### Android™

For more information about the Android™ 4.2 Jelly Bean operating system visit: [www.android.com](http://www.android.com).





## Safety Notices

- Keep device away from high temperatures, moisture and dust. Device is not waterproof and exposure to water could cause permanent damage to hardware.
- Keep device away from strong magnetic fields to avoid damage.
- Do not drop. Dropping can cause damage to the screen and device hardware.
- Choose appropriate volume when using headphones. If you experience discomfort or ringing in your ears lower the volume or stop using the device.
- Charge the device under the following conditions.
  - The Battery icon shows that the battery is run down.
  - The system automatically shuts down or powers off quickly after Startup.
  - There is no response from the Power button or other operation buttons.
- Do not suddenly turn off or disconnect the tablet from the power adaptor when formatting, uploading or downloading files as this could cause data loss and application or system errors.
- Do not disassemble the device.
- Do not use alcohol, paint thinner or benzene to clean the device.
- Do not use the device in places where the use of electronic devices is prohibited. Comply with any restrictions placed on the use of wireless equipment.
- The performance of the wireless reception of the device could be influenced by the wireless equipment and networks.
- Only allow qualified maintenance personnel to repair or service the device.
- Only use the original accessories and battery. Incompatible accessories may cause damage to the device.
- To keep your data safe and secure back up all important information on your device or keep a handwritten record of its contents.

## Support

If you have any questions about your MINNO that aren't answered in this user manual please contact us for support:

[support@minnotablet.com](mailto:support@minnotablet.com) • [www.minnotablet.com](http://www.minnotablet.com)





All rights reserved, MINNO ©2013.

This guide and/or any information and/or any portion thereof may not be photocopied, reproduced or used in any other way without prior written approval from MINNO.



## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.