

User's Guide

Table of Contents

1. INSTALLATION.....	2
➤ ACCESSORIES INTRODUCES	2
➤ BATTERY CHARGING.....	3
➤ INSERT A MEMORY CARD	3
2. FUNCTIONAL MENU	4
➤ FILE MANAGEMENT	4
➤ BROWSER	4
➤ SETTINGS	5
➤ GALLERY	6
➤ CAMERA.....	7
3. FAQS AND SOLUTIONS.....	7

1. Installation

➤ Accessories introduces

Check whether there is a box products within the following items:

MID

Battery

With MID provide goods may be different, depending upon the area where you can use or service providers are provided for the software and accessories.

➤ **Battery charging**

Use the MID for the first time, you must charge the battery.

Only use this MID charger and data cable.

Unauthorized charger or data cable can cause the battery explosion or damage to your MID.

The battery is low, the MID will issue a warning tone and display the low battery message. If the battery is too low, the MID will automatically shut down. Need to charge the battery in order to continue to use the MID.

➤ **Insert a memory card**

If you store more multimedia files, you must insert a memory card. The MID can use a microSD or a microSDHC memory card capacity up to 32 GB (depending on manufacturer and type of memory card).

Remove the memory card

Remove the memory card before you uninstall the memory card for safe remove.

Formatting memory card

Format the memory card on the computer may lead to memory card and the MID is not compatible. Only on the MID to format the memory card.

2. Functional Menu

➤ File Management

The file management is composed of SD sdcards and MID storage, while MID storage is the memory of the MID, SD sdcards are the external SD cards. In the file management, files can be searched rapidly, deleted or edited in each card and new files can be created.

➤ Browser

The browser allows you to surf on the net and browse the page just like on the computer. You can create on the MID a bookmark and

synchronize it with computer. You can have a quick access to your favorite sites on the main screen.

➤ **Settings**

Reach the menu and customize your MID settings.

WLAN: WLAN can be turned on and off and made some settings.

Bluetooth: Bluetooth can be turned on and off and settings are made.

The information flow usage: It makes you in full awareness of the usage of the information.

Audio profiles: General, silent, meeting and outdorr optional. In the meanwhile, customized setting-up of some scene modes are allowed.

Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.

Display: Customized setting-up of the MID luminance, screen time-out and font size is allowed.

Storage: The internal memory of the storage

card and of the MID is shown.

Battery: The usage detail of the battery is shown.

Applications: View, manage and delete the applications on your MID.

Location access: Set the service during the locating. Activate or deactivate the GPS connection.

Language and keypad: Select a language and input method.

Date and time: Set current time and date.

Schedule power on/off: set the time to turn on or off your MID.

Auxiliary function: Some auxiliary functions can be set.

Developers' options: Set some options used by developers.

About MID: View the model, service status, mobile software and hardware information, etc.

➤ **Gallery**

Gallery is a picture manager that typically exhibits miniatures, supports the features of “save picture”, “set pictures as desktop” and “share

picture”.

➤ **Camera**

Your MID provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as image stabilization, face embellishment, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.

3. FAQs and Solutions

If you have any questions about the MID, please find the solutions from the table below.

FAQs	Causes	Solutions
Shorter standby time	The standby time is relevant to network .	In poor reception areas, turn off your MID temporarily.
	Replace the batteries	Change with a new battery.

Failed to turn on your MID	The battery power is used up.	Check the battery power level or charge the battery.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10°C or above 55°C.	Change the environment.
	Poor connection.	Check whether the plug is properly connected.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.