

Size: 5.875" x 8"

Color: Black

SPY NINJAS™

CHAD WILD CLAY™
& VY DWAIN™

REMOTE CONTROL DECOY DEVICE

Ages 6 and up

Item #41208

SN-30

Playmates
TOYS

© 2022 DAVCHY IP HOLDINGS, LLC
©2022 Playmates, Playmates International Company Ltd.
23/F, The Toy House, 100 Canton Road, TST, Kowloon,
Hong Kong. PRINTED IN CHINA.
Please keep all relative information for further reference.

Distributor - US Market Only


Playmates Toys Inc.
909 N. Pacific Coast Highway,
Ste 800 El Segundo, CA 90245
Email:
toys@playmatestoys.com

What's up Spy Ninjas? Are you ready for a Decoy Mission? Let's confound Project Zorgo and cause a diversion!


This new Remote Control Decoy Device allows to you play a variety of sounds and phrases from the Decoy Disc hidden in another room!

Place the Decoy Disc under a chair or on a book shelf - then from out of sight, choose a Spy Ninja Sound to play when Project Zorgo thinks they are alone!


The Remote Control Decoy Disc can snap on and off the Decoy Housing when ready to hide.

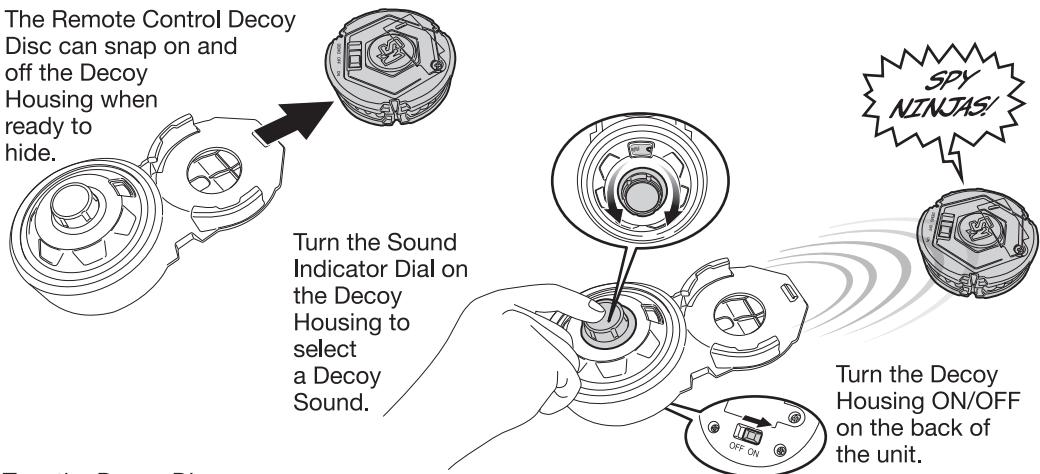

Turn the Decoy Disc ON/OFF on the back of the unit.
DEMO mode for shipping only.

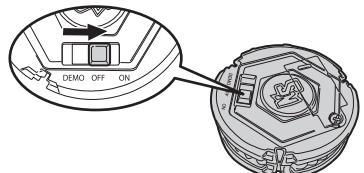

Press down on the SN logo in the center of the Decoy Housing Indicator Dial to transmit the selected Decoy Sound to the Remote Control Decoy Disc.

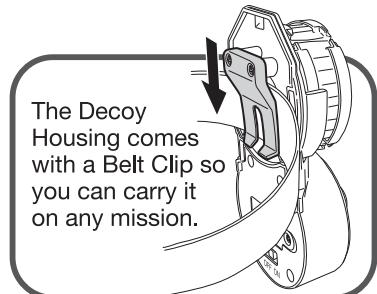

Size: 11.75" x 8"

Color: Black

If Remote Control Decoy Device is not working, try replacing the batteries.


To change batteries:

- Unscrew battery cap.
- Take out old batteries and replace with 3 new AG13/LR44 batteries.
- Replace battery cap.

Battery Instructions:

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct + and - polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.
- For electric toys using rechargeable batteries, the batteries should be charged under adult supervision.
- Batteries are only to be charged by persons of at least 8 years old.

Adult supervision is required to replace batteries.

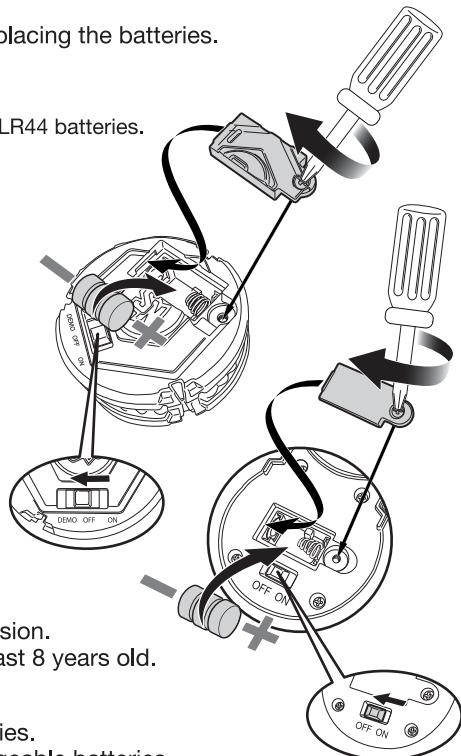

Batteries Regulation: Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Under the environment with severe electrostatic discharge, the product may malfunction and requires user reset.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.