

**TRAVELTEK**

**USER MANUAL**  
**CA908**




---

**Table of contents**

OVERVIEW.....	3
SAFETY INSTRUCTIONS.....	4
Main Functions .....	7
Basic Operations .....	8
Home screen .....	9
Install the APK application .....	11
Uninstall APK application .....	12
Movies .....	13
Camera .....	14
Music.....	15
Regular Settings.....	16
DEVICE SPECIFICATION .....	18
Connect computer .....	19
Common Issues .....	20

## OVERVIEW

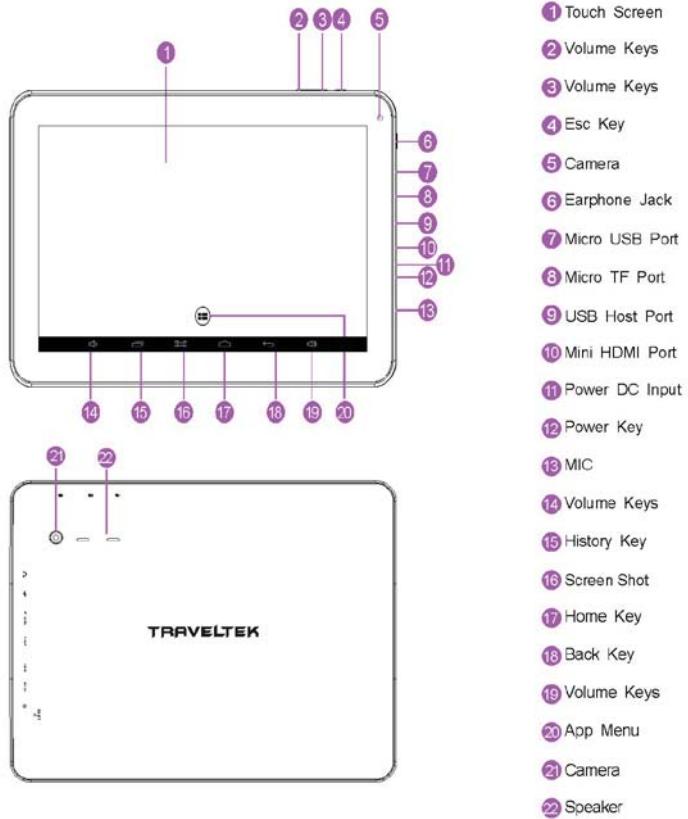

- ① Touch Screen
- ② Volume Keys
- ③ Volume Keys
- ④ Esc Key
- ⑤ Camera
- ⑥ Earphone Jack
- ⑦ Micro USB Port
- ⑧ Micro TF Port
- ⑨ USB Host Port
- ⑩ Mini HDMI Port
- ⑪ Power DC Input
- ⑫ Power Key
- ⑬ MIC
- ⑭ Volume Keys
- ⑮ History Key
- ⑯ Screen Shot
- ⑰ Home Key
- ⑱ Back Key
- ⑲ Volume Keys
- ⑳ App Menu
- ㉑ Camera
- ㉒ Speaker

## Main Functions

- 5 Point Capacitive Touch
- Front 0.3MP/Rear 2.0MP
- Built-in microphone, super long time recording
- Support 3D games and function customization
- OS: Google Android 4.2.2
- Music play: support MP3, MP1, FLAC, APE, OGG, AAC
- Video play up to 720P: full format video supports RM,RMVB,AVI,MKV, MP4, MPG, 3GP
- Picture browse: support JPEG, JPG, BMP, PNG formats
- Support TF card function, (32GB Max)
- Support E-book reading, dependent bookmarks
- Automatically browsing, horizontal and vertical screen, Switching function
- Free set of energy-saving settings, display brightness, the interface background
- E-mail: Gmail, Email-client

At the bottom of the screen, you'll find the Navigation buttons. They're always available, No matter what you're doing with your tablet, you can always go back to the main Home screen or return to previous screens:

Icon	Name	Description
	Back	Open the previous screen you were working in, even if it was a different app. Once you back up to the Home screen, you can't go back any further in your history.
	Home	Opens Home. If you're viewing a left or right Home screen, opens the central Home Screen
	Recent apps	Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.
	App	From main page "All Apps" screen opens. This is where you can see all your apps, including those downloaded from Android market. You can move app icons to any of your Home screens.

## Basic Operations

### **1. Turn on**

A long press on the power button turns on the device.

### **2. Turn off**

Press & hold down the power button until the “power off” icon appears, touch this icon once & choose “OK” then the unit will shutdown.

### **3. Power Reset**

Crashes or freezing images may occur in the process of usage due to Smart operating system. Turn power off and restart to solve this problem or tap the RESET button to force shutdown then reboot if crashes or freezing images occurs again.

### **4. Screen Saver**

Press the power button, turn off the screen into the screen saver state, if you want to activate screen, press the power button again to enter the screen lock state, then slide the lock button to unlock.

### **5. Back to the desktop**

Tap the Home icon  on the lower part of the home screen, this will allow you to return to the desktop under any interface.

### **6. Back to the previous interface**

Tap the Back icon  on the lower part of the home screen and this will allow you to return to the previous desktop under any interface.

### **7. Settings**

Tap the Settings icon  on the lower middle part of the home screen to access all settings of the tablet. You can also gain access from the “All App” interface.

### **8. Charging**

Plug the DC connector of adapter into the DC-in of device. Plug the adapter into AC power socket. While charging, the device may heat up. This is normal and should not affect your device’s lifespan or performance. When the battery is fully charged (the charging icon is no longer moving), unplug the adapter driver from the device and then from the power socket.

#### [Warning]

Make sure the machine is on a single charge once a month. If you are not going to use the device for a long period, shut down the device after fully charged before storing it away.

Please do not use while charging.

Tips: using authorized accessories can enjoy adequate security to guarantee the good maintenance of the device.

Before using the device for the first time, you should charge the battery. The power adapter (charger) is a key component of the device and plays a vital role in protecting it to work properly and your safety.

Unauthorized chargers can cause batteries to explode or damage your device. Any damage caused by misuse voids the warranty.

## Home screen

1. By default, the home screen can open multiple pages; implied icons are "Browser" and "Camera", etc. Sliding left / right can switch desktop display.



### 2. Set wallpaper

Long press the blank space of the home screen, then pop up "Select Wallpaper from", Choose an image according to the categories.



### 3. Display all applications

All installed applications will be displayed if you tap "☰", this control is located at the bottom of the screen under the main interface.



**4. Notification bar**

Under the main interface, tap the status bar icon, such as USB connection into the notifications panel, which can display the current status of the USB, TF card status and the running application and status.

**5. Mobile Desktop icon**

Under the home screen, long press the application icon on the home screen, then you can move the selected icon after the icon is enlarged.

**6. Delete the desktop icon**


Under the home screen, long press the application icon on the home screen, move the selected icon to the trash can (or remove) icon in the upper middle of the screen after the icon is enlarged, then stop pressing when the icon area displays orange and the desktop icon can be deleted.

### Install the APK application

- 1.Copy the needed APK format application into the device or TF card.
- 2.Tap "File Manager" to find the APK format application you want to install.



3. Tap the APK format application you want to install, then pop up "Do you want to install this application?"

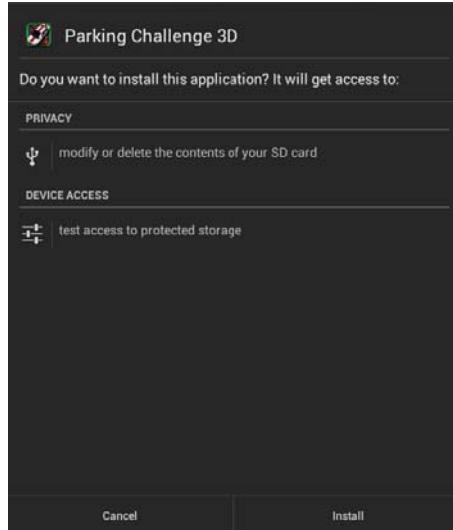


- 4.Tap "Install" to begin the installation of APK application

## Uninstall APK application

1. Tap "Settings" into Settings menu, then tap "Apps" and display installed applications list.



2. Tap the application you want to uninstall, pop up prompt uninstall boxes.

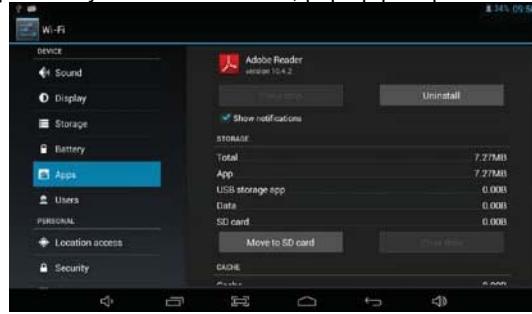

## Movies

- 1.Tap Video Icon in the home screen to enter the video library.
- 2.Play video: Tap the select video and wait a minute, after analysis, press  to play.
- 3.When the video plays, the screen display is as follows:



  : Vol+ / Vol-;

  : Play the previous file/ play the next file. Drag the progress bar to any time point

 : Play / Pause the video;

Tap  to enter the setting menu:

## Camera



From the main interface, click icon  To enter camera interface, show as follow.



Click the icon  To enter the photograph interface.

Click the icon  To choose the camera or video interface.

Click icon  To take photo.

Remark: it also can choose the photo/video function from the video player status.

## Music

Select "Music" in application bar access to music file list screen.



- Files: tap the music you selected and play music.
- Tap back to home screen, tap back to previous screen.
- Tap up and down to process page.
- Artist: display music files classified by Artist.
- Albums: display music files classified by album.
- Songs: display all music files.
- Play lists : display music files now playing:
- access to the background music player interface.

## Regular Settings

### 1. Select "settings" after access into application bar to see list of all apps and launch.

#### 2. WIRELESS & NETWORKS Wi-Fi function on or off

Wi-Fi settings set up and manage a network connection.

#### 3. Sound

Volumes: adjust the volume level for call ring-tones, music and videos, alarm ring-tones, device system, and notifications.

Default Notification: Choose default notification sound; choose to activate default notification for different functions.

Screen lock sounds: Set the device to sound when you lock the touch screen.

#### 4. Display

Brightness: Set the brightness of the display.

Wallpaper: Select wallpaper for the home screen.

Auto-rotate screen: viewing in portrait or landscape, adjusting automatically to fit the new orientation.

Sleep: set sleeping time.

Font size: set the size of the font.

Accelerometer coordinate system: set the accelerometer coordinate system.

Screen adaptation: used to adjust part of games' screen size.

#### 5. Storage

Displays the memory card and USB storage settings of available storage space.

#### 6. Battery

Displays the battery level or charging status.

Caution: Risk of explosion if battery is replaced by an incorrect type.

#### 7. Apps

View "DOWNLOADED", "ON SD CARD", "RUNNING" and "ALL" applications list, etc.

#### 8. Accounts & sync

Change the settings for the auto sync feature or manage accounts for synchronization.

#### 9. Location Services

Set to use the "Google's location service" and "Location & Google search" to gather and use date based on your location.

#### 10. Security

Screen lock: set screen lock and owner info.

Encrypt tablet.

Passwords: make passwords visible.

Device administrators: view or deactivate device administrators.

Trusted credentials: display trusted CA certificates.

Install from SD card: Install certificates from SD card.

Clear credentials: remove all certificates.

#### 11. Language & input

Language: Select a display language for all menus and applications.

Personal dictionary: Add a word by touching the Add (+) button KEYBOARD & INPUT METHODS: set keyboard and input methods.

SPEECH: Set the voice search and text-to-Speech (TTS) output

MOUSE/ TRACKPAD: set pointer speed.

## 12. Back up and reset

Back up my data and reset factory data.



## 13. Date & time

Set date and time.

## 14. Accessibility

Talk back: Set turn on /off Talk back.

Large text: display large text.

Auto-rotate screen.

Touch & hold delay: set the time of touch and hold delay.

Install web scripts: set whether to allow the installation of web scripts.

## 15. Developers options

USB Debugging: debug mode when USB is connected.

Stay awake: screen will never sleep while charging.

Allow mock locations.

HDCP checking: use HDCP checking for DRM content only.

Desktop backup password: Set the full desktop backup password.

Strict mode enabled: flash screen when apps operating do long operations on main thread.

Pointer location: screen overlay showing current touch data.

Don't keep activities: Destroy every activity as soon as the user leaves it.

Background process limit: standard limit.

Show all ANRs: show App Not Responding dialog for background apps.

## DEVICE SPECIFICATION

Specifications	
CPU	A20 Dual-Core,ARM Cortex A7@1.0Ghz
GPU	Quad-core ARM Mali 400 MP
Operation system	Android 4.2.2
Language	support multi-language
RAM	1GB DDR3
Storage Device	Nand Flash Standard 4GB
	Memory card Micro-SD(Support up to 32GB)
Gravity	4-Directions gravity sensing
Display Screens	9.7inch, 1024*768 pixel
WIFI	WIFI:IEEE802.11b/g/n wireless network
Touch Panel	Multi-touch Capacitive screen
I/O Port	Micro USB port ( OTG)*1, TF card slot*1, 3.5mm stereo headset*1, DC JACK*1, mini HDMI*1, HOST*1
Function Key	Power/Vol+/-Vol- /ESC
Camera	Front 0.3M/Rear 2.0M
Power adapter	5V,2A
Battery	5500mAh
Size	243.3*190.3*13mm

### Accessories

- 1.Quick Start Guide
- 2.Traveltek Warranty Card
- 3.Headphone
- 4.USB Connecting Cable
- 5.OTG cable x 2
- 6.AC ADAPTER

The company reserves the right to change/improve this device.

Information on the specification/design is subject to changes without prior notification.

(This tablet is not waterproof)

## Connect computer

The device could connect to PC via USB wire for data copy and delete.

1. Connect the device to PC port via USB wire, then it will show "USB connected" on PC screen.
2. Tap "USB connected" option, select "open USB storage setting", then you can see movable hardware icon which can be operated like using USB.



## Common Issues

### **1. Will not power up**

Check the batteries to see if it is out of charge. Checking after device is connected to the power adapter for 5 minutes, unplug and check, if it still can not turn on after charging 5 minutes, please contact the customer service center @ **1-800-985-7657** or visit our website [Http://traveltekusa.com](http://traveltekusa.com)

### **2. No voice in the earphone**

Make sure the volume is not turned down all the way.  
Unplug the headset, and then plug it in again. Make sure you push connector all the way in.

Make sure the file you are playing is not defective.

### **3. Charging issues**

Please make sure the charger is used according to instruction with the device.  
Front USB ports are not for charging. Power adapter is the only way this device will charge.

### **4. Download issues**

Make sure it connects with PC properly.

Do not use the front USB port to connect to PC.

### **5. Why some of downloaded videos can not play normally?**

The device is compatible with most of video file format, but there are still some differences in format, encoded mode, resolution and code rate etc. It could resulted in some of the videos not being able to play or have playing issues. Our suggestion is to use the third party adapter software for transforming in the PC to the correct format then copy to the device.

### **6. Device crashed or can't turn on**

Once device crashed during the running time, it can be restarted by using power button or by tapping the RESET button with a small thin point.

FOR ALL OTHER QUESTIONS REGARDING HOW TO USE THIS DEVICE  
PLEASE CALL OR contact the customer service center @ **1-800-985-7657** or visit our website [Http://traveltekusa.com](http://traveltekusa.com)

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

---

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help