

正面

- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on the cables while they are connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality.

Battery Warning:

Do not connect improperly.

Do not dispose of in fire or expose to excess heat.

Do not crush, puncture, incinerate, or short circuit external contacts.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

FCC Statement

FCC ID:2AAWNSP214136ABTS

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

5

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Sakar Warranty Card

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is not covered by warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other thean normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What to do when service is required

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of original bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

MAIL TO ADDRESS BELOW:

In the U.S.

Sakar International

Attention: Service Department

195 Carter Drive

Edison, NJ08817

www.sakar.com

For Australia Customers Only

Return faulty device to the refund counter at the store where purchased.

You may also visit sakar.com for further assistance if necessary or call our technical support department at 1-8773978200 in the US.

6

Glow Tunes Speaker
Instruction Manual



©2019 SAKAR INTERNATIONAL, INC. ALL RIGHTS RESERVED.

背面

Introduction

Thank you for purchasing this Bluetooth SPEAKER which can be used with iPad, iPhone, and most of smartphones with Android or ios system to listen to music wirelessly. Please read this manual first before use in order to get the best result.

Features and Specification

Stream and listen to your music wirelessly

Colorful flashing lights sync with music

Built-in rechargeable battery

Bluetooth version: V2.1

Operation range: up to 10 meters

Aux-in function

Play time: 5 hours approximately

Charging voltage: 5 volts DC

Size: 6*3. 25 inch


Package Contents

Glow Tunes Speaker

USB charging cable

Instruction manual

Parts and Control

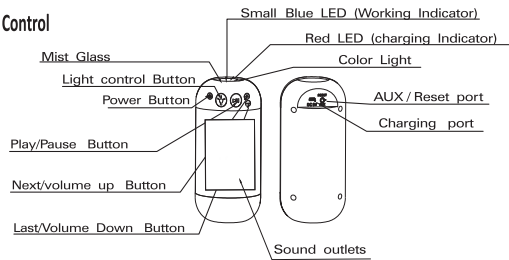

2

Operation Guide

1. Charge Your Speaker

- Charge your speaker by connecting the speaker to a USB port of a computer or a charger with the included USB charging cable.

- The red led lights up under the mist glass during charging, and goes out when fully charged.

Note: Icon of battery power will be displayed on the phone screen after pairing.

2. Pairing Your Speaker with a Bluetooth device

- Press the Power button for 2 seconds to turn on the speaker and activate the pairing mode of the speaker. The small blue LED turns on under the mist glass with quick flashing and the big color light also turns on at the same time.
- Go to the Bluetooth settings menu on your Bluetooth device (e.g. your phone or ipad,...). Make sure that Bluetooth is turned on. Connect to the device listed as SP2-14136A.
- The small blue LED turns to solid light as soon as they are paired and turns to slow flashing when music is played. Also, the big color light turns to sync with the music when music is played in case the color light is turned on.

Note: If pairing is not completed within several minutes, or the music stops for several minutes, the speaker will power off automatically. If this happens, turn off the speaker for 2 seconds then repeat the pairing steps above.

3. Using Your Speaker

- Turn on, turn off Your Speaker

Press the Power button for 2 seconds to turn on the speaker. If you have already paired your speaker to your Bluetooth device before, they will automatically remain paired each time you turn on your speaker. Press the Power button again for 2 seconds to turn off your speaker.

3

Controlling Music

You can adjust volume and playback settings on your paired device. And can also control on your speaker:

1. Play/ Pause: Press the Play/ Pause Button.
2. Short press the "+" or "-" button to play the next or the last track.
3. Long press the "+" or "-" button to increase or decrease the volume.

Note: When play audio through Aux-in jack, "+" or "-" only work for "volume up" and "volume down", can not control the "Next" and "Last" Song fuction. Also the "Play/Pause" Button only control the speaker, but can not control the paired device

Controlling Color Lights

When you Power On, the Lights Flash by three colors

Then Press Light Button become White Color

Second Press become No Lights

Then Back to Three colors flash

AUX IN

An Aux/ Reset (3.5mm ear phone jack) port is provided for connecting the audio source (e.g. MP3 player, mobile phone, computer,...) with an audio cable.

When the AUX IN jack is plugged, the voice "Line In" comes out and the audio connected to the AUX IN jack goes to the speaker. The audio from the Bluetooth stops till the AUX IN jack is unplugged.

Reset

There is a reset button switch installed at the bottom of the Aux/ Reset port. Should your speaker go out of control, please insert a tooth stick or a small screw driver into the port and press the reset button switch for 1 second to reset it.

Maintenance and Care

-Before using your speaker, inspect the ports/ jacks to make sure that they are clear of dust and debris.

-Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.

4