

Manual

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Getting Started

1. Check For Updates

To use the Apple Find My app to locate your item Locator, the latest version of iOS, iPadOS, or macOS is recommended.

2. Power On

Press the button on item locator, it should beep once indicating it is powered on and will be in pairing status.



3. Add Your Item Locator

3.1 Start the APP

Open Find My APP on your supported iPhone or iPad.

3.2 Connect your Item Locator

Step 1. Choose the "Items" tap and then tap on "Add Item". Or, tap on the "+" icon directly.



Step2. Tap "Other Supported items".



Step3. Make sure your item Locator is close to your phone. Wait... until you see "HB02", then tap "Connect". Follow the pop-up to fill name and select an emoji; then tap "Continue".




5. Function Introduction

Locate your Item

Find item Locator. Tap "Play Sound" to make your item Locator beep when it is nearby.

Find your item Locator's location.

Your item Locator's last known location will appear on the map as emoji you choose during set up, tap "Directions" to navigate to the last known location.

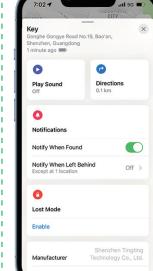

Find Item When Out of Range

- Enable the "Notify When Left Behind" toggle, you will receive a notification when you leave your item Locator behind and it is no longer in range of your device.
- Enable the "Notify when Found" toggle, when your item location is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: "Notify When Found" can only be activated when your item Locator is out of range.

WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.



WARNING

- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



Keep in original package until ready to use;
Immediately dispose of used batteries and keep away from children.
DO NOT dispose of batteries in household trash.

Button Function:

- 1. Power on (Findmy function is on). Press the button once to turn it on, it should keep out a ringing chime indicating it is powered on.
- 2. Replace the battery with a new CR2032 battery 3V (Positive pole upward).
- 3. Carefully close the item Locator.



Unwanted Tracking Detection:

If your phone detects that an unknown item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an item Locator is not connected to its owner's phone, so your partner's item Locator will not trigger a sound if they are with you.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

1. Power on (Findmy function is on). Press the button once to turn it on, it should keep out a ringing chime indicating it is powered on. If the product is not paired, it will be closed within 3 minutes. You need to trigger the findmy function again to continue pairing.

- 2. Power off (Findmy function is off). Hold the button for 3 seconds, release your hand on time, hear two beeps indicating it is powered off.
- 3. Enable learn more information query. Press the button two times rapidly and you will hear a confirmation sound, this operation will be displayed on the findmy app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.

4. Factory reset. Press the button 4 times rapidly and then hold it a fifth time until you hear a ringing chime.

A reset operation is required to enable the device to enter the pairing state again (synchronization of Findmy also requires simultaneous unbinding) and rebind the new Apple ID account.

Important tips:

1. When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WiFi and mobile. The first pairing may take a long time, please wait patiently. 2. Reset your item. 3. Repair with Findmy APP.
2. When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP. Your item Locator will be locked and cannot be paired to a new device.
3. The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption.

Regulatory Safety Information

Warning: The battery must be kept out of the reach of children. Due to chemical burns and potential esophageal perforation, swallowing may cause serious injury or death. If the child accidentally swallows the button battery, please call the rescue phone immediately and seek medical advice in time.

 
FCC **CE** **UKCA**
Made in China

使用说明

操作说明

1. 检查更新
要使用Apple Find My应用程序查找物品定位器,建议使用最新版本的iOS、iPad OS或macOS。

2. 开机
按一下按键,听到响声后表示开机,设备进入配对状态。



3. 添加设备

3.1 打开查找APP
在支持的iPhone或iPad上打开“查找”应用程序。

3.2 连接您的设备

步骤1.按照图示选择“物品”图标,然后点击“添加物品”。或者直接点击右上角的“+”。



步骤2.点击“其他支持的物品”。



步骤3.确保您的定位器靠近手机,然后等待系统配对,当您在系统弹窗看到“HB02”的时候,点击下面的“连接”按钮,根据弹窗提示填写设备名字和选择设备图标,然后点击“继续”,最后点击“完成”,您的定位器就设定了。



4. 产品功能介绍



- 寻找物品
- 查找物品定位器:点击“播放声音”,让您的物品定位器在附近时发出声音。
- 找到您的物品定位器的位置:您的物品定位器的最后一个已知位置将为您提供在设置过程中选择的表情符号出现在地图上,点击“路线”导航到最后一个已知位置。

WARNING

Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.

Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

The compatible battery type is CR2032. The nominal battery voltage: DC 3V

Ensure the batteries are installed correctly according to polarity(+ and -).

Do not mix old and new batteries, different brands types of batteries, such as alkaline, carbonzinc, or rechargeable batteries.

Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING: This product contains a button cell or coin battery.

Apple Find My网络提供了一种简单、安全的方式,可以使用iPhone、iPad、Mac上的Find My应用程序或Apple Watch上的查找项目应用程序查找兼容的个人项目。

要使用Apple Find My应用程序查找此项目,建议使用最新版本的iOS、iPad OS或macOS。Apple Watch上的“查找项目”应用程序需要最新版本的watchOS。

将Works with Apple徽章一起使用意味着产品的设计特别适用于微中标识的技术,并已获得产品制造商的认证,以满足Apple Find My网络产品规范和要求。苹果公司不对本设备的操作或本产品的使用或其是否符合安全和监管标准负责。

超出范围时查找物品
· 启用“遇到时通知”按钮,当您将物品定位器丢失,并且它不再在您的设备范围内时,您将收到通知。
· 启用“找到时通知”切换按钮,当您的物品定位器另一个启用“查找”的设备看到时,您将收到其更新位置的通知。
注意:“找到时通知”只能在您的物品定位器超出范围时激活。



当您的物品丢失时
- 在“丢失模式”下,点击“启用”,将弹出一个详细说明丢失模式的弹窗,选项卡“继续”。您可以输入您的电话号码或电子邮件地址,然后点击“下一步”。
- 您可以输入和可能找到您定位器的人共享的消息。
- 点击“启用”以启用“丢失模式”。注意:启用“丢失模式”时,会自动启用“找到时通知”。
注意:启用“丢失模式”后,您的物品定位器将被锁定,无法与新设备配对。



删除并重置您的物品定位器
· 确保“丢失模式”已禁用,点击“移除物品”选项卡,将打开摘要,点击“删除”进行确认。
· 成功从APP中移除物品定位器后,快速按一下物品定位器的功能键四次,然后按住第五次直到听到铃声。
· 物品定位器现在已重置并准备与新设备配对。

如何更换电池:
· 用开壳工具在物品定位器侧面的小缝隙处小心地打开外壳。
· 用新的CR2032 3V电池更换电池(正极向上)。
· 小心合上物品定位器外壳。

按键功能:
1.开机(Find My功能打开)。
按一下按钮一次即开机,此时会响起一声铃声,表明其已开机。如果产品未配对,将在3分钟内自动关机。
2.关闭电源(Find My功能关闭)。
按住设备按钮三秒时间准时放手,当听到两声蜂鸣声,表示它已关机。
3.启用了解更多信息查询。
快速按下按钮两次,您将听到确认声。此操作将显示在Find My应用程序上,以指导获取设备的人获取设备信息,例如所有者的联系信息(如果应用程序上的物品设置为丢失模式)和设备的序列号。
4.恢复出厂设置(在本地重置设备并将其恢复到配对状态)。
快速按下按钮四次,然后按住第五次,直到听到铃声表示设备已经恢复出厂设置,需要恢复出厂设置才能使设备再次进入配对状态(同步Find My也需要同时解除绑定)并重新绑定新的Apple ID帐户。



监护安全信息
警告:务必把电池放在儿童接触不到的地方,由于化学灼伤和潜在的食道穿孔,吞咽可能会导致严重的伤害或者死亡,如果小孩不慎误吞了纽扣电池,请立即拨打急救电话并及时就医。

