

 


singing machine®

creating Joy through music™

SML668G/SML668W

INSTRUCTION MANUAL/ MANUAL DE INSTRUCCIONES/
MODE D'EMPLOI

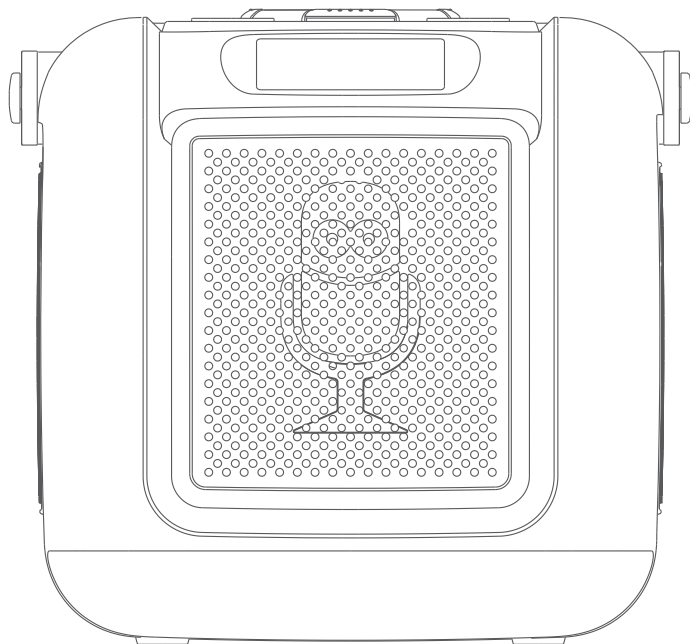

www.singingmachine.com

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

The Singing Machine® es marca registrada de The Singing Machine Co., Inc.

The Singing Machine® est une marque déposée de The Singing Machine Co., Inc.

Warnings



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
The Caution marking is located on the bottom panel.

 **DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 **ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the rear of the unit.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

 
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

Included

Please make sure the following items are included.

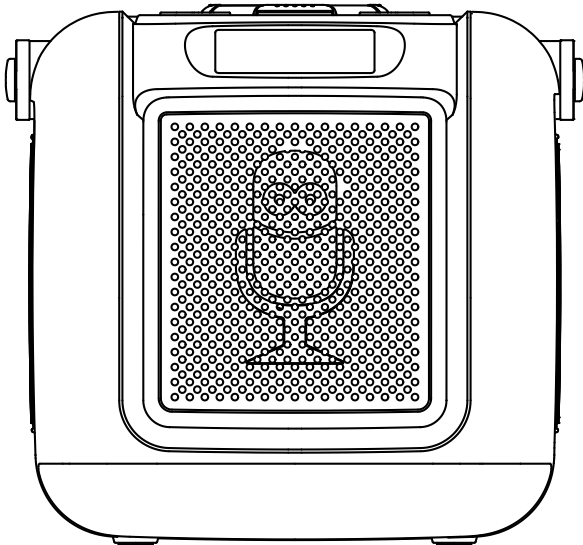


Main Unit

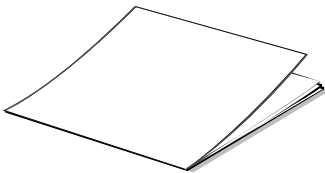 

Manual




 USB Charging Cable




Wireless
Microphone

 Location of Controls (Front)

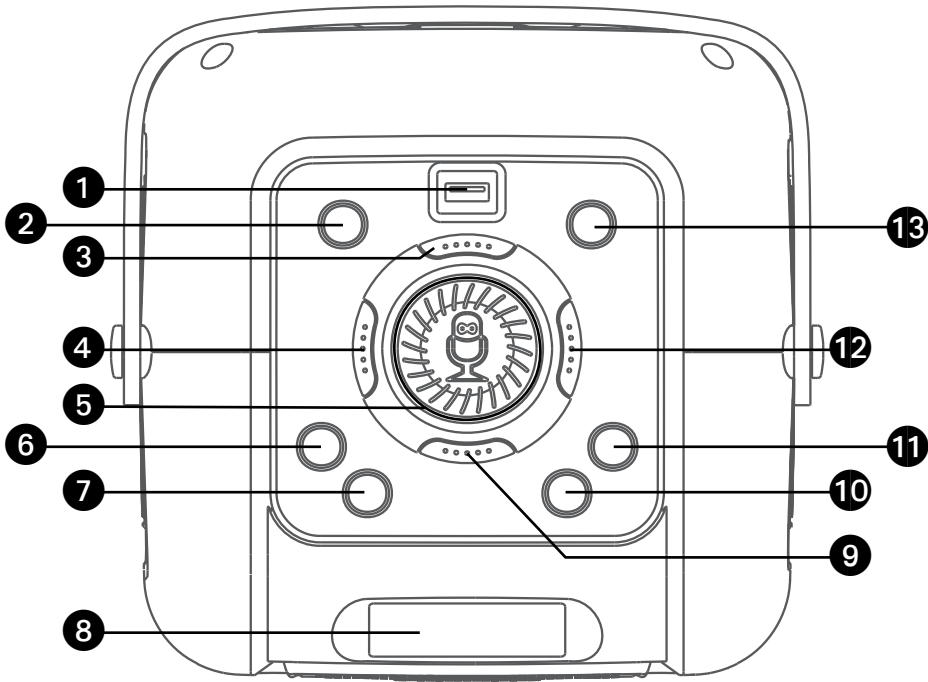

- | | |
|--|---|
| 1. USB Port | 8. Display |
| 2.  (Bluetooth)/VOCALS OFF Button | 9.  (PLAY/PAUSE/STOP) Button |
| 3. REPEAT Button | 10.  (Voice effects down) Button |
| 4.  (Skip) Button | 11.  (Voice effects up) button |
| 5. Music Volume/Mic Volume control | 12.  (Skip) Button |
| 6. FUNCTION Button | 13. RECORD Button |
| 7.  (ON/STANDBY/LIGHTS) Button | |

 Location of Controls (Rear)

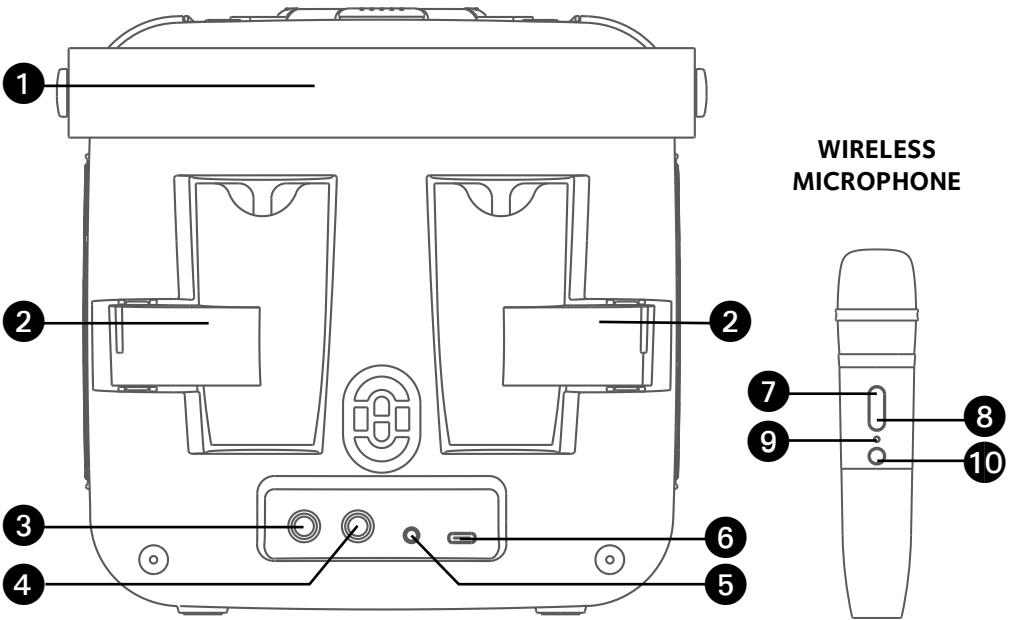


- | | |
|----------------------------|---------------------------------|
| 1. Handle | 6. Type-C USB Jack |
| 2. Extendable MIC holders | 7. (Mic Volume +) button |
| 3. MIC 1 Jack | 8. (Mic Volume -) button |
| 4. MIC 2 Jack | 9. Wireless mic power indicator |
| 5. AUX IN Jack/*Reset hole | 10. Wireles mic power button |

* If this device doesn't work, you can reset the device using the pin.

Rechargeable Battery

This unit comes with a built-in rechargeable battery pack that will allow the unit to be used without being connected to AC power. The rechargeable battery pack must NOT be serviced/replaced by the user.

 To optimize the battery life, we recommend to charge the unit once a month. When the battery indicator on the display flashes slowly, recharge the unit by following the steps below:

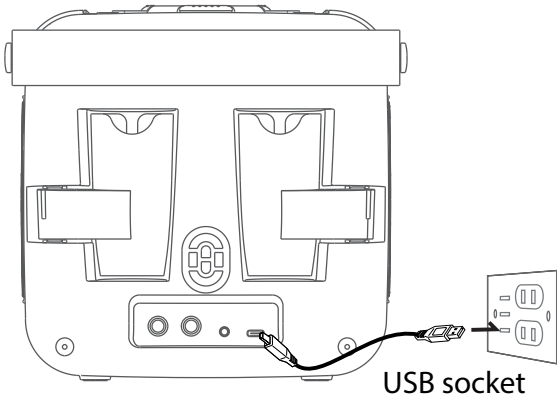

- 1 Insert the USB cable (included) into USB Type-C port on rear of the unit. Plug the other end of the cable into computer USB port or other USB charging device (not included).
- 2 Allow the unit to charge for approximately 4 hours for a full charge. When fully charged, the battery indicator will turn off.
- 3 Disconnect the USB cable and the fully charged unit can be used for approximately 4 hours depending on the function chosen.

NOTE: This unit is operated by an internal chargeable lithium battery. The unit cannot be turned on if the battery level is too low. It's suggested for the user to turn the unit for about 5 mins to charge up the battery. (This will not fully charge the battery, see above for charging time required).



ATTENTION: The sound volume will adjust automatically when the battery is not full.

 
Recycling and Disposal Information:

- Do not dispose of electronic devices or any of their components. (especially batteries and LCD displays) in your municipal trash collection.
- Consult your local waste management authority or a recycling organization like Earth911.com to find an electronics recycling facility in your area.

CAUTION: Rechargeable batteries must be recycled or disposed of properly.


Connection

Charging the unit

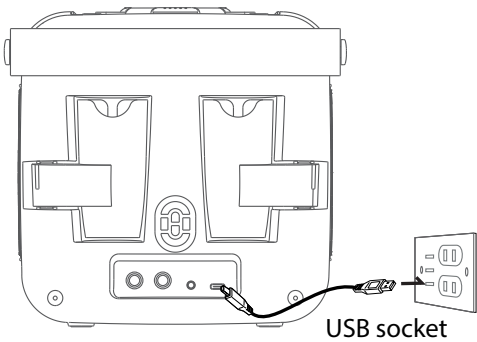

Plug the USB cable (included) into the USB Type-C port on the back of the device. Plug the other end of the cable into a conveniently located DC5V 1A socket.

 
Connecting to AUX IN Jack

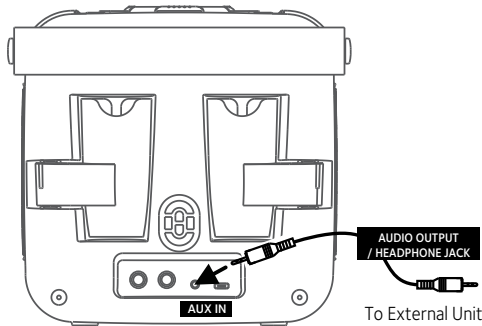

Connect an external device by using an appropriate cable (3.5mm audio cable not included) as shown.

NOTE:
See page E14 to select and use the Aux In function.

 
Lights Mode

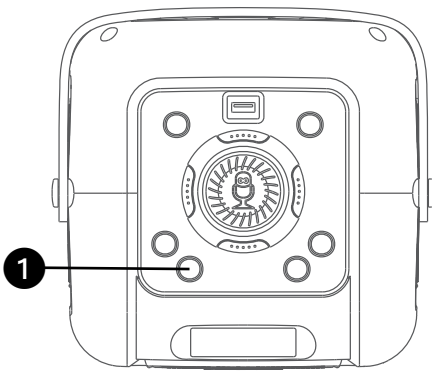

There are 3 built-in light modes. Repeatedly press  button to switch between lighting effects.

Connection

 Connecting the Wireless Microphone(s)

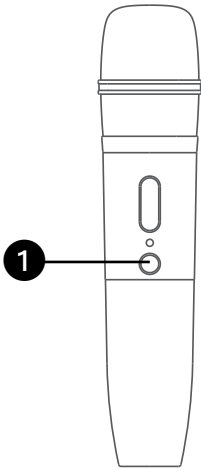


Press the **⏻/✱** button to turn the unit on. Press the Wireless Mic's **⏻ 1** button to turn on the mic. The Mic indicator will blink. It will be light solid when connected.

NOTES:

- Working distance of up to 30 feet/10 meters in open space.
- If there is no audio input to the unit for 20 minutes, the wireless mics connection will automatically turn off. Turn on the unit and press the **⏻** button to reactivate the connection.

 Changing the Wireless Microphone's Battery

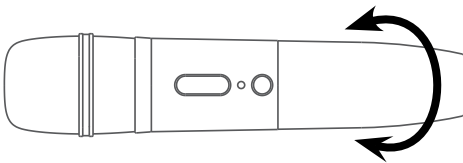

When the wireless mic batteries are low the battery indicator will flash. Change the batteries as follows:

- 1 Unscrew the bottom of the wireless microphone.
- 2 Replace the batteries with 2 x "AA" size/LR6 battery.
- 3 Replace the bottom of the wireless microphone and screw it back on.

 
Battery Precautions

The precautions below should be followed when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Rechargeable batteries are to be removed from the product before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the product.
9. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Connection

Connecting the optional wired Microphone

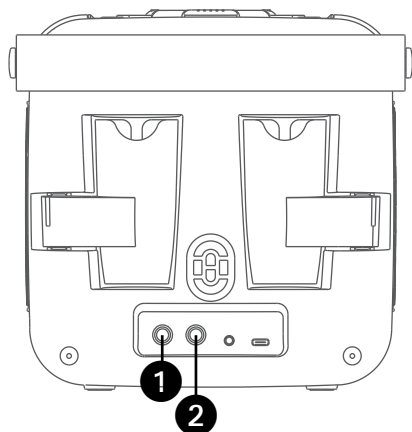

Connect the wired microphone (not included) into Mic jack ❶ or ❷ (when desired); the corresponding mic Indicator light will blink.

 
Energy Saving (Auto Power System-APS)

This unit will automatically turn off after 20 minutes of inactivity. APS is for energy saving purposes.

The unit can be resumed to turn on by pressing the **ON/STANDBY** button once. APS is for energy saving purposes.


Operation

Playing Songs from the USB

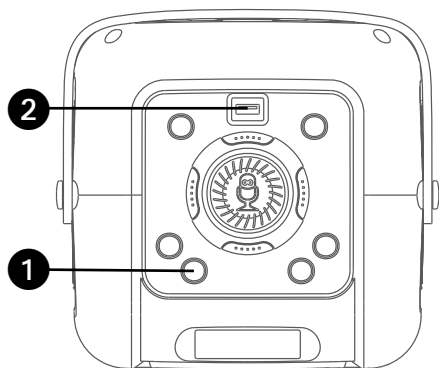

1 Connect the unit as described previously. Press the  button to turn the unit on.

 2 Insert a USB flash drive containing MP3 files into the USB port on the unit. We have a large selection of karaoke music available for download through our Karaoke Store.

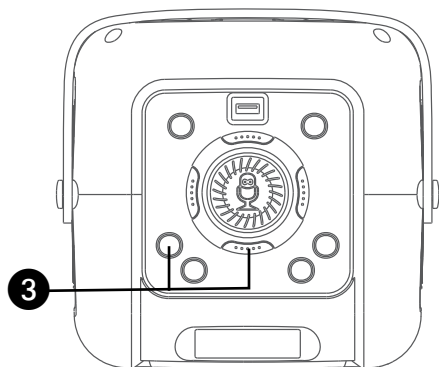


3 Repeatedly press the **FUNC** button to select the USB mode. "USB" will appear in the display.

Press the  button to start the playback. Press the  button during playback to pause the song. Press and hold the  button to stop the playback.

NOTE:

 
- The USB mode cannot be played until the flash drive is inserted.

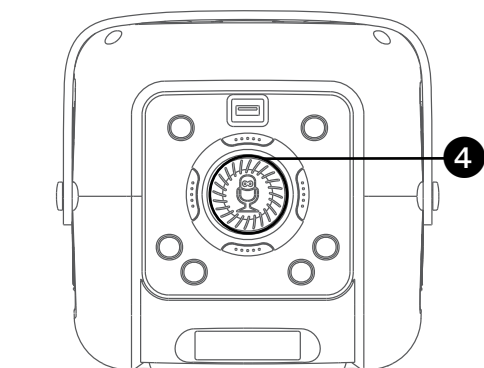

4 Adjust the volume to a comfortable level using the **MUSIC VOLUME/MIC VOLUME** control.


Operation

 Playing Songs from the USB (Continued)

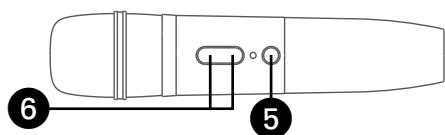

5

 Press the  button on the microphone to turn on the mic.

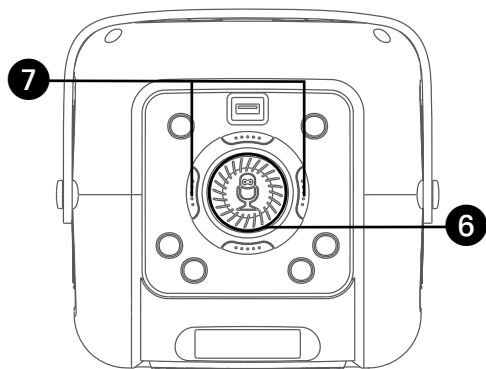


6

Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the  or  buttons on mic as desired. Increasing this control will increase the volume of the microphone.

7

 SKIP: Advance or go back one track by pressing the  or  button. You can also skip forward or backward 10 files/tracks press and hold the  or  button.

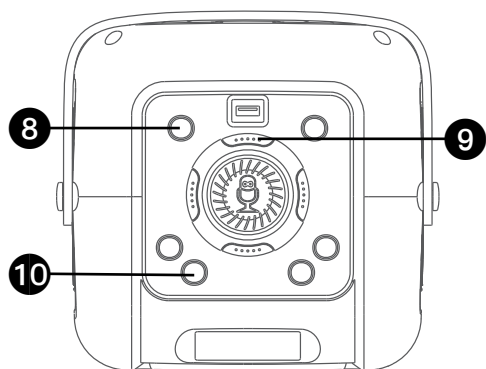

8

Press the  or  button to select a voice effect.

9

 
REPEAT: During playback, press the **REPEAT** button once during playback, the current track will be repeated. Press the **REPEAT** button twice, all MP3 tracks inside the current folder will be repeated continuously. Press the **REPEAT** button three times, all MP3 tracks will be repeatedly. To stop repeat function by press the **REPEAT** button again.

10

Press and hold the  button to turn the unit off.

Operation

Using a Bluetooth Device

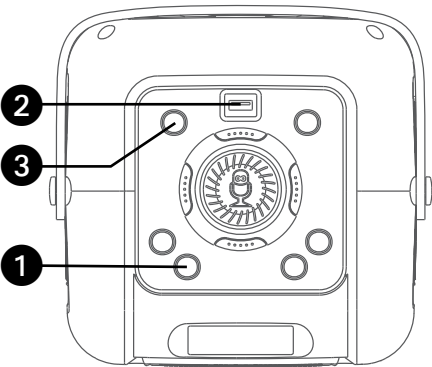


1 Connect the unit as described previously. Press the button to turn the unit on.

2 Press the /VOCALS OFF button or repeatedly press the **FUNC** button to select the Bluetooth mode; “bt” will appear in the display.

3 The unit automatically searches and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

 NOTE: You can also press and hold the /VOCALS OFF button to disconnect any paired devices in order to pair another device.

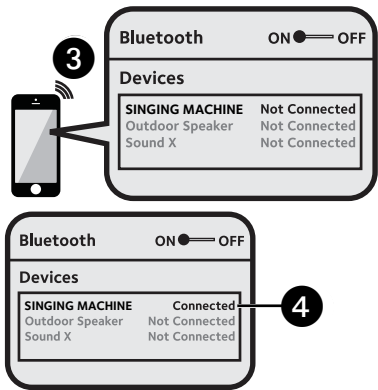

4 Turn on your device’s Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select “SINGING MACHINE” from the device results on the Bluetooth menu.

NOTE: Also refer to the user manual of your Bluetooth device for detailed instructions.

 
5 A chime will sound indicating pairing was successful.

NOTES:


- If your Bluetooth prompts you for a passcode during the pairing process, please enter “0000” to connect.
- On some Bluetooth devices, once pairing is completed, select your Bluetooth device as “Use as Audio Device” or similar.
- If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 feet/10 meters.

Operation

Using a Bluetooth Device (Continued)

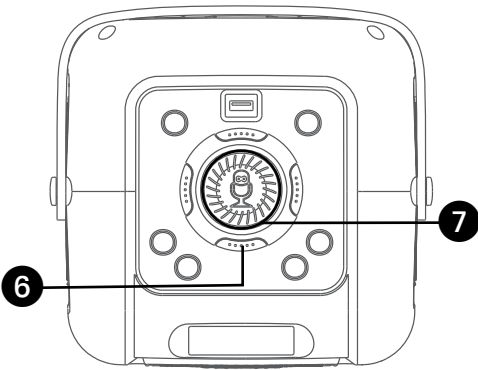


6 To control your Bluetooth device from this unit, press the ►||/■ button to start playback (music app must be open). Press the ►||/■ button during playback to pause the song.

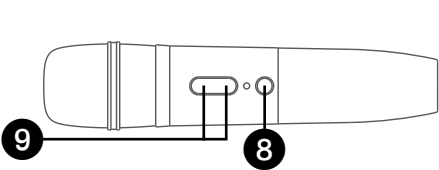 

7 Adjust the volume to a comfortable level using the **MUSIC VOLUME/MIC VOLUME** control on this unit as well as the Volume on your Bluetooth device.

 8 Press the ⏻ button on the microphone to turn on the mic.

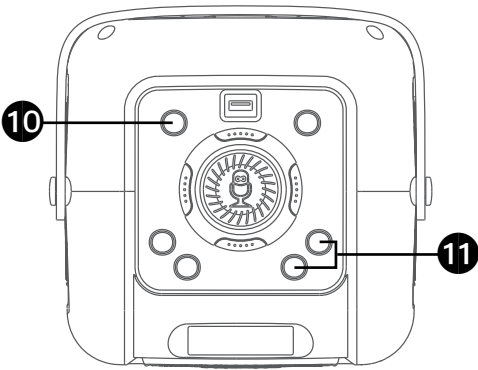

9 Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the 🔊+ or 🔊- buttons on mic as desired. Increasing this control will increase the volume of the microphone.

 
10 **VOCALS:** To sing without the lead singer on the recording, press and hold the 🗑️/**VOCALS OFF** button. To resume the lead singer, press and hold the 🗑️/**VOCALS OFF** button again.

NOTE: The Vocal off function might not work perfectly. It is song dependent.

11 Press the 🗑️▲ or 🗑️▼ button to select a voice effect.

Operation

Using a Bluetooth Device (Continued)

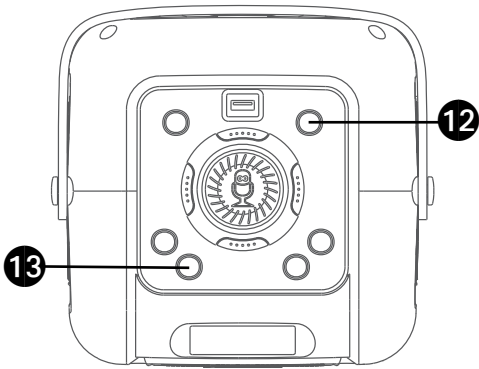

12 RECORD YOUR VOCAL PERFORMANCE:

To record your singing as well as the music, press the **REC** button; recording will begin and the record indicator will start flashing.

When done recording, press the **REC** button again; the Record indicator will turn off.

 
NOTE:

- The recorded audio file will record onto the USB drive.

13 Press and hold the button to turn the unit off.

Operation

Using the AUX IN Jack

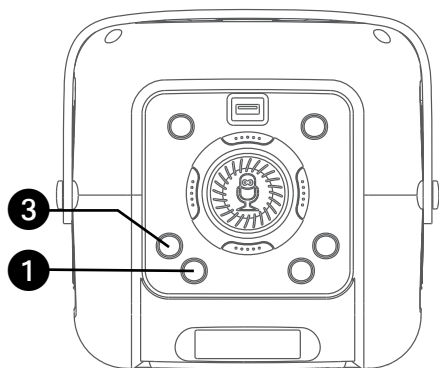


1 Connect the unit as described previously. Press the **⏻/⌘** button to turn the unit on.


2 Connect the external unit to the **AUX IN Jack** on the rear of this unit. Connecting an external unit will allow the audio to be played through your Singing Machine.

NOTES:

 - It is highly recommended to set the volume on the external unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible to perform on this unit when using an external device.

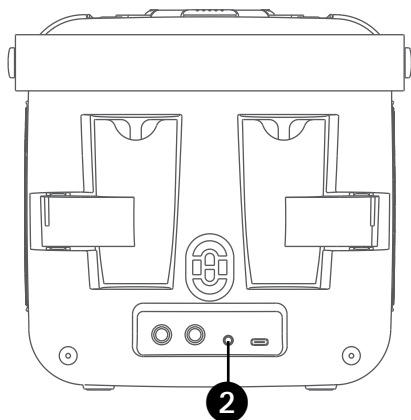

 
3 Repeatedly press the **FUNC** button to select the AUX IN mode; "AU" will appear in the display.

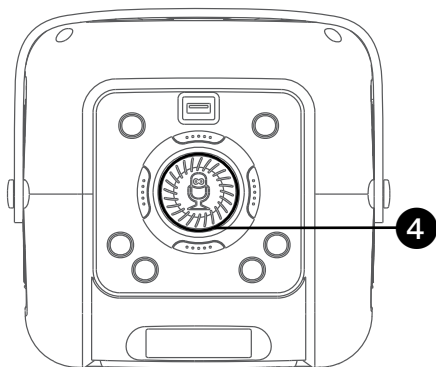

4 Adjust the volume to a comfortable level using the **MUSIC VOLUME/MIC VOLUME** control on this unit as well as the Volume on your Bluetooth device.


Operation

 Using the AUX IN Jack (Continued)

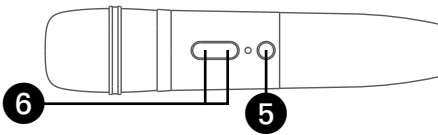

5 Press the  button on the microphone to turn on the mic.

 6 Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the  or  buttons on mic as desired. Increasing this control will increase the volume of the microphone.

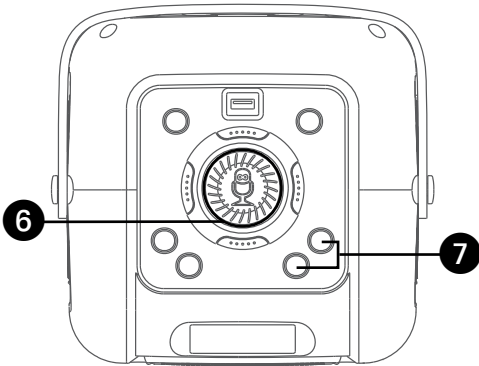

7 Press the ▲ or ▼ button to select a voice effect.

 
8 **RECORD YOUR VOCAL PERFORMANCE:**

To record your singing as well as the music, press the **REC** button; recording will begin and the record indicator will start flashing.

When done recording, press the **REC** button again; the Record indicator will turn off.

NOTE:

- The recorded audio file will record onto the USB drive.

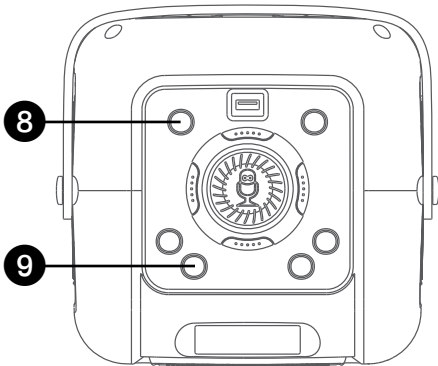

9 Press and hold the  button to turn the unit off.

Operation

Sound Effects

Name	Effect Description
Basic Pitch	Silky smooth & balanced reverb & echo; a great all around go-to vocal enhancer
Alt-Rock	Queue up your fav alternative & rock tunes with this crowd-pleasing vocal effect
Reggae-Tone	Enhanced echo makes voices shine especially while singing reggae and reggaeton
Grunge	Unmistakably gritty, great for rock, alt, pop and just making your voice sound cool
Hip-Hop	Big room echo & reverb, great for hip-hop, rap and R&B
Oldtown Rd	A touch of echo with added vocal boost that's great for belting out country tunes
Up to Mars	Big echo, good for a wide range of songs from ballads to funk
Pitch Tune C	Pitch Tune like the pros with this pitch enhancing effect for singing in the key of C
Pitch Tune D	Pitch Tune & enhancing effect for singing in the key of D
Pitch Tune E	Pitch Tune & enhancing effect for singing in the key of E
Pitch Tune Chromatic	Pitch Tune & enhancing effect (Chromatic Scale)
Nosebleed Seats	Did someone say sold out stadium shows?
Radio	Great for singing 90's Rock or for making big announcements
Doubling	Classic & versatile doubling effect
Doubling Tuned	Voice doubling with pitch tuning enhancement
Radio Tuned	Classic radio effect with pitch tuning enhancement
Squeeze	A fun, voice morphing effect that tweaks voices to a higher pitch
Diva	Add a sassy touch to voices
Voice Drop	Deepens voices for a fun effect
Deep Deep	Tunes voices deep & low
Robot	Machiney & robotic
Chipmunk	Mousey, squeaky fun voice effect

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the  button to turn unit on.
- The unit has no battery left. Charge the unit.
- Confirm that the USB jack is connected securely to the back of the unit.
- Connect the unit to a different outlet.
- The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply restart the product to resume normal operation by following the instruction manual. In the event the function does not resume, please use the machine in another part of the home.

No Sound – General

- **Master Volume** is set to minimum; raise volume.
- Correct Function was not selected; press the **FUNC** button to change the function.
- If using an external device, raise the volume.

No sound from the microphone

- The wireless microphone has no battery left. Change the batteries.
- Make sure microphone is turned on.
- MIC VOLUME is set to minimum; raise volume.

The Bluetooth device cannot be paired or connected with the unit

- Ensure any other Bluetooth devices are turned off to avoid accidental pairing.
- You have not activated the Bluetooth function of your device; see page **E11** or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press and hold the /VOCALS OFF button to restart pairing.

The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set too low or muted; raise as desired.
- Make sure your music's application is open.

Specifications

AUDIO

OUTPUT POWER (MAXIMUM)..... 10 Watts (RMS)
OUTPUT IMPEDANCE 4 Ohms

USB

Format.....FAT32
Maximum Capacity.....32GB

BLUETOOTH

Bluetooth Version V5.0
Working Distance..... Up to 30 feet/10 meters measured in open space

CONNECTING JACKS

Microphone 6.3mm
AUX IN SECTION3.5 mm Stereo Headphone Jack

GENERAL

PowerType-C USB 5VDC, 1A
Dimensions 7.8 x 7.8 x 9.7 inches (19.8 x 19.8 x 24.6cm)
Weight 1.4 Lbs (3.1 kgs)
Wireless Microphone 2.4GHz band Dynamic Microphone

Specifications are subject to change without notice

 **Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Advertencias

	PRECAUCIÓN RIESGO DE DESCARGA ELÉCTRICA. NO ABRIR	
PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGAS ELÉCTRICAS, NO quite la cubierta (ni la tapa posterior) NO HAY PIEZAS REPARABLES POR EL USUARIO DENTRO. DERIVE LAS REPARACIONES A PERSONAL DE SERVICIO CALIFICADO. Las marcas de Precaución se ubican en el panel inferior.		



TENSIÓN PELIGROSA: La luz intermitente con símbolo de flecha dentro de un triángulo pretende alertar al usuario de la presencia de tensión peligrosa no aislada, dentro del paquete del producto, que puede ser de magnitud suficiente para constituir un riesgo de descarga eléctrica para las personas.



ATENCIÓN: El signo de exclamación dentro de un triángulo pretende alertar al usuario de la presencia de instrucciones importantes de operación y mantenimiento (reparaciones) en el material que acompaña a este producto.

ADVERTENCIA DE GOTEÓ: Este producto no se podrá exponer a goteo o salpicaduras, y no se colocará ningún objeto lleno con líquidos, como jarrones, encima del producto.

ADVERTENCIA DE VENTILACIÓN: La ventilación normal del producto no se bloqueará si se le da el uso previsto.

PRECAUCIÓN: PARA EVITAR DESCARGAS ELÉCTRICAS, INSERTE COMPLETAMENTE UNA HOJA ANCHA DEL ENCHUFE A LA RANURA ANCHA.

ADVERTENCIA: PARA EVITAR INCENDIOS O PELIGROS DE DESCARGA, NO EXPONGA ESTA UNIDAD A LA LLUVIA O HUMEDAD.

Advertencia: Los cambios o las modificaciones a esta unidad que no fueron expresamente aprobados por la parte responsable del cumplimiento de las normas pueden anular la autoridad del usuario para operar el equipo.

AVISO DE LA FCC: Este equipo puede generar o usar energía de radio frecuencia. Los cambios o modificaciones realizados en el aparato pueden provocar interferencia perjudicial, a menos que dichas modificaciones estén autorizadas en el manual de instrucciones. El usuario puede perder toda autoridad para operar el equipo si realiza cambios o modificaciones sin autorización.

Este aparato cumple con la parte 15 de las Normas de la FCC. El funcionamiento está sujeto a las dos condiciones que figuran a continuación: (1) Es probable que no cause interferencia perjudicial y (2) deberá aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda llegar a causar un funcionamiento indeseado.

NOTA: Este equipo fue probado y se concluyó que cumple con los límites establecidos para los dispositivos digitales Clase B, de acuerdo con el Apartado 15 de las normas de la FCC. Estos límites fueron pensados para proporcionar protección razonable ante la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede emitir energía de radio frecuencia y, si no se lo instala y utiliza de conformidad con las instrucciones, puede causar interferencia perjudicial a las comunicaciones radiales. No obstante, no existe ninguna garantía de que no se produzca interferencia en una instalación en particular. Si este equipo provoca interferencia perjudicial a la recepción de radio o televisión, lo cual puede determinarse apagando y encendiendo el equipo, el usuario puede intentar corregir la interferencia de alguna/s de las siguientes maneras:

- Reoriente la antena receptora o ubíquela en otro lugar.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente de un circuito distinto al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado de radio y televisión para que lo asesore.

La información de clasificación se encuentra en la parte posterior de la unidad.

Declaraciones de advertencia de exposición a RF:

Este equipo cumple con los límites de exposición a la radiación de la FCC establecidos para ambiente incontrolado.

Información importante sobre seguridad

1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Preste atención a todas las advertencias.
4. Siga todas las instrucciones.
5. No utilice este artefacto cerca del agua.
6. Límpielo únicamente con un paño seco.
7. No obstruya las aberturas para ventilación. Instálelo de acuerdo con las instrucciones del fabricante.
8. No instale cerca de fuentes de calor, como radiadores, rejillas de calefacción, estufas u otros aparatos (incluso amplificadores) que produzcan calor.
9. No desafíe el fin de seguridad del enchufe polarizado o de conexión a tierra. Un enchufe polarizado tiene dos clavijas y una es más ancha que la otra. El enchufe de conexión a tierra tiene dos clavijas, y una tercera punta a tierra. La clavija ancha o la tercera punta se suministran para su seguridad. Si el enchufe suministrado no coincide con su tomacorriente, consulte con un electricista para reemplazar el tomacorriente obsoleto.
10. Evite pisar o apretar el cable de alimentación, especialmente en los enchufes, tomacorrientes y en el punto por donde salen del artefacto.
11. Utilice sólo los complementos y accesorios especificados por el fabricante.
12. Utilice la unidad sólo con el carro, soporte, trípode, repisa o mesa recomendados por el fabricante, o que se vendan junto con el

producto. Cuando se utiliza un carro, tenga cuidado cuando mueva el carro y artefacto junto a para evitar lesiones producidas por la caída del producto.

ADVERTENCIA SOBRE EL CARRO PORTÁTIL (símbolo previsto por RETAC)



13. Desenchufe este artefacto durante las tormentas eléctricas o cuando no se lo utilice durante períodos prolongados.
14. Derive todas las reparaciones al personal de reparaciones calificado. Es necesario reparar el artefacto cuando se encuentra dañado; por ejemplo, cuando el cable de suministro de energía o el enchufe están dañados, cuando se derrama líquido sobre la unidad o caen objetos dentro del mismo, cuando el producto ha estado expuesto a la lluvia o a la humedad, cuando no funciona con normalidad o cuando se ha caído.
15. **ADVERTENCIA:** Para reducir el riesgo de incendio o descarga eléctrica, no exponga este artefacto a la lluvia o la humedad. No coloque objetos llenos de agua, como jarrones, sobre el aparato.
16. El enchufe de conexión de CA se utiliza como dispositivo de desconexión eléctrica y deberá estar siempre accesible y en funcionamiento durante el uso previsto. Para desconectar completamente el aparato de la electricidad, el enchufe de conexión deberá quitarse por completo del tomacorriente de CA.
17. **PRECAUCIÓN:** Para reducir el riesgo de incendio o explosión no exponga las baterías al calor excesivo, como al rayo del sol, fuego u otras fuentes de calor.

Mises en Garde

	Mises en Garde RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR	
MISE EN GARDE: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE PAS RETIRER LE COUVERCLE (OU LE DOS DU BÔÎTIER). AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. POUR TOUTE RÉPARATION, CONTACTER UN TECHNICIEN COMPÉTENT.		
La mention Mise en garde se trouve sur le panneau inférieur.		



TENSION DANGEREUSE : Le symbole de l'éclair dans un triangle équilatéral a pour but d'avertir l'utilisateur du danger présenté par des pièces non isolées à l'intérieur de l'appareil, dont la tension est suffisante pour provoquer des décharges électriques dangereuses.



ATTENTION: Le point d'exclamation à l'intérieur d'un triangle équilatéral a pour but d'avertir l'utilisateur de la présence de consignes importantes sur le fonctionnement et l'entretien (réparation) de l'appareil dans la documentation accompagnant ce produit.

AVERTISSEMENT D'ÉGOUTTEMENT : Ce produit ne doit pas être exposé à l'égouttement ni aux éclaboussures et aucun objet rempli de liquide, tel qu'un vase, ne doit être placé sur le produit.

AVERTISSEMENT D'AÉRATION : L'aération normale du produit ne doit pas être entravée pour l'usage prévu.

MISE EN GARDE: AFIN D'ÉVITER TOUT RISQUE D'ÉLECTROCUTION, JUMELER LA LARGE BROCHE DE LA FICHE À LA FENTE LA PLUS LARGE ET L'INSÉRER COMPLÈTEMENT.

AVERTISSEMENT: AFIN D'ENRAVER TOUT RISQUE D'ÉLECTROCUTION OU D'INCENDIE, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ

Avertissement : Tout changement ou modification apporté à cet appareil sans l'approbation expresse de la partie responsable de sa conformité risque d'annuler le droit de l'utilisateur à se servir de cet équipement.

MISE EN GARDE DE LA FCC: Cet appareil peut générer ou utiliser des fréquences radio. Les modifications ou changements peuvent causer des interférences nuisibles, à moins que ces modifications ne soient approuvées expressément dans ce mode d'emploi. L'utilisateur pourrait perdre l'autorité de faire fonctionner cet équipement en cas de modification non autorisée. Cet appareil répond aux exigences de l'alinéa 15 des réglementations FCC. Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne peut pas causer d'interférence nuisible et 2), Cet appareil doit accepter toute interférence reçue, incluant les interférences qui pourraient affecter son fonctionnement.

REMARQUE: Suite aux tests effectués, il est établi que cet appareil numérique de Classe B répond aux exigences de l'alinéa 15 des réglementations FCC. Ces normes sont élaborées pour vous protéger contre toute interférence nuisible en installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si une interférence se produisait en réception radio et/ou de télédiffusion, lors de l'activation et la désactivation de l'appareil, nous vous recommandons

- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'appareil du récepteur.
- Branchez l'appareil à une prise de courant différente de celle utilisée par le récepteur.
- En cas de problème, contactez le vendeur ou un technicien spécialisé en réception radio/TV.

Le régime nominal est indiqué dans la partie dos de l'appareil.

Énoncés d'avertissement d'exposition au RF :

Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC définies pour un environnement non contrôlé.

Renseignements Importants de Sécurité

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez toutes les mises en garde.
4. Suivez toutes les consignes.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. Ne bloquez pas les ouvertures d'aération. Installez conformément selon les consignes du fabricant.
8. N'installez pas à proximité de sources de chaleur telles que les radiateurs, registres d'air chaud, cuisinières, ou autres appareils (notamment des amplificateurs) produisant de la chaleur.
9. Ne nuisez pas à la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée est dotée de deux broches dont l'une est plus large que l'autre. Une fiche de mise à la terre est dotée de deux broches et d'une troisième broche de mise à la terre. La broche la plus large ou la troisième broche est conçue pour votre sécurité. Lorsque la broche fournie ne convient pas à la prise, consultez un électricien afin de remplacer la prise désuète.
10. Protégez le cordon d'alimentation afin que personne ne marche dessus ou le pince, particulièrement au niveau des broches, de la prise et du point où ils sortent de l'appareil.
11. Utilisez seulement les accessoires spécifiés par le fabricant.

12. Utilisez seulement avec un chariot, une sellette, un trépied, un support ou une table. Lorsqu'un chariot est utilisé, prenez garde de ne pas déplacer la combinaison chariot/appareil pour éviter toute blessure causée par un renversement.
13. Débranchez cet appareil durant un orage ou lorsqu'il n'est pas utilisé pendant de longues périodes.
14. Confiez toutes les réparations à un technicien compétent. La réparation s'avère nécessaire lorsque l'appareil a été endommagé, par exemple, si le cordon d'alimentation ou la fiche a été endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil, ou si l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été échappé.
15. **AVERTISSEMENT :** Pour réduire le risque d'électrocution, évitez d'exposer l'appareil à la pluie ou à l'humidité. Ne déposez pas d'objets remplis d'eau, tels qu'un vase, sur l'appareil.
16. La fiche de secteur c.a. est utilisée pour débrancher l'appareil et doit être facilement accessible et utilisable durant l'usage prévu. Afin de couper complètement l'alimentation de l'appareil, la fiche de secteur doit être complètement débranchée de la prise c.a.
17. **MISE EN GARDE :** Afin de réduire le risque d'incendie ou d'explosion, n'exposez pas les piles à une source de chaleur excessive telle que le soleil, le feu ou autre.

AVERTISSEMENT RELATIF AU CHARIOT PORTATIF
(Symbole fourni par IEC)



Visit Our Website: www.singingmachine.com
Visite nuestro sitio web: www.singingmachine.com
Visitez notre site Internet au: www.singingmachine.com

Copyright © 2023 All Rights Reserved.
Copyright © 2023 Todos los derechos reservados.
Droit d'auteur © 2023 Tous Droits Réservés.

The Responsible Party
Company Name : The Singing Machine Company, Inc.
Address : 6301 NW 5th Way, Suite 2900,
Fort Lauderdale FL33309, USA
Telephone : 1-866-670-6888
Website : www.singingmachine.com

PRINTED IN CHINA
IMPRESO EN CHINA
IMPRIMÉ EN CHINE
668-2305-EFS01-US